



Illustrated Parts List

Model Series

09K500

TYPE NUMBER
1251.

TABLE OF CONTENTS


Air Cleaner	5
Blower Housing/Shrouds	6
Brake	5
Camshaft	3
Carburetor	4
Controls	5
Crankcase Cover/Sump	3
Crankshaft	3
Cylinder	2
Cylinder Head	2
Exhaust System	4
Flywheel	6
Fuel Supply	4
Gasket Set - Engine	3
Gasket Set - Valve	3
Governor Spring	5
Ignition	5
Lubrication	2
Piston/Rings/Connecting Rod	3
Rewind Starter	6
Warning Label	2




PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

1058 OPERATOR'S MANUAL

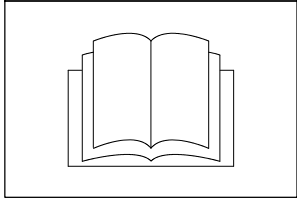


1330 REPAIR MANUAL

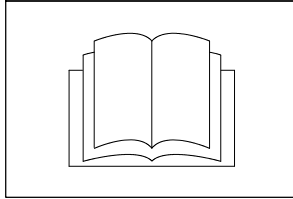






1319 WARNING LABEL

WARNING	
	Read and follow Operating Instructions before running engine.
	Gasoline is flammable. Allow engine to cool at least 2 minutes before refueling.
	Engines emit carbon monoxide, DO NOT run in enclosed area.
	Muffler area temperature may exceed 150°F. Do not touch hot parts.


REQUIRED when replacing parts with warning labels affixed.

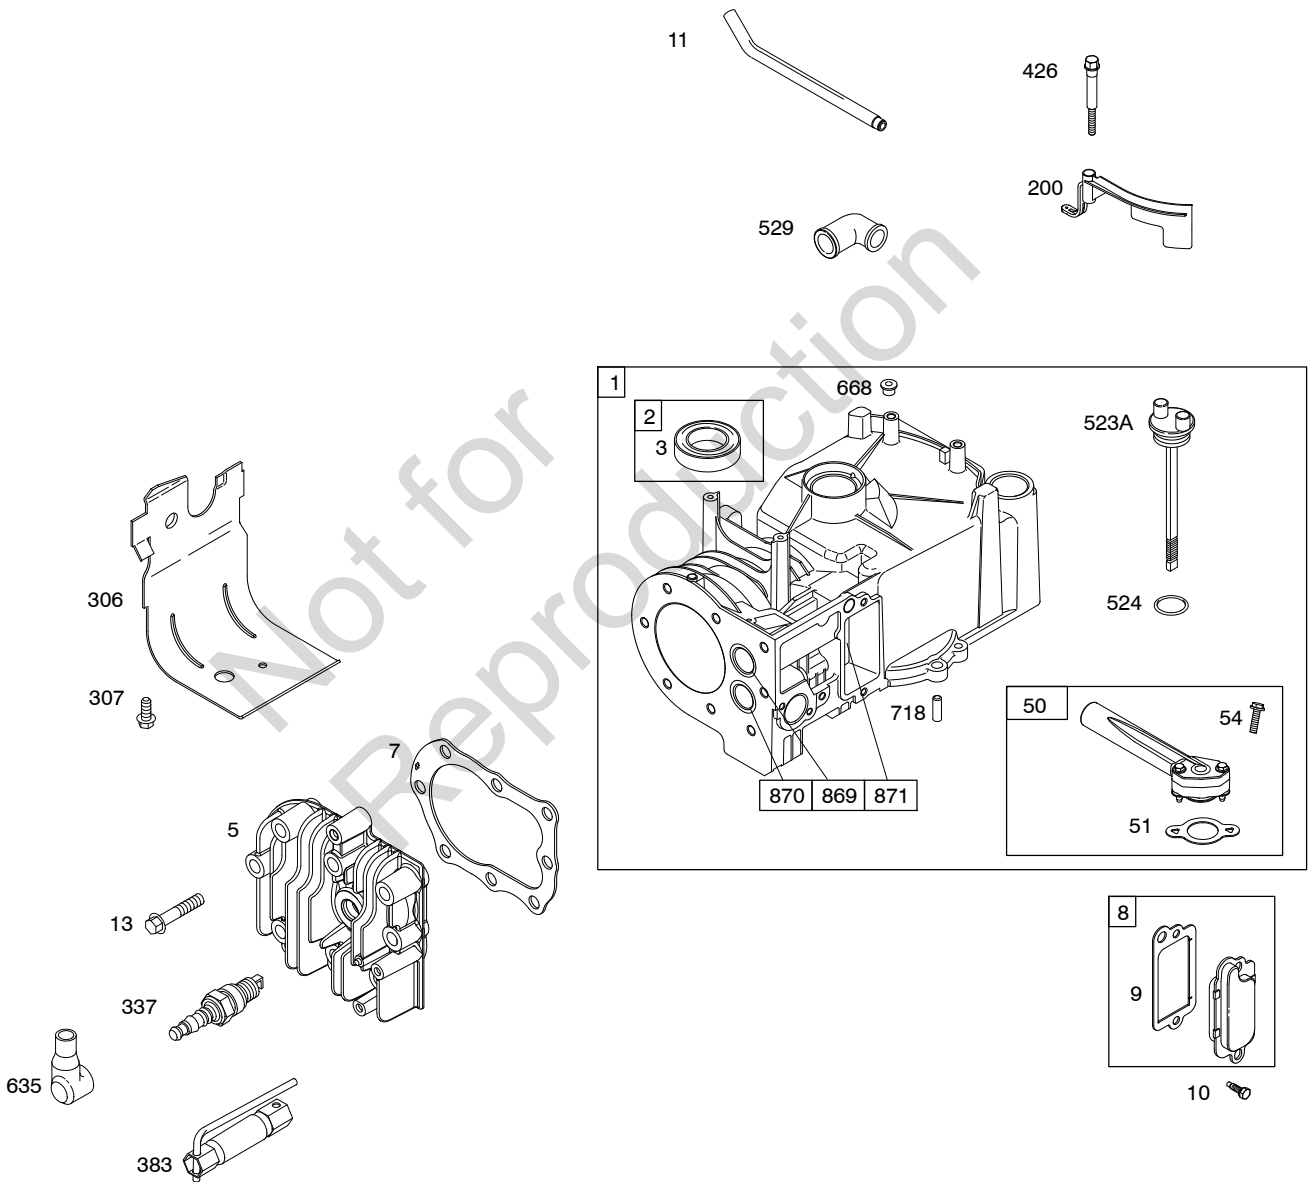


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 10117-2 Assemblies include all parts shown in frames. 09/29/2010

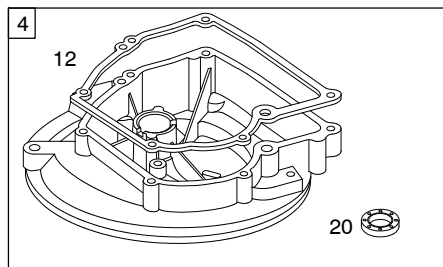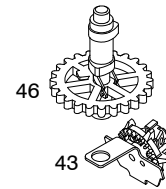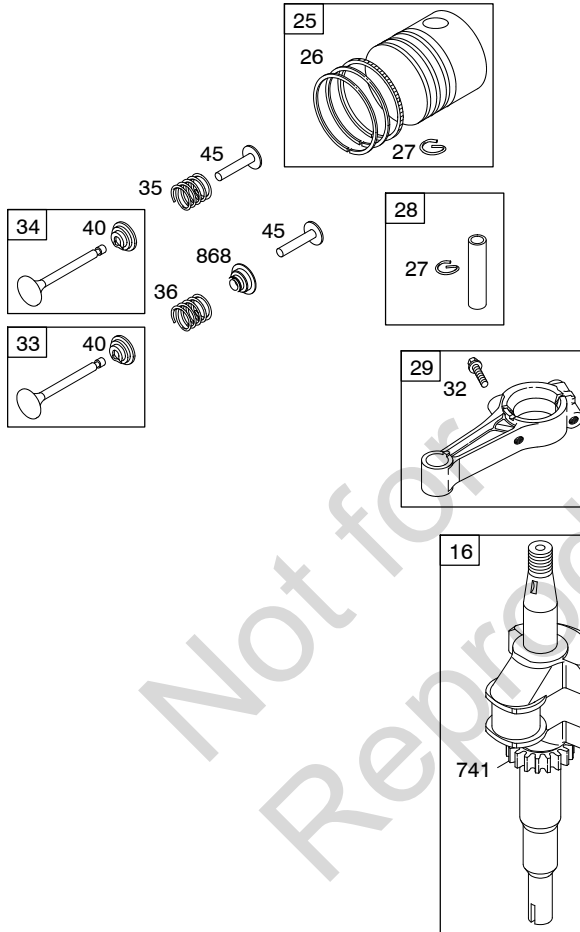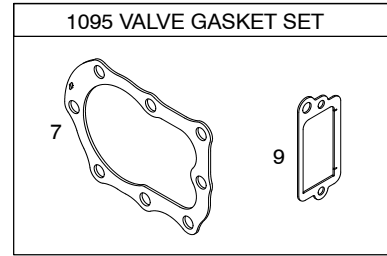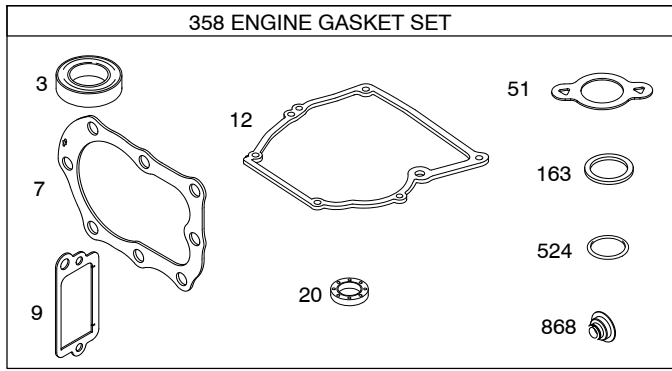



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 10117-3 Assemblies include all parts shown in frames. 09/29/2010

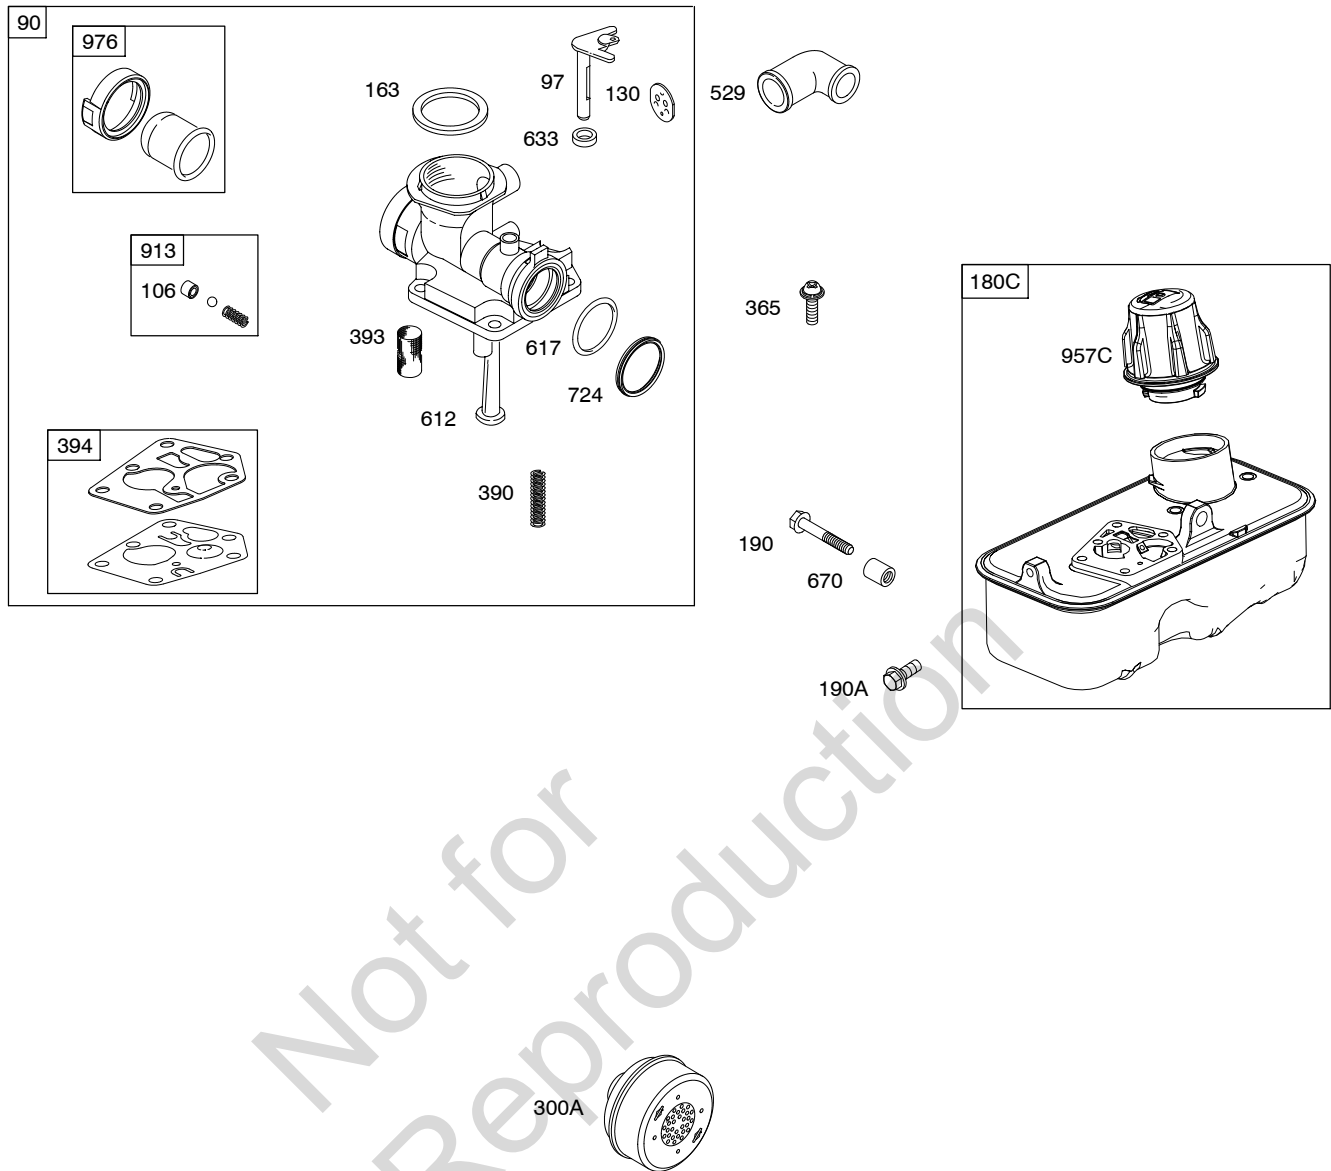

Not for
Reproduction

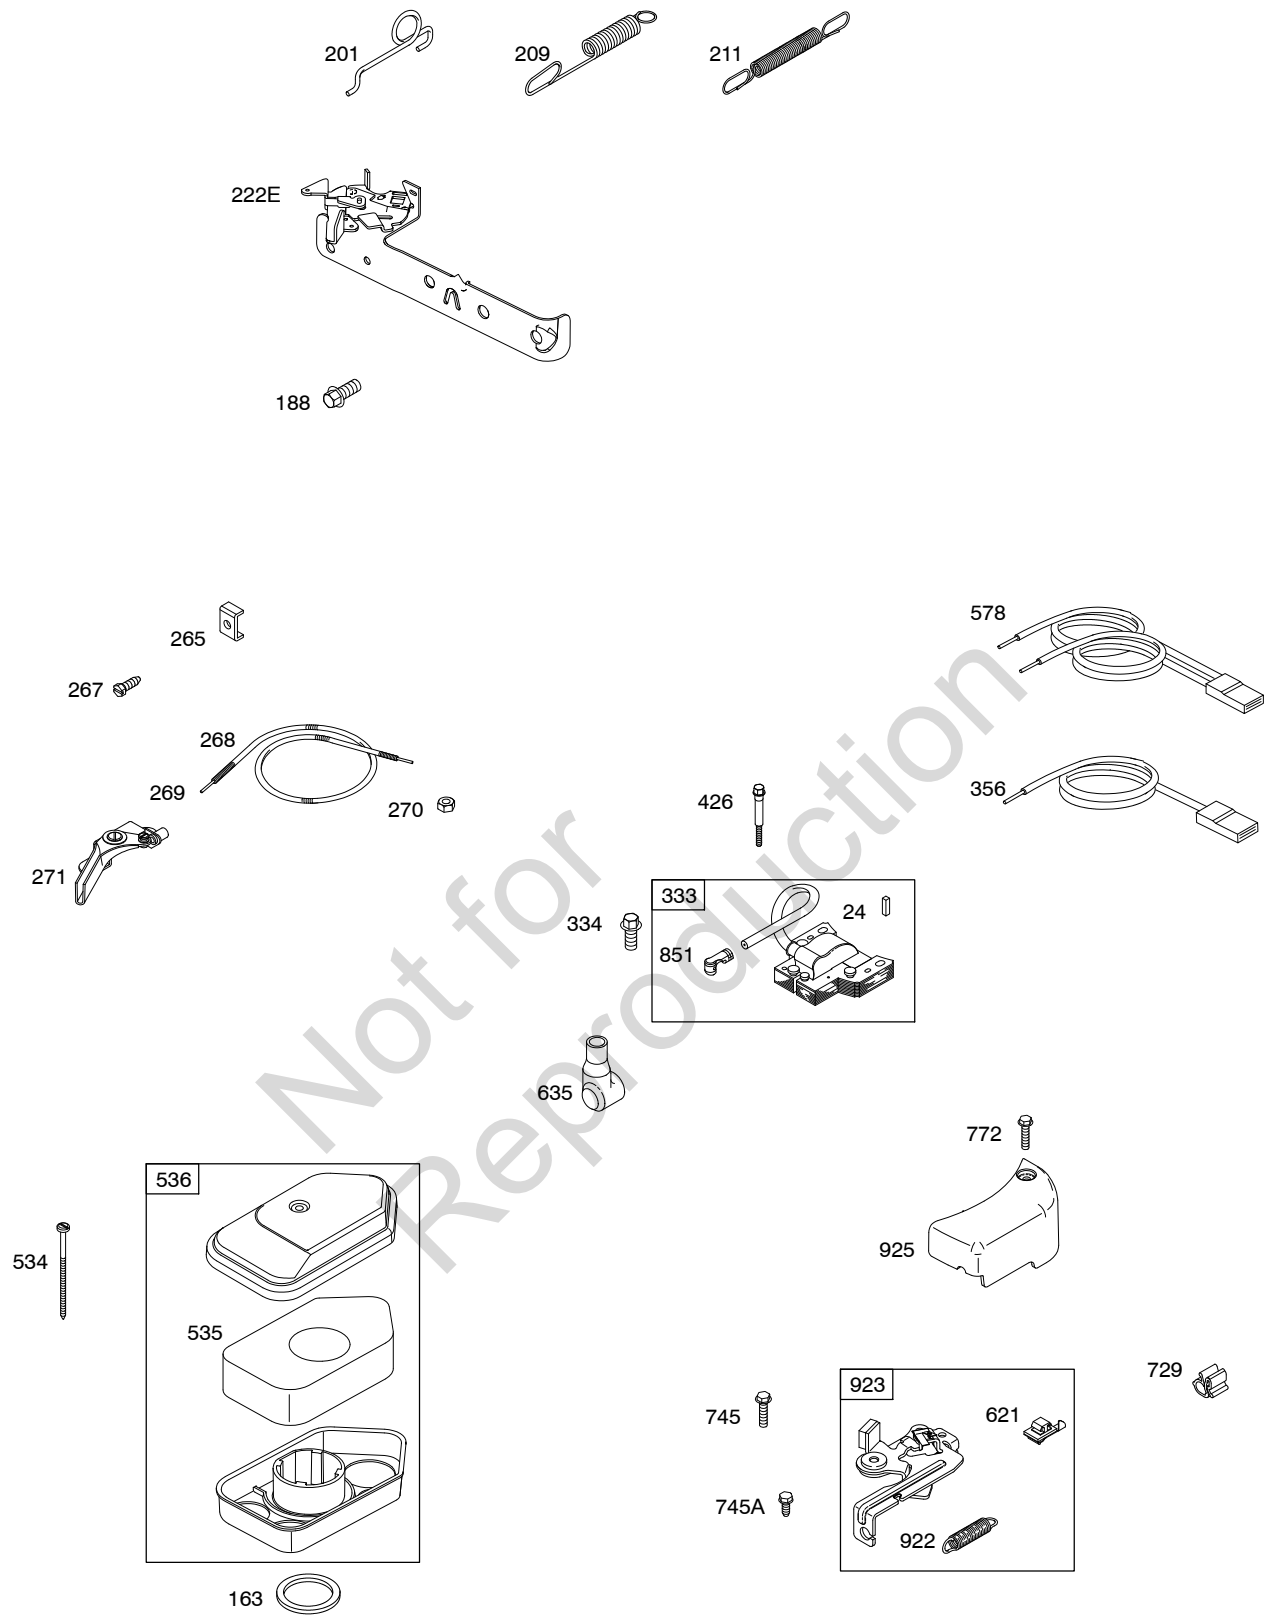

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
10117-5 Assemblies include all parts shown in frames. 09/29/2010

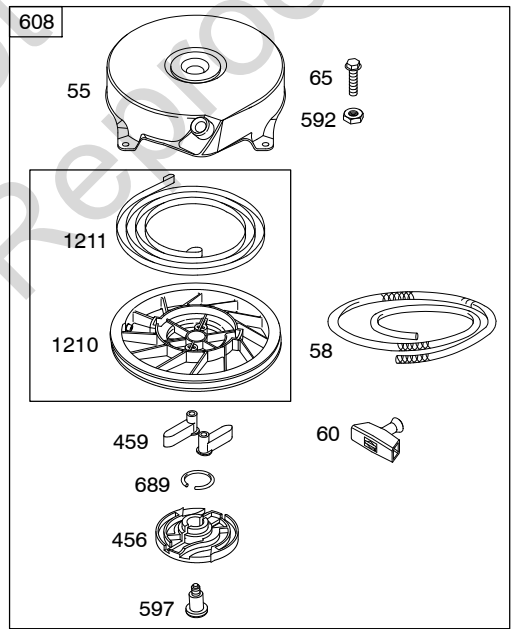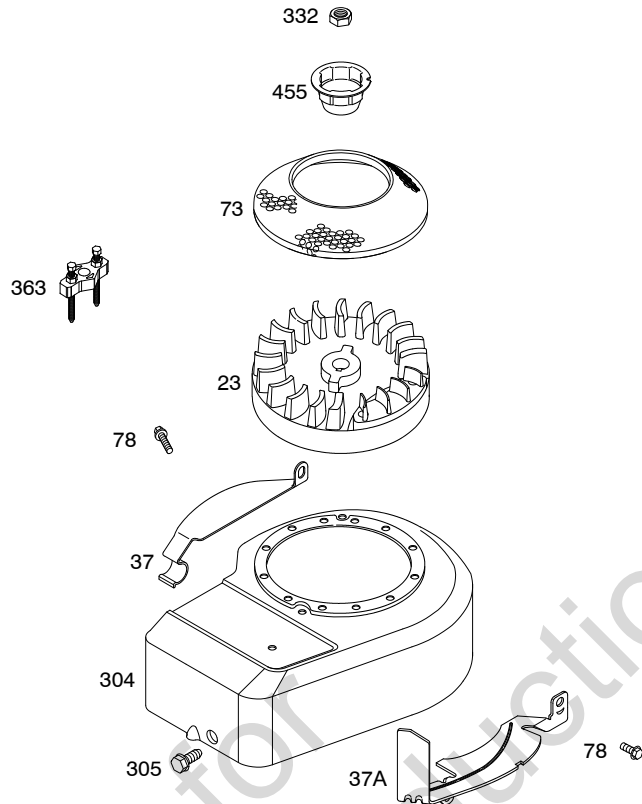

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699653	Cylinder Assembly	25	795691	Piston Assembly (Standard)	60	691915	Grip-Starter Rope
2	796961	Kit-Bushing/Seal (Magneto Side)			----- Note -----	65	690837	Screw (Rewind Starter)
3	299819S	Seal-Oil (Magneto Side)			795689 Piston Assembly (.020" Oversize)	73	699850	Screen-Rotating
4	798264	Sump-Engine				78	692198	Screw (Flywheel Guard)
5	790169	Head-Cylinder	26	795690	Ring Set (Standard)	90	795477	Carburetor
7	698717	Gasket-Cylinder Head			----- Note -----	97	691931	Shaft-Throttle
8	791781	Breather Assembly			795688 Ring Set (.020" Oversize)	106	691901	Seat-Inlet
9	695890	Gasket-Breather	27	691588	Lock-Piston Pin	130	794060	Valve-Throttle
10	691666	Screw (Breather Assembly)	28	699659	Pin-Piston	163	271139S	Gasket-Air Cleaner
11	691245	Tube-Breather	29	699655	Rod-Connecting (Standard)	180C	795473	Tank-Fuel
12	692218	Gasket-Crankcase (.015" Thick) (Standard)				188	692198	Screw (Control Bracket)
		----- Note -----	32	691664	Screw (Connecting Rod)	190	691640	Screw (Fuel Tank) (1 3/4" Long)
		270895 Gasket-Crankcase (.005" Thick)	33	296676	Valve-Exhaust	190A	691108	Screw (Fuel Tank) (9/16" Long)
		270896 Gasket-Crankcase (.009" Thick)	34	296677	Valve-Intake	200	691912	Blade-Governor
13	691640	Screw (Cylinder Head)	35	690520	Spring-Valve (Intake)	201	690347	Link-Air Vane
15	691680	Plug-Oil Drain	36	690520	Spring-Valve (Exhaust)	209	690251	Spring-Governor Used on Type No(s). 1251.
16	796211	Crankshaft Used on Type No(s). 1251.	37	690482	Guard-Flywheel (Carburetor Side)	211	691859	Spring-Governed Idle
20	391483S	Seal-Oil (PTO Side)	37A	691209	Guard-Flywheel (Muffler Side)	222E	691446	Bracket-Control
22	692551	Screw (Crankcase Cover/Sump)	40	692194	Retainer-Valve	265	692179	Clamp-Casing
23	795549	Flywheel Used on Type No(s). 1251.	43	698690	Slinger-Governor/Oil	267	691044	Screw (Casing Clamp)
24	222698S	Key-Flywheel	45	691762	Tappet-Valve	268	691025	Casing-Control Wire (Cut to Required Length)
			46	691998	Camshaft	269	691026	Wire-Control (Cut to Required Length)
			50	699644	Manifold-Intake	270	691027	Nut (Control Wire Casing)
			51	699649	Gasket-Intake	271	691028	Lever-Control
			54	691111	Screw (Intake Manifold)			
			55	692144	Housing-Rewind Starter			
			58	697316	Rope-Starter (88 5/8" Long)			

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
10117-7 Assemblies include all parts shown in frames. 09/29/2010

09K500

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
300A	394569S	Muffler (Round Lo Tone)	534	691417	Screw (Air Cleaner)	772	691111	Screw (Linkage Cover)
304	694236	Housing-Blower (Compliance Engines)	535	698369	Filter-Air Cleaner Foam	851	493880S	Terminal-Spark Plug
305	692198	Screw (Blower Housing)	536	698472	Cleaner-Air	868	697338	Seal-Valve
306	690400	Shield-Cylinder	578	398153	Wire Assembly	869	699641	Seat-Valve (Intake)
307	690345	Screw (Cylinder Shield)	592	690800	Nut (Rewind Starter)	870	699642	Seat-Valve (Exhaust)
332	690662	Nut (Flywheel)	597	691696	Screw (Pawl Friction Plate)	871	699643	Bushing-Valve Guide (Exhaust Valve)
333	793281	Armature-Magneto (Slide On Spark Plug Boot)	608	499706	Starter-Rewind (88 5/8" Rope)	----- Note -----		
334	691061	Screw (Magneto Armature)	612	496046S	Tube-Pick Up	913	494409	Seat-Check Valve
337	796112S	Plug-Spark	617	270344S	Seal-O Ring (Intake Manifold)	922	692135	Spring-Brake
356	692390	Wire-Stop	621	692310	Switch-Stop	923	691487	Brake
358	794209	Gasket Set-Engine	633	691321	Seal-Choke/Throttle Shaft (Throttle)	925	691349	Cover-Linkage
363	19069	Puller-Flywheel	635	66538S	Boot-Spark Plug (Slip On Style)	957C	795472	Cap-Fuel Tank
365	790029	Screw (Carburetor)	668	692889	Spacer (Cylinder)	976	694394	Primer-Carburetor Label-Emissions (Available From A Briggs & Stratton Authorized Dealer)
383	89838S	Wrench-Spark Plug	670	691633	Spacer-Fuel Tank	1036		
390	691839	Spring-Choke Diaphragm	689	691855	Spring-Friction	1058	277038	Manual-Operator's
393	691837	Screen-Carburetor	718	690959	Pin-Locating (Cylinder)	1095	498526	Gasket Set-Valve
394	795478	Diaphragm-Carburetor	724	697478	Retainer-Seal	1210	499901	Pulley/Spring Assembly (Pulley)
426	691107	Screw (Governor Blade)	729	690586	Clip-Wire	1211	499901	Pulley/Spring Assembly (Spring)
455	691236	Cup-Flywheel	741	796210	Gear-Timing	1319	794467	Label-Warning
456	692299	Plate-Pawl Friction	745	691146	Screw (Brake) (7/8" Long)	1330	270962	Repair Manual
459	281505S	Pawl-Ratchet	745A	690859	Screw (Brake) (1/2" Long)			
523A	691913	Dipstick						
524	691876	Seal-Dipstick Tube						
529	692189	Grommet						

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 10117-8 Assemblies include all parts shown in frames. 09/29/2010

Not for
Reproduction

Not for
Reproduction

Not for
Reproduction

Not for
Reproduction

