



# Illustrated Parts List

## Model Series

# 112P00

TYPE NUMBERS  
0110 through 6892.

### TABLE OF CONTENTS

Air Cleaner .....	8
Blower Housing .....	5
Camshaft .....	2
Carburetor .....	9
Carburetor Overhaul Kit .....	9
Controls .....	10
Covers/Guards .....	5
Crankshaft .....	2
Cylinder .....	2
Cylinder Head .....	3
Exhaust System .....	7
Flywheel .....	5
Fuel Supply .....	6
Gasket Set - Engine .....	4
Gasket Set - Valve .....	3
Governor Spring .....	10
Ignition .....	11
Lubrication .....	6
Operator's Manual .....	2
Piston/Rings/Connecting Rod .....	2
Rewind Starter .....	5
Sump .....	4
Thermostat .....	10
Valves .....	3
Warning Label .....	2

Not for reproduction



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.





 


1319 WARNING LABEL

**REQUIRED** when replacing parts with warning labels affixed.


1036 EMISSIONS LABEL

1058 OPERATOR'S MANUAL



1330 REPAIR MANUAL

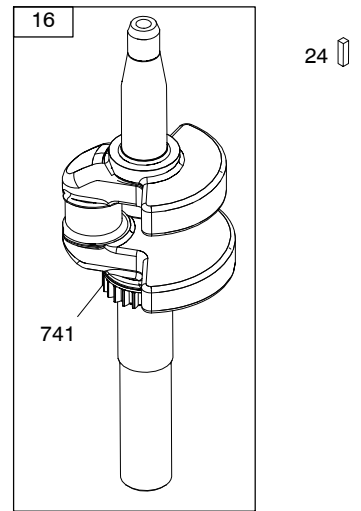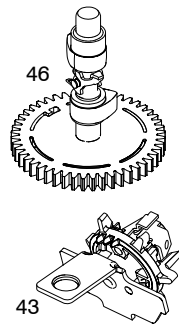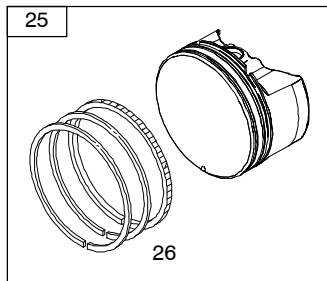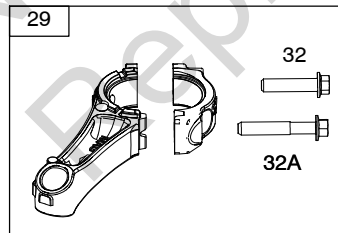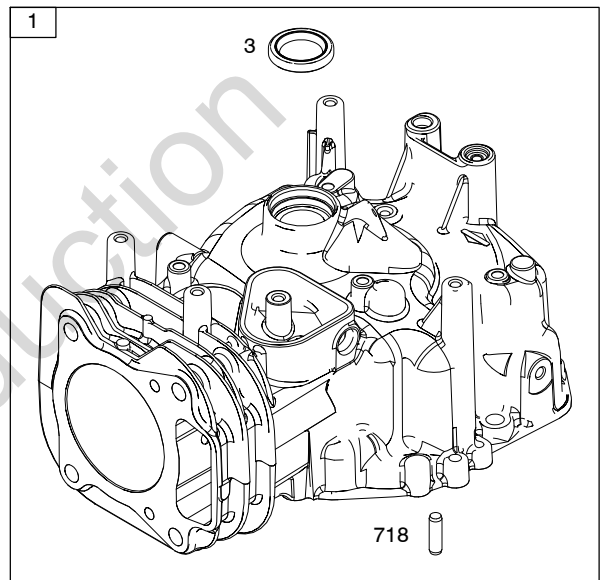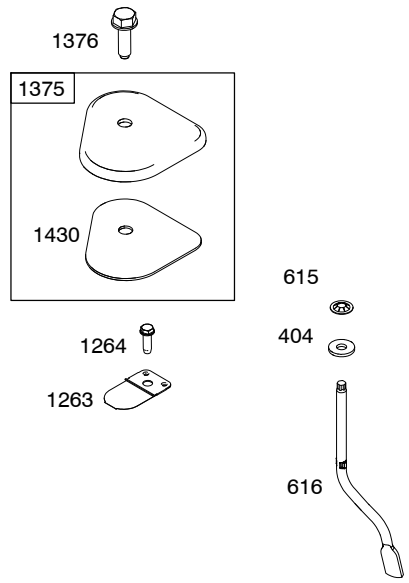

**Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.**










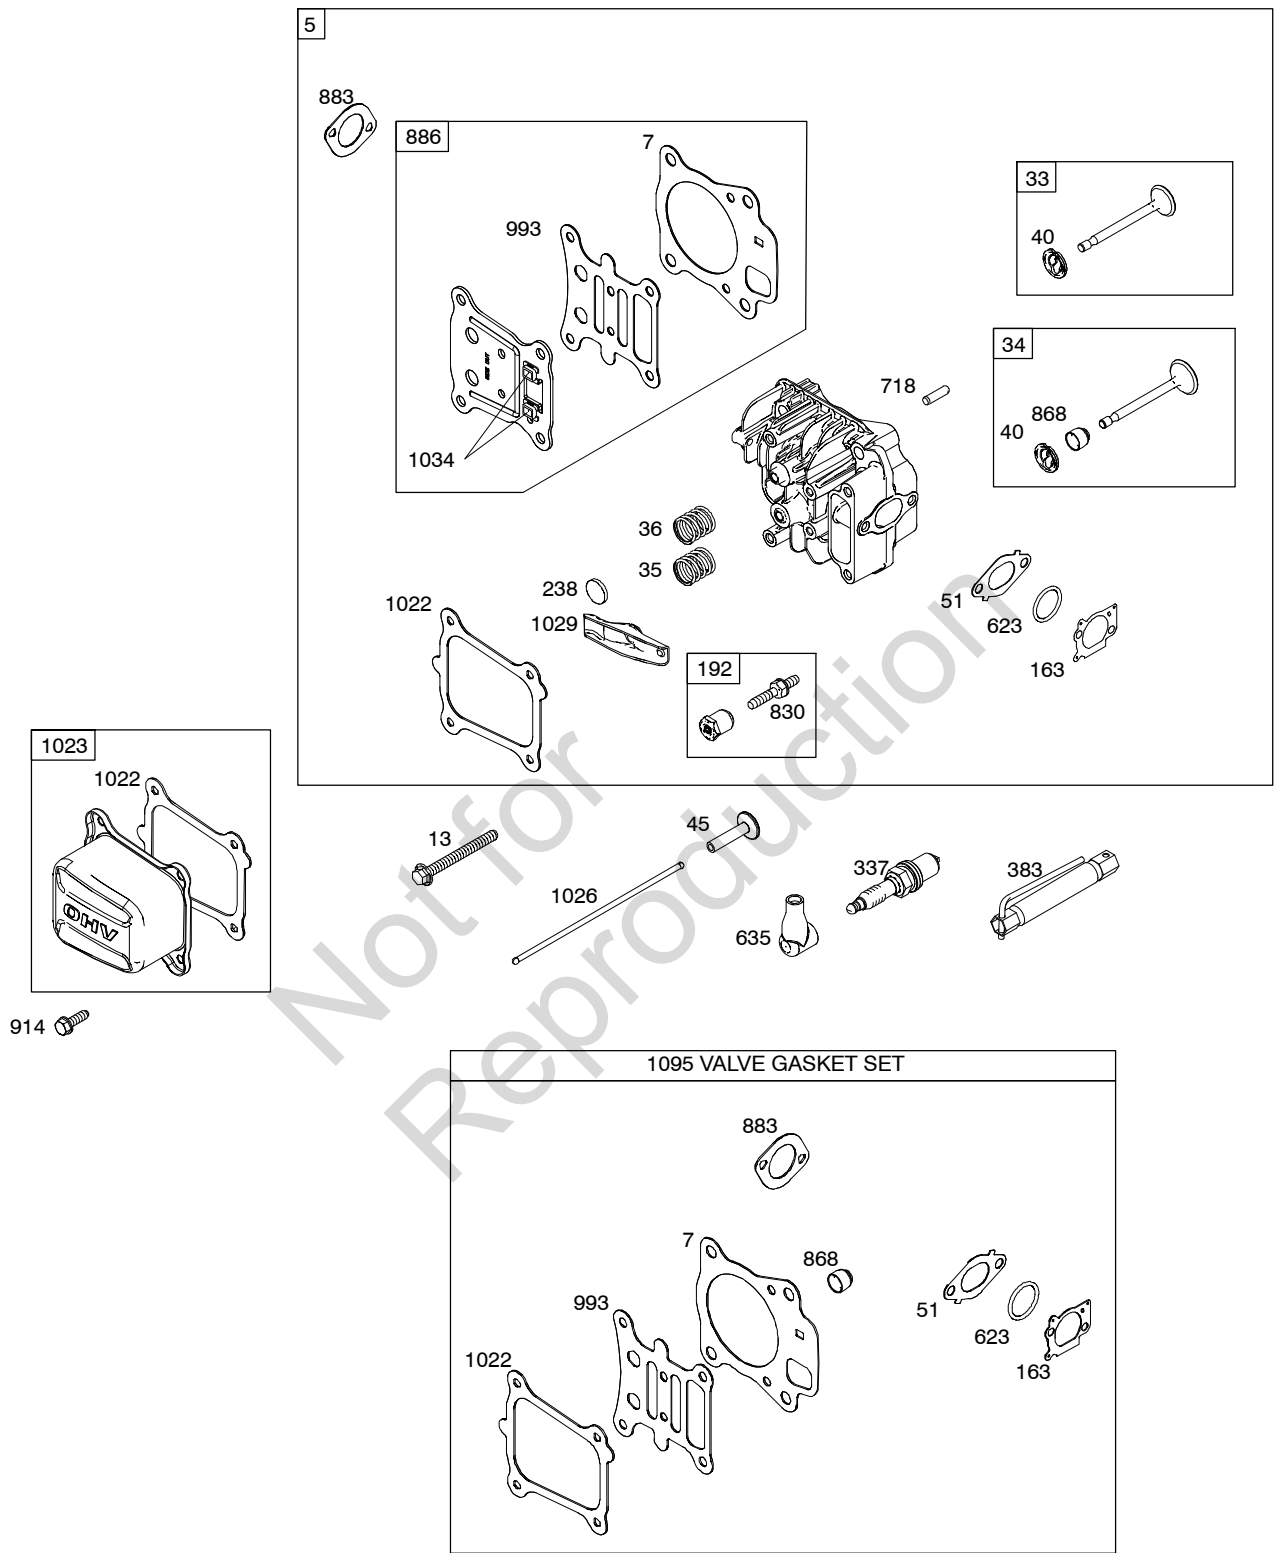


*Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.*




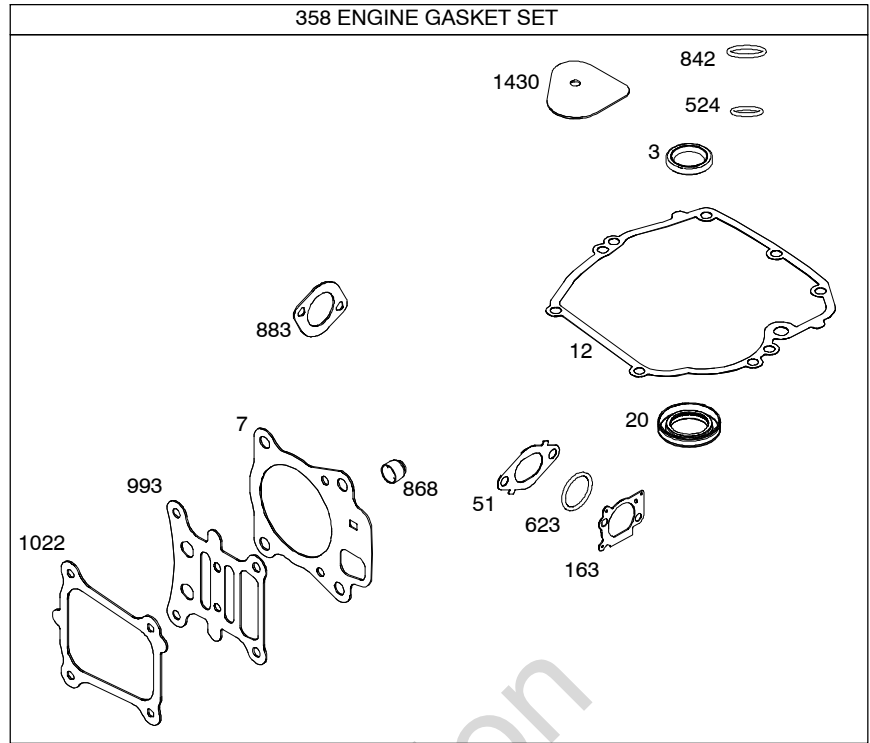
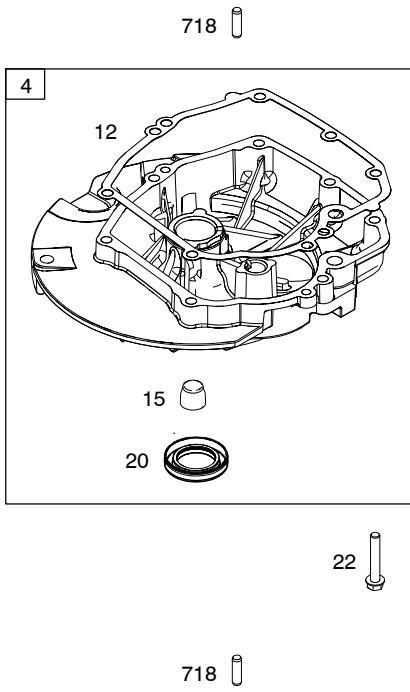


Not for  
Reproduction


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

 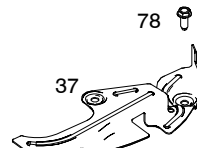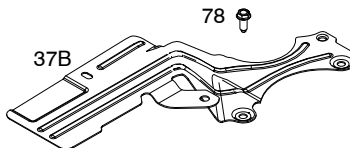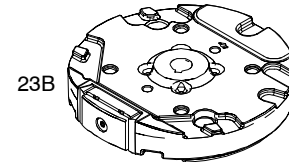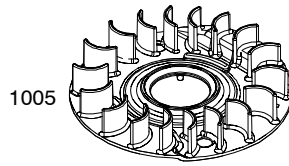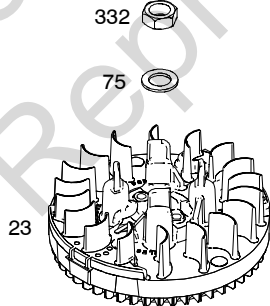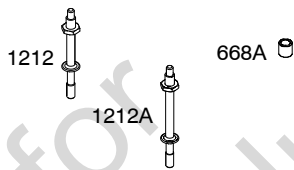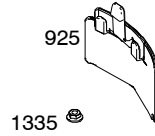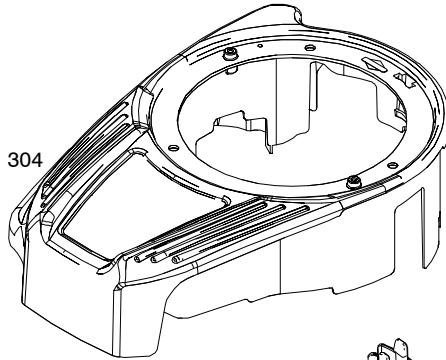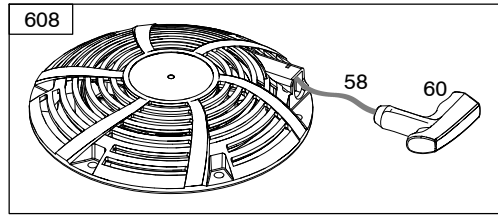


*Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.*

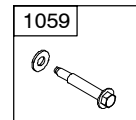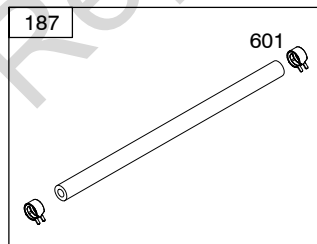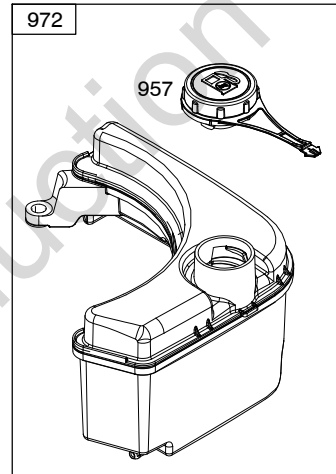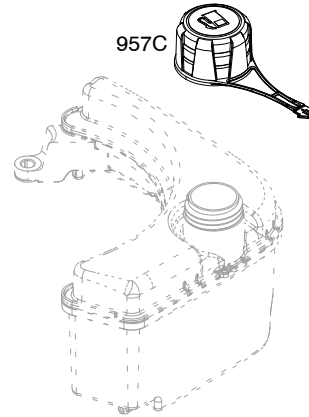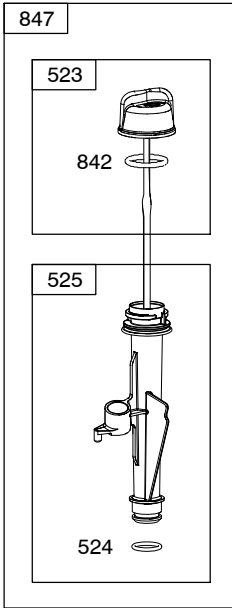

*Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.*


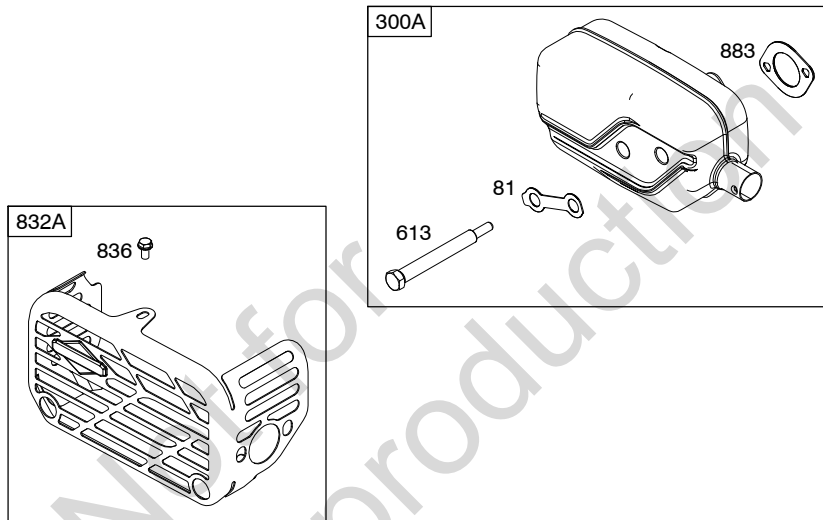


*Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.*

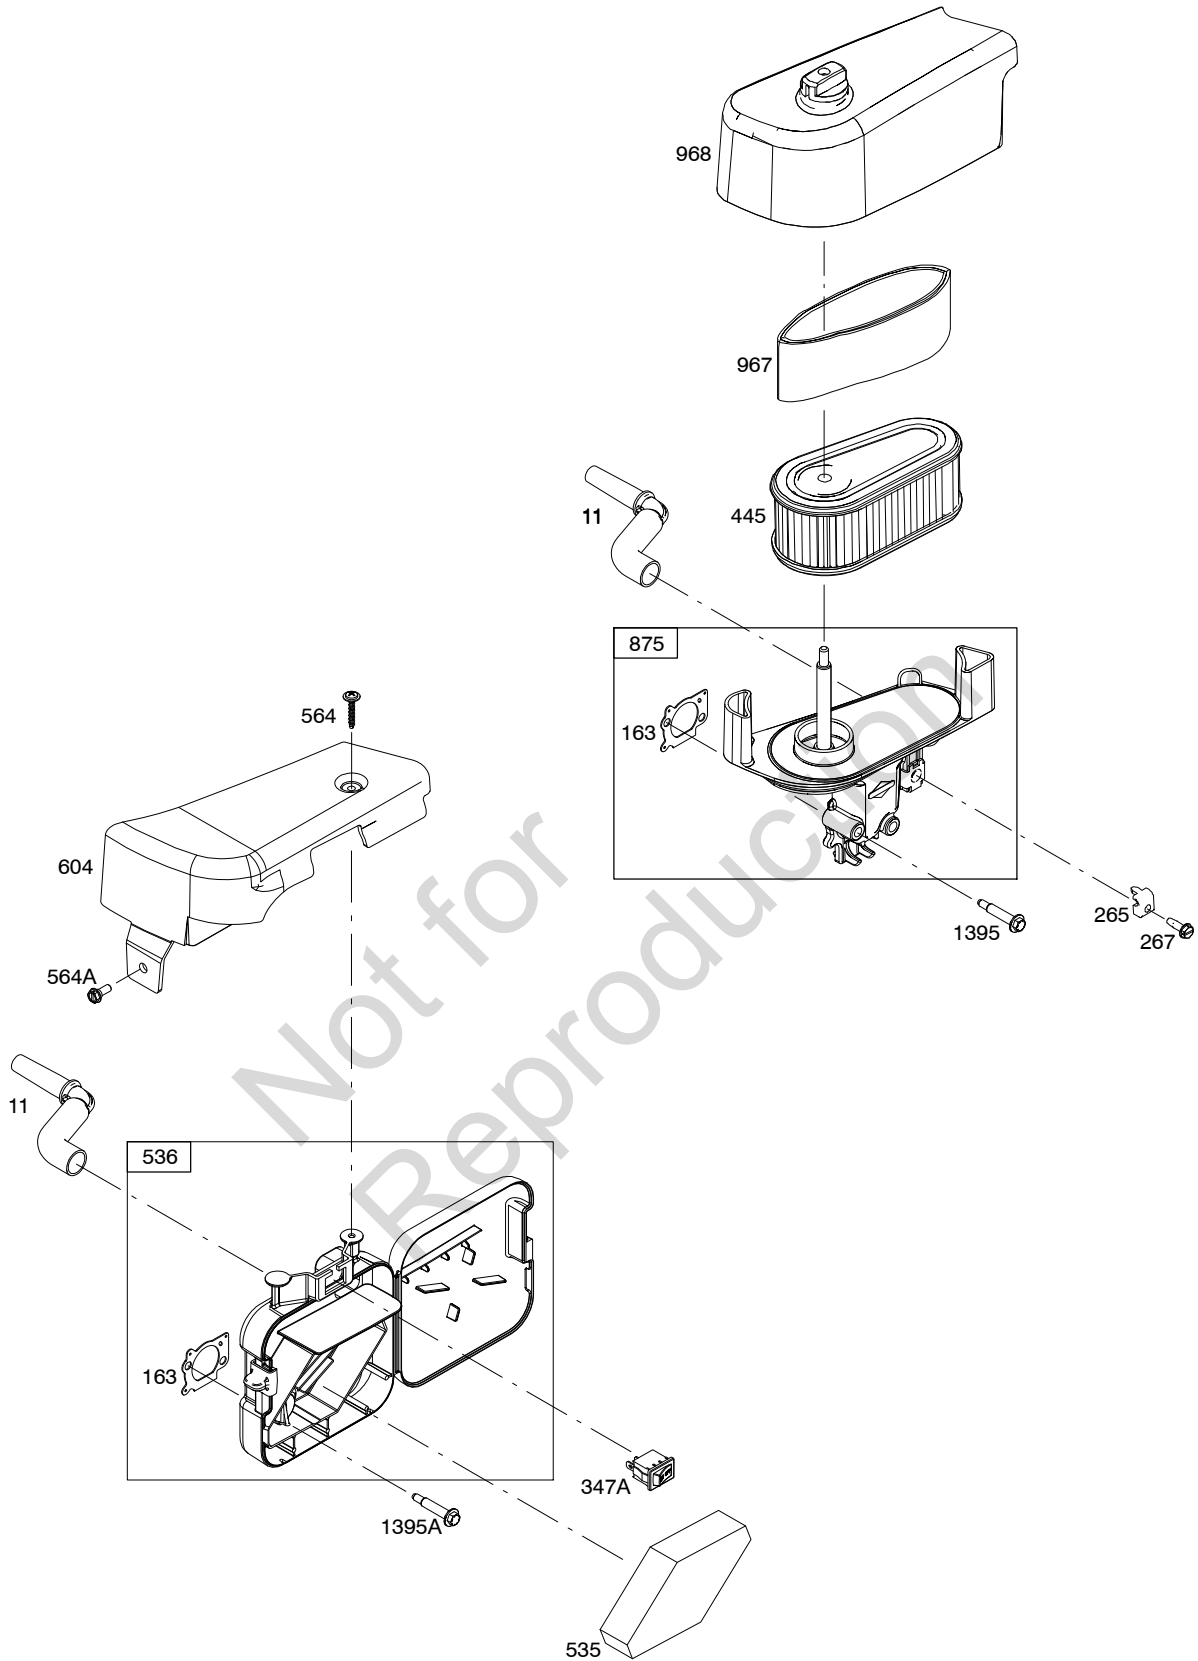


*Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.*




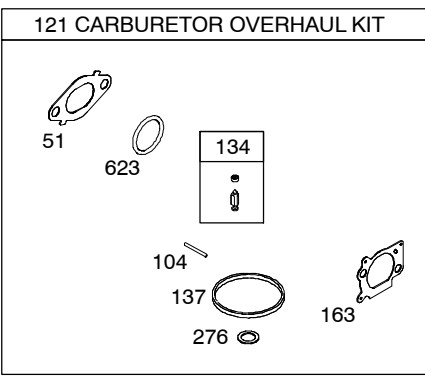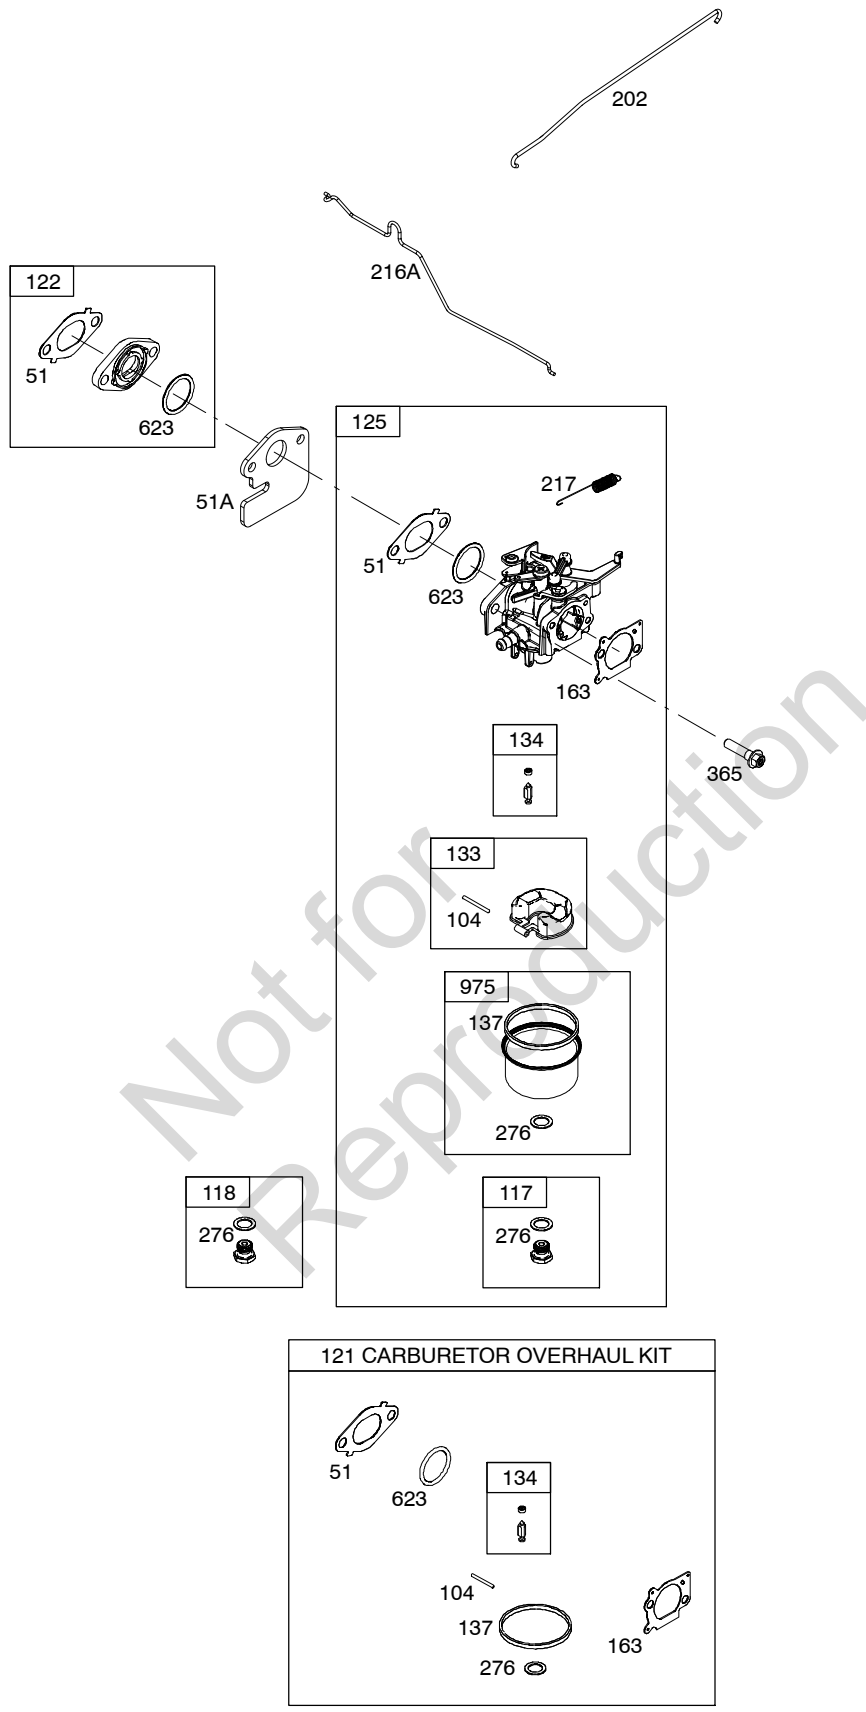

*Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.*

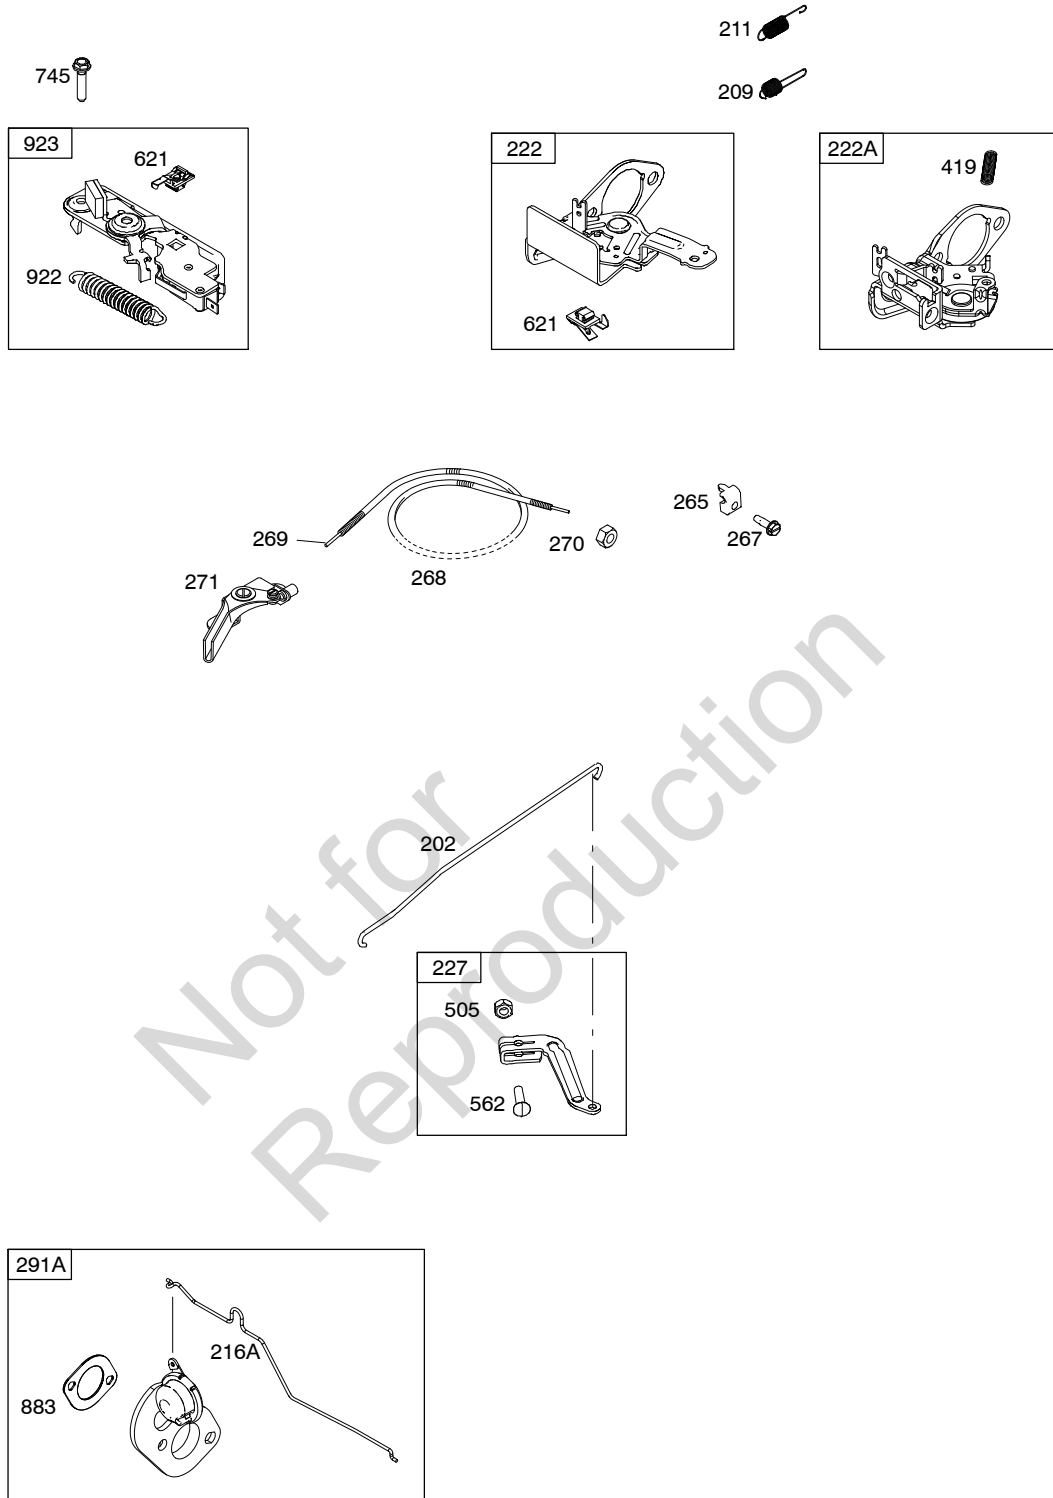

*Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.*

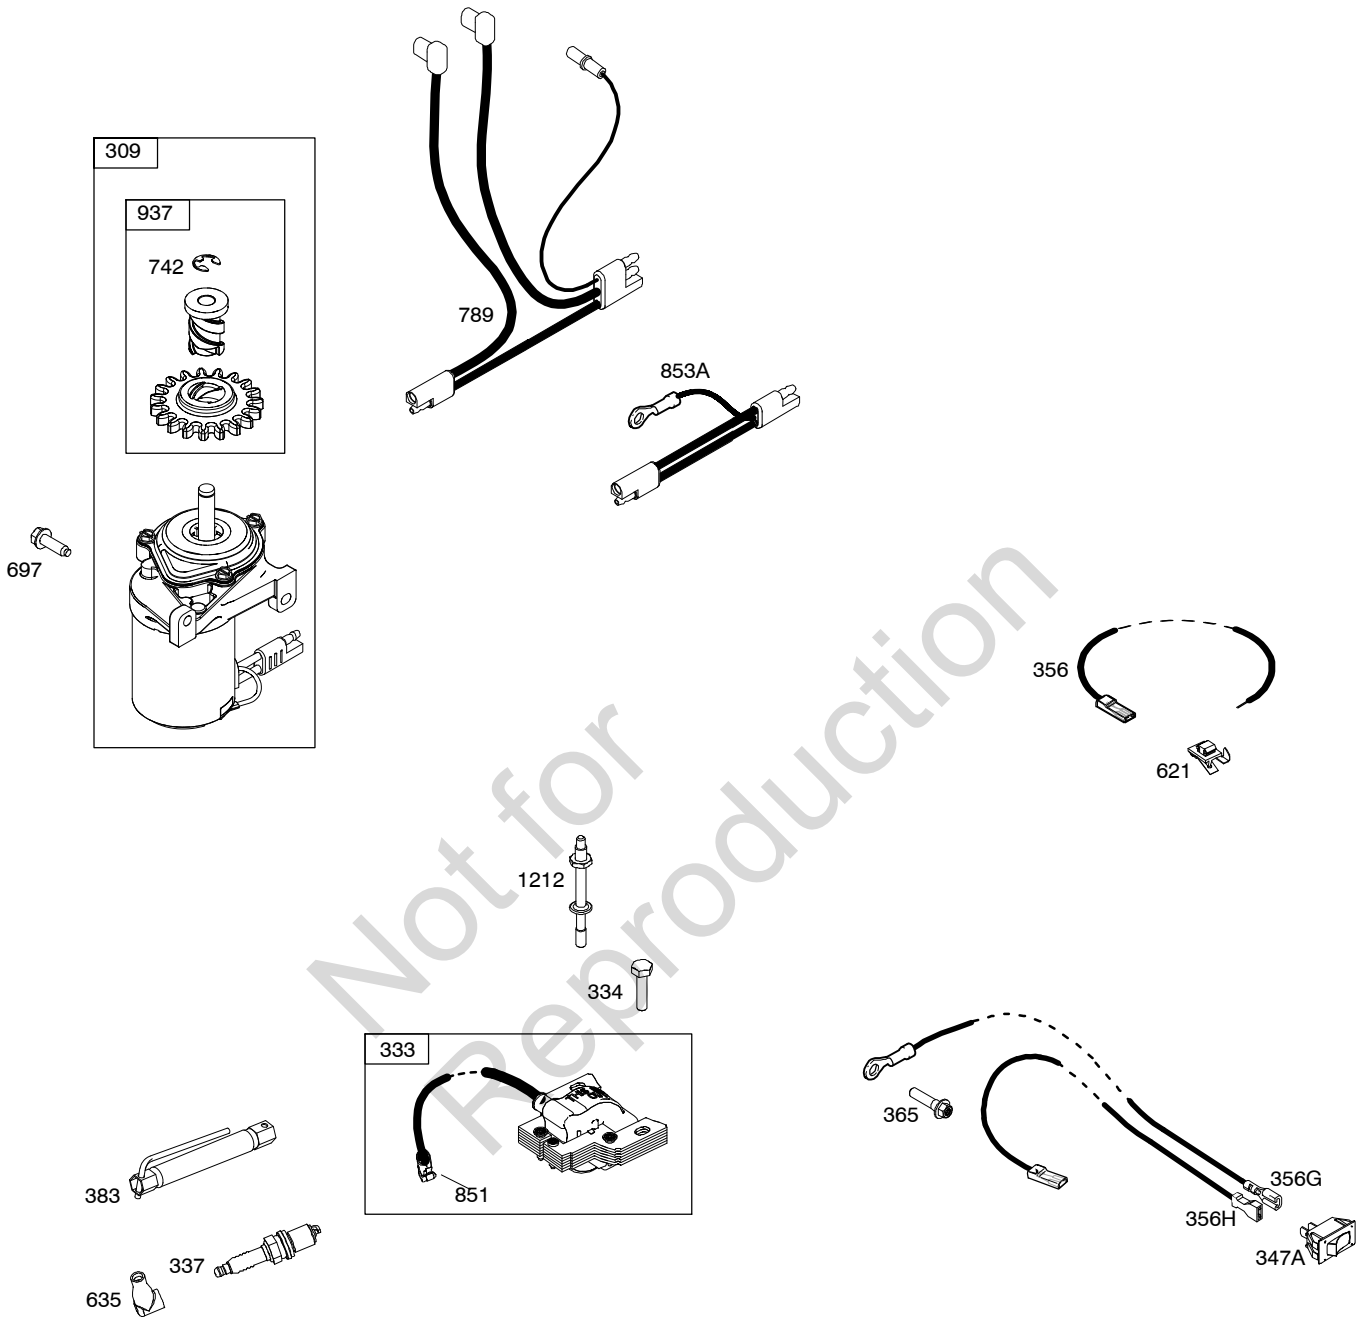

*Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.*

# 112P00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	798948	Cylinder Assembly	33	499642	Valve-Exhaust	81	691740	Lock-Muffler Screw
3	299819S	Seal-Oil (Magneto Side)	34	795443	Valve-Intake	104	797622	Pin-Float Hinge
4	493279	Sump-Engine	35	691304	Spring-Valve (Intake)	117	799227	Jet-Main (Standard)
5	796471	Head-Cylinder	36	691304	Spring-Valve (Exhaust)			Used on Type No(s). 0110, 0111, 0114, 0120, 0892, 6892.
7	796475	Gasket-Cylinder Head	37	590921	Guard-Flywheel (Used After Code Date 11081400)			----- <b>Note</b> ----- <b>798660</b> Jet-Main (Standard)
11	796478	Tube-Breather			Used on Type No(s). 0110, 0111, 0113, 0114, 0116, 0117, 0120, 0892, 6892.			Used on Type No(s). 0113, 0116, 0117.
12	692232	Gasket-Crankcase			----- <b>Note</b> ----- <b>796536</b> Guard- Flywheel	118	799606	Jet-Main (High Altitude)
13	793451	Screw (Cylinder Head)			(Used Before Code Date 11081500)			Used on Type No(s). 0110, 0111, 0114, 0120, 0892, 6892.
15	691680	Plug-Oil Drain (Square Socket)			Used on Type No(s). 0110, 0111, 0113, 0114, 0116, 0117, 0892, 6892.			----- <b>Note</b> ----- <b>799607</b> Jet-Main (High Altitude)
16	796468	Crankshaft Used on Type No(s). 0110, 0111, 0114.			----- <b>Note</b> ----- <b>799242</b> Guard- Flywheel	121	799235	Kit-Carburetor Overhaul
		----- <b>Note</b> ----- <b>796469</b> Crankshaft Used on Type No(s). 0120, 0892, 6892.			Used on Type No(s). 0110, 0111, 0113, 0114, 0116, 0117, 0892, 6892.			Used on Type No(s). 0110, 0111, 0113, 0114, 0116, 0117, 0120, 0892, 6892.
		<b>799337</b> Crankshaft Used on Type No(s). 0113, 0116, 0117.	37B	799155	Guard-Flywheel Used on Type No(s). 0110, 0113, 0114, 0116, 0117, 0120, 0892, 6892.			----- <b>Note</b> ----- <b>799447</b> Carburetor Used on Type No(s). 0113, 0116, 0117.
20	399781S	Seal-Oil (PTO Side)			----- <b>Note</b> ----- <b>799242</b> Guard- Flywheel	122	796595	Spacer-Carburetor
22	691092	Screw (Crankcase Cover/Sump)			Used on Type No(s). 0111.	125	799226	Carburetor Used on Type No(s). 0110, 0111, 0114, 0120, 0892, 6892.
23	590420	Flywheel (Aluminum) Used on Type No(s). 0110, 0111, 0114, 0120, 0892, 6892.			----- <b>Note</b> ----- <b>799447</b> Carburetor Used on Type No(s). 0113, 0116, 0117.			----- <b>Note</b> ----- <b>799447</b> Carburetor Used on Type No(s). 0113, 0116, 0117.
23B	796621	Flywheel (Cast Iron) Used on Type No(s). 0113, 0116, 0117.	40	692194	Retainer-Valve			----- <b>Note</b> ----- <b>799447</b> Carburetor Used on Type No(s). 0113, 0116, 0117.
			43	796650	Slinger-Governor/Oil			----- <b>Note</b> ----- <b>799447</b> Carburetor Used on Type No(s). 0113, 0116, 0117.
			45	690977	Tappet-Valve			----- <b>Note</b> ----- <b>799447</b> Carburetor Used on Type No(s). 0113, 0116, 0117.
			46	694039	Camshaft			----- <b>Note</b> ----- <b>799447</b> Carburetor Used on Type No(s). 0113, 0116, 0117.
24	222698S	Key-Flywheel	51	796596	Gasket-Intake			----- <b>Note</b> ----- <b>799447</b> Carburetor Used on Type No(s). 0113, 0116, 0117.
25	796643	Piston Assembly (Standard) ----- <b>Note</b> ----- <b>796644</b> Piston Assembly (.020" Oversize)	51A	590398	Gasket-Intake	133	797626	Float-Carburetor Used on Type No(s). 0110, 0111, 0113, 0114, 0116, 0117, 0120, 0892, 6892.
			58	697316	Rope-Starter (Cut To Required Length)			
			60	281434S	Grip-Starter Rope			
26	796645	Ring Set (Standard) ----- <b>Note</b> ----- <b>796646</b> Ring Set (.020" Oversize)	75	691736	Washer (Flywheel)			
			78	793480	Screw (Flywheel Guard)			
27	691588	Lock-Piston Pin						
28	298909	Pin-Piston						
29	796470	Rod-Connecting						
32	691664	Screw (Connecting Rod)						
32A	695759	Screw (Connecting Rod)						

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
10227-12 Assemblies include all parts shown in frames. 03/26/2012

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
134	799177	Kit-Needle/Seat Used on Type No(s). 0110, 0111, 0113, 0114, 0116, 0117, 0120, 0892, 6892.	271	691028	Lever-Control	358	799495	Gasket Set-Engine
			276	797632	Washer-Sealing Used on Type No(s). 0110, 0111, 0113, 0114, 0116, 0117, 0120, 0892, 6892.	363	19069	Puller-Flywheel
137	797625	Gasket-Float Bowl Used on Type No(s). 0110, 0111, 0113, 0114, 0116, 0117, 0120, 0892, 6892.				365	793458	Screw (Carburetor) ----- Note ----- 699484 Screw (Carburetor) Used on Type No(s). 0113, 0116, 0117.
			291A	798938	Thermostat	383	19576S	Wrench-Spark Plug
163	691894	Gasket-Air Cleaner	300A	798940	Muffler-Exhaust Used on Type No(s). 0110, 0111, 0113, 0114, 0116, 0117, 0120, 0892, 6892.	404	690272	Washer (Governor Crank)
187	791766	Line-Fuel (Cut To Required Length)				419	799623	Spring-Return Used on Type No(s). 0113, 0116, 0117.
192	796631	Adjuster-Rocker Arm	304	796692	Housing-Blower (Rewind Start) ----- Note ----- 798945 Housing- Blower (Electric Start) Used on Type No(s). 0111.	445	795066	Filter-Air Cleaner Cartridge
202	796657	Link-Mechanical Governor				455	796615	Cup-Flywheel
209	796483	Spring-Governor Used on Type No(s). 0110, 0111, 0114, 0120, 0892, 6892. ----- Note ----- 799507 Spring- Governor Used on Type No(s). 0113, 0116, 0117.	309	799241	Motor-Starter Used on Type No(s). 0111.	505	793515	Nut (Governor Control Lever)
211	799508	Spring-Governor Idle Used on Type No(s). 0113, 0116, 0117.	332	690662	Nut (Flywheel)	523	796503	Dipstick
216A	798944	Link-Choke	333	796499	Armature-Magneto ----- Note ----- 796500 Armature- Magneto Used on Type No(s). 0113, 0116, 0117.	524	692296	Seal-Dipstick Tube
217	799179	Spring-Choke Return Used on Type No(s). 0110, 0111, 0113, 0114, 0116, 0117, 0120, 0892, 6892.				525	796502	Tube-Dipstick
			334	793454	Screw (Magneto Armature)	535	797301	Filter-Air Cleaner Foam Used on Type No(s). 0113, 0116, 0117.
222	796482	Bracket-Control (Manual Friction, Remote, & Fixed Speed Control)	337	692051	Plug-Spark ----- Note ----- 692720 Plug-Spark Used on Type No(s). 0110, 0111, 0114, 0116, 0120, 0892, 6892.	536	799025	Cleaner-Air Used on Type No(s). 0113, 0116, 0117.
222A	799448	Bracket-Control Used on Type No(s). 0113, 0116, 0117.				562	793514	Bolt (Governor-Control Lever)
227	796487	Lever-Governor Control	347A	798939	Switch-Rocker Used on Type No(s). 0113, 0116, 0117.	564	690351	Screw (Control Cover) Used on Type No(s). 0113, 0116, 0117.
238	691300	Cap-Valve				564A	799026	Screw (Control Cover) Used on Type No(s). 0113, 0116, 0117.
265	690798	Clamp-Casing	356	692390	Wire-Stop Used on Type No(s). 0110, 0111, 0114, 0120, 0892, 6892.	601	791850	Clamp-Hose
267	691044	Screw (Casing Clamp)				604	799024	Cover-Control Used on Type No(s). 0113, 0116, 0117.
268	691025	Casing-Control Wire (Cut To Required Length)	356G	798942	Wire-Stop Used on Type No(s). 0113, 0116, 0117.	608	796497	Starter-Rewind
269	691026	Wire-Control (Cut To Required Length)	356H	798943	Wire-Stop Used on Type No(s). 0113, 0116, 0117.	613	796496	Screw (Muffler)
270	691027	Nut (Control Wire Casing)						

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
10227-13 Assemblies include all parts shown in frames. 03/26/2012

# 112P00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION		
615	690340	Retainer-Governor Shaft	922	692135	Spring-Brake	1058	279946	Manual-Operator's		
616	798327	Crank-Governor	923	796635	Brake	1059	793471	Kit-Screw/Washer		
621	692310	Switch-Stop	925	796531	Cover-Linkage	1095	799496	Gasket Set-Valve		
623	793628	Seal-O Ring (Carburetor Spacer)	937	799420	Spline-Starter Used on Type No(s). 0111.	1212	796537	Stud (Blower Housing)		
635	66538S	Boot-Spark Plug	957	799585	Cap-Fuel Tank (EVAP)	1212A	793479	Stud (Blower Housing)		
668A	797383	Spacer	957C	796577	Cap-Fuel Tank (EVAP)	1263	697124	Reed-Breather		
670	793485	Spacer-Fuel Tank	967	796254	Filter-Pre Cleaner	1264	793453	Screw (Breather Reed)		
697	691127	Screw (Drive Cap)	968	796493	Cover-Air Cleaner	1319	794467	Label-Warning		
718	690959	Pin-Locating	972	590949	Tank-Fuel (EVAP)	1330	279000	Manual-Repair		
741	795755	Gear-Timing	975	797631	Bowl-Float Used on Type No(s). 0110, 0111, 0113, 0114, 0116, 0117, 0120, 0892, 6892.	1335	793481	Nut (Blower Housing)		
		----- Note -----				1375	796476	Cover-Breather/Reed		
		797521 Gear-Timing				1376	794451	Screw (Breather/Reed Cover)		
		Used on Type No(s). 0113, 0116, 0117.				1395	690349	Screw (Air Cleaner Base to Carburetor)		
742	93941	Retainer-E Ring	993	796473	Gasket-Cylinder Head Plate	1395A	798294	Screw (Air Cleaner Base to Carburetor)		
745	698557	Screw (Brake)	1005	796614	Fan-Flywheel			Used on Type No(s). 0113, 0116, 0117.		
789	792685	Harness-Wiring Used on Type No(s). 0111.	1022	796480	Gasket-Rocker Cover			1430	796477	Gasket-Breather/Reed
830	796472	Stud-Rocker Arm	1023	796479	Cover-Rocker Arm					
832A	798951	Guard-Muffler Used on Type No(s). 0110, 0111, 0113, 0114, 0116, 0117, 0120, 0892, 6892.	1026	796481	Rod-Push					
			1029	691230	Arm-Rocker					
836	793500	Screw (Muffler Guard)	1034	691343	Guide-Push Rod					
842	691031	Seal-O Ring (Dipstick Tube)	1036		Label-Emissions (Available From A Briggs & Statton Authorized Dealer)					
847	796501	Dipstick/Tube Assembly								
851	493880S	Terminal-Spark Plug								
853A	695897	Adapter-Wire								
868	795440	Seal-Valve								
875	796492	Base-Air Cleaner								
883	793497	Gasket-Exhaust								
886	799492	Gasket Kit-Cylinder Head Plate								
914	794451	Screw (Rocker Arm Cover)								

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

Not for  
Reproduction

Not for  
Reproduction

