


PUMP ASSEMBLY (3-0005)

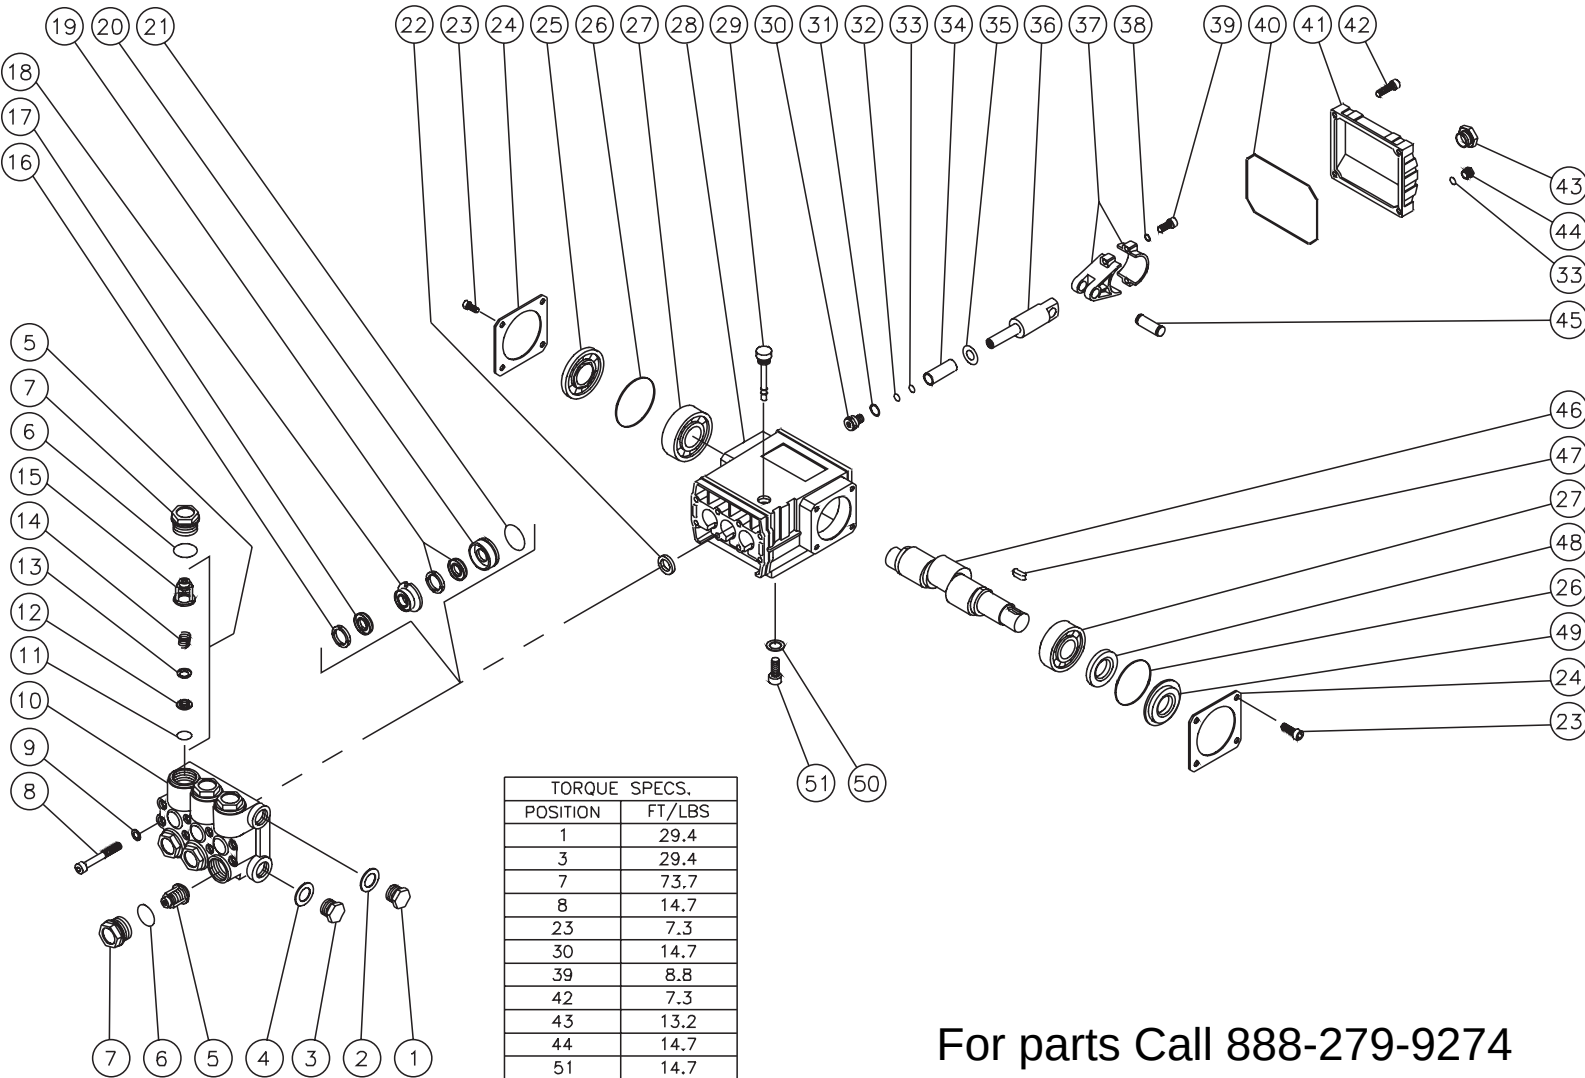

For parts Call 888-279-9274

3-0005-062800-RD

PUMP ASSEMBLY (3-0005)

REF #	DESCRIPTION	PART #	QTY	REF #	DESCRIPTION	PART #	QTY	REF #	DESCRIPTION	PART #	QTY
1	Hex Plug	39-0018	1	20	Low Pressure Seal Retainer	46-0081	3	39	Bolt	27-8405	6
2	Washer	28-0600	1	21	O-ring	25-0048	3	40	Gasket Cover - Old Style	26-0081	1
3	Hex Plug	39-0019	1	22	Oil Seal	26-0046	3	-	O-ring Cover- New Style	25-0317	1
4	Washer	28-0601	1	23	Bolt	27-8000	8	41	Crankcase Cover - Old Style	46-0085	1
5	Valve Assembly (Inc. 11-15) (See 70-0009)	N/A Sep.	6	24	Retainer/Oil Level/Spacer	46-0084	2	-	Crankcase Cover - New Style	46-0226	1
6	O-ring	25-0012	6	25	Spacer	46-0088	1	42	Bolt	27-8401	5
7	Valve Plug	39-0020	6	26	O-ring	25-0060	2	43	Oil Level Indicator	46-0114	1
8	Bolt	27-8439	8	27	Ball Bearing	48-0011	2	44	Hex Plug	39-0017	1
9	Lockwasher	29-0154	8	28	Crankcase	46-0225	1	45	Connecting Rod Pin	43-0031	3
10	Pump Manifold	46-0083	1	29	Oil Dipstick	46-0143	1	46	Crankshaft	46-0230	1
11	O-ring (See 70-0009)	N/A Sep.	6	30	Piston Screw	46-0069	3	47	Key	43-0028	1
12	Valve Seat (See 70-0009)	N/A Sep.	6	31	Washer	28-0400	3	48	Oil Seal	26-0048	1
13	Valve Plate (See 70-0009)	N/A Sep.	6	32	O-ring	25-0014	4	49	Spacer-Bearing	46-0087	1
14	Valve Spring (See 70-0009)	N/A Sep.	6	33	Back-up Ring	46-0109	3	50	Lockwasher	46-0605	4
15	Valve Cage (See 70-0009)	N/A Sep.	6	34	Plunger-Ceramic	46-0078	3	51	Bolt	46-0606	4
16	Head Ring (See 852-0012)	N/A Sep.	3	35	Flinger Washer	46-0146	3		Valve Kit (Inc. 6 each of 5, 11-15)	70-0009	
17	V-Packing (See 852-0012)	N/A Sep.	3	36	Piston Rod	46-0080	3		Packing Kit (Inc. 3 each of 17, 19)	70-0040	
18	Intermediate Ring	46-0089	3	37	Connecting Rod	46-0077	3		Packing Kit (Inc. 3 each of 16, 17, 19, 21)	852-0012	
19	Low Pressure Seal (See 852-0012)	N/A Sep.	3	38	Washer	28-0201	6		Head Ring Kit (Inc. 3 each of 16)	70-0032	