


PUMP ASSEMBLY (3-0152)

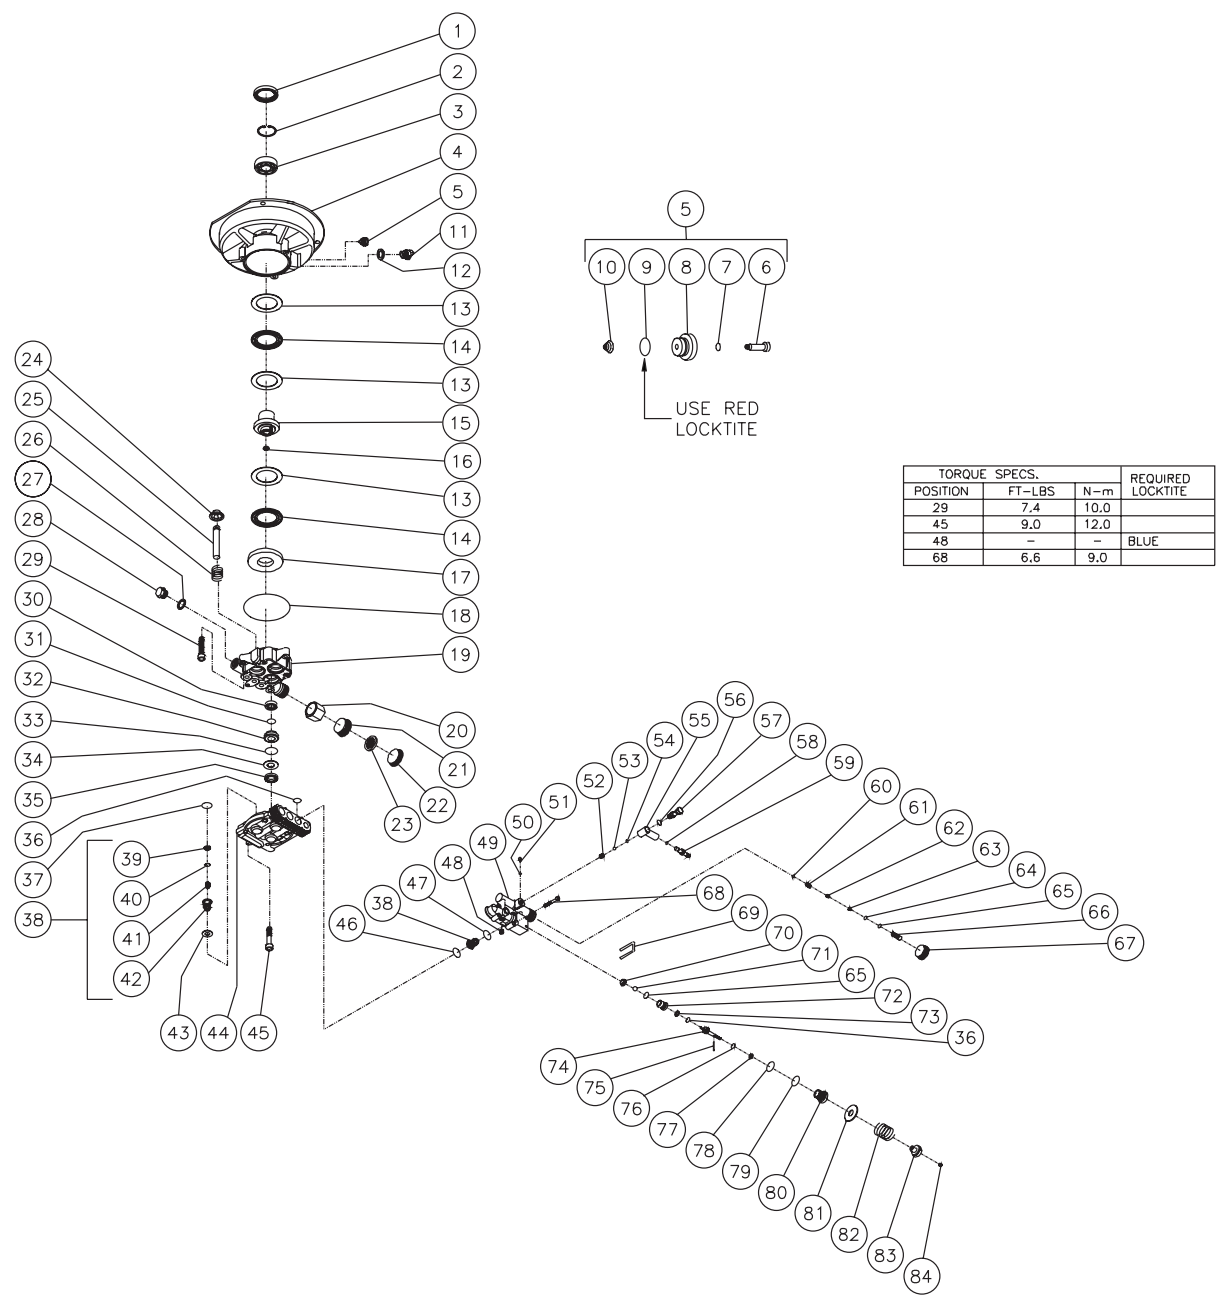

3-0152-072401-EDW

Call for Parts 888-279-9274

3-0152-072401-EDW

PUMP ASSEMBLY (3-0152)											
REF #	DESCRIPTION	PART #	QTY	REF #	DESCRIPTION	PART #	QTY	REF #	DESCRIPTION	PART #	QTY
1	Oil Seal	26-0244	1	32	Packing Retainer	46-0737	3	63	Injector Nozzle	46-0356	1
2	Snap Ring	46-0940	1	33	O-ring	25-0399	3	64	O-ring	25-0362	1
3	Bearing	48-0074	1	34	Back-up Ring	25-0422	3	65	O-ring	25-0248	2
4	Flange	38-0061	1	35	Pressure Seal	46-0744	3	66	Injector Body	46-0360	1
5	Oil Vent Assembly (Inc. 6-10)	22-0223	1	36	O-ring	25-0343	2	67	Plug (For Shipping Only)	N/A	1
6	Oil Vent (See 22-0223)	N/A Sep.	1	37	O-ring	25-0359	3	68	Bolt	27-8893	4
7	O-ring	25-0253	1	38	Valve Complete (Inc. 39-42) (See 70-0191)	N/A Sep.	6	69	U-Clip	46-0741	1
8	Oil Vent (See 22-0223)	N/A Sep.	1	39	Valve Seat (See 70-0191)	N/A Sep.	6	70	Valve Seat Plate (See 70-0192)	N/A Sep.	1
9	O-ring (See 22-0223)	N/A Sep.	1	40	Valve Plate (See 70-0191)	N/A Sep.	6	71	Ball	46-0685	1
10	Oil Vent-Spring (See 22-0223)	N/A Sep.	1	41	Valve Spring (See 70-0191)	N/A Sep.	6	72	Unloader Seat	46-0352	1
11	Oil Sight Glass	39-0117	1	42	Valve Cage-Plastic (See 70-0191)	N/A Sep.	6	73	Backup Ring	25-0247	1
12	O-ring	25-0477	1	43	Shim	46-0745	3	74	Piston Bypass Valve (See 70-0193)	N/A Sep.	1
13	Thrust Washer	48-0056	3	44	Pump Head	46-0658	1	75	Roll Pin	46-0364	1
14	Thrust Needle Roller Bearing	48-0057	2	45	Bolt	27-8892	5	76	O-ring	25-0242	1
15	Wobble Plate	46-0943	1	46	O-ring	25-0360	3	77	Backup Ring	25-0246	1
16	Plug	39-0082	1	47	O-ring	25-0238	4	78	O-ring	25-0231	1
17	Thrust Washer	48-0064	1	48	Plug	27-8197	1	79	O-ring	25-0263	1
18	O-ring	25-0358	1	49	Pump Manifold	46-0740	1	80	Body Bypass Valve	8-0472	1
19	Pump Housing w/Heat Dump Port	46-0746	1	50	O-ring	25-0357	1	81	Washer	28-0295	1
20	Garden Hose Connection	23-0304	1	51	Bolt	27-8894	1	82	Pressure Regulating Spring - 2000 PSI	49-0131	1
21	Garden Hose Adapter	23-0305	1	52	Detergent Injector Spring (See 70-0102)	N/A Sep.	1	83	Pressure Regulating Nut	8-0471	1
22	Plug (For Shipping Only)	N/A	1	53	Detergent Injector Ball (See 70-0102)	N/A Sep.	1	84	Set Screw	27-8895	1
23	Washer	19-0001	1	54	O-ring (See 70-0102)	N/A Sep.	1		Piston Assembly (Includes 24-25)	70-0190	
24	Retainer	46-0663	3	55	Detergent Injector Adapter	46-0636	1		Valve Kit (Includes 37, 38, 46)	70-0191	
25	Piston	46-0664	3	56	O-ring (See 70-0102)	N/A Sep.	1		Injector Repair Kit (Inc. 52-54, 56)	70-0102	
26	Spring	49-0129	3	57	Banjo Fitting	46-0637	1		Unloader Check Valve Kit (Inc. 60-66)	70-0108	
27	Gasket	26-0168	1	58	O-ring	25-0341	1		Unloader Seat Kit (Includes 65, 70-72)	70-0192	
28	Plug	39-0098	1	59	Detergent Injector Hose Barb	46-0638	1		Unloader Stem Kit (Inc. 36, 73-84)	70-0193	
29	Bolt	27-8404	3	60	O-ring	25-0334	1		Manifold Assy. (Inc. 36, 48-57, 60-84)	70-0194	
30	Oil Seal	26-0195	3	61	Check Valve	22-0158	1		Packing Kit (Inc. 3 each item 33 and *34, 35)	70-0195	
31	O-ring	25-0255	3	62	Check Valve Spring	49-0130	1	*NOTE: When replacing Packing Kit, items 34 and 35 will be replaced by Part # 46-0738.			