


PUMP ASSEMBLY (3-0290)

Call for Parts 888-279-9274

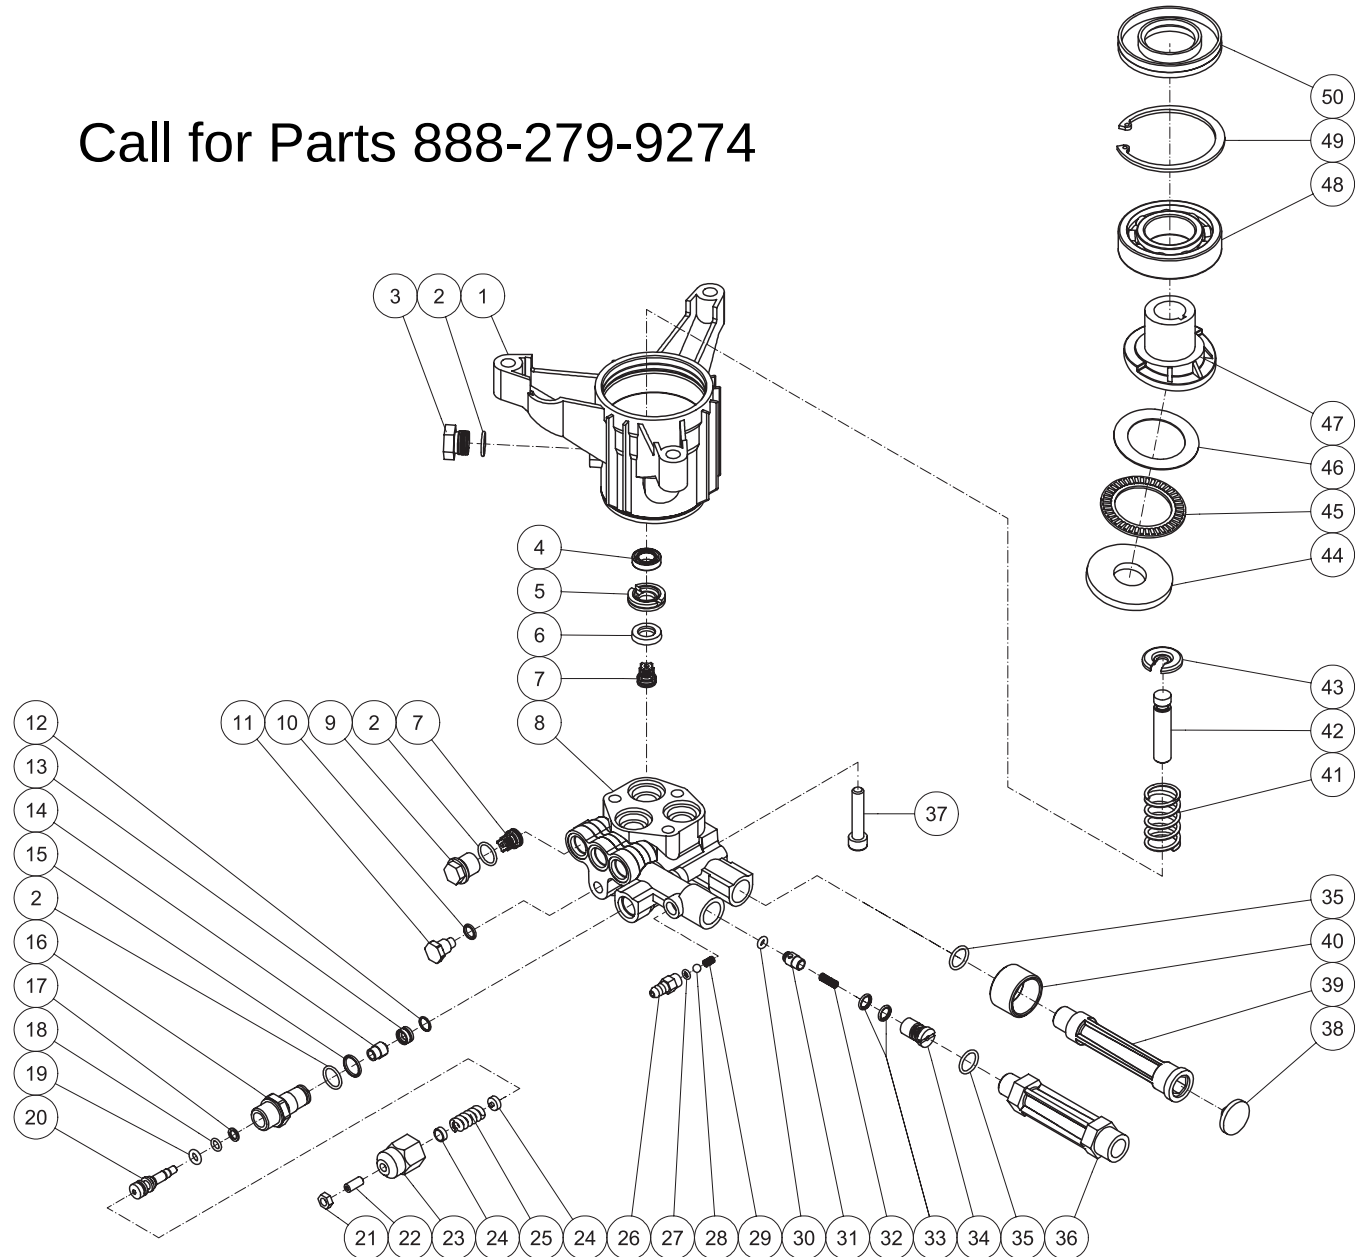

3-0290-111506-JJT

PUMP ASSEMBLY (3-0290)											
REF. #	DESCRIPTION	PART #	QTY.	REF. #	DESCRIPTION	PART #	QTY.	REF. #	DESCRIPTION	PART #	QTY.
1	Pump Housing	-	1	20	Unloader Piston	8-0565	1	39	Inlet Extension	46-1179	1
2	O-ring	25-0325	5	21	Nut	30-6024	1	40	Garden Hose Fitting	46-1178	1
3	Plug	39-0203	1	22	Set Screw	27-9587	1	41	Spring	49-0160	3
4	Piston Oil Seal	-	3	23	Adjustment Barrel	8-0564	1	42	Piston	-	3
5	Packing Retainer	46-1177	3	24	Spring Button	8-0501	2	43	Spring Retainer	46-1183	3
6	High Pressure Seal	-	3	25	Unloader Spring	49-0157	1	44	Thrust Washer	46-0876	1
7	Valve Complete	-	6	26	Hose Barb	56-0869	1	45	Bearing	48-0057	1
8	Pump Head	46-1258	1	27	O-ring	25-0371	1	46	Thrust Washer	48-0056	1
9	Valve Cap	39-0218	3	28	Ball	8-0521	1	47	Wobble Plate Shaft	46-1184	1
10	O-ring	25-0382	1	29	Spring	8-0520	1	48	Ball Bearing	48-0014	1
11	Grub Screw	27-9599	1	30	O-ring	25-0406	1	49	Snap Ring	46-1185	1
12	O-ring	25-0500	1	31	Non-Return Valve	46-1180	1	50	Oil Seal	26-0290	1
13	Unloader Seat	8-0570	1	32	Spring I.D	49-0159	1		Unloader (Inc. 1, 1, 2, 1 each 2, 12-22, 24, 25)	70-0446	
14	Unloader Poppett	8-0569	1	33	O-ring	25-0403	2		Valves (Inc. 6 each 7)	70-0409	
15	O-ring	25-0387	1	34	Detergent Injector	46-1181	1		Pistons (Inc. 3 each 42)	70-0410	
16	Piston Guide	8-0566	1	35	O-ring	25-0536	2		Water Seals (Inc. 3 each 6)	70-0464	
17	Back-up Ring	25-0589	1	36	Outlet Extension	46-1182	1		Oil Seals (Inc. 3, 1 each 4, 50)	70-0412	
18	O-ring	-	1	37	Bolt	27-9590	3		O-ring (Inc. 5, 1, 1, 1, 1, 1, 1, 2, 2 each 2, 12, 15, 18, 19, 27, 30, 33, 35)	70-0413	
19	O-ring	25-0526	1	38	Inlet Filter	19-0001	1				