



PUMP ASSEMBLY (3-0436)

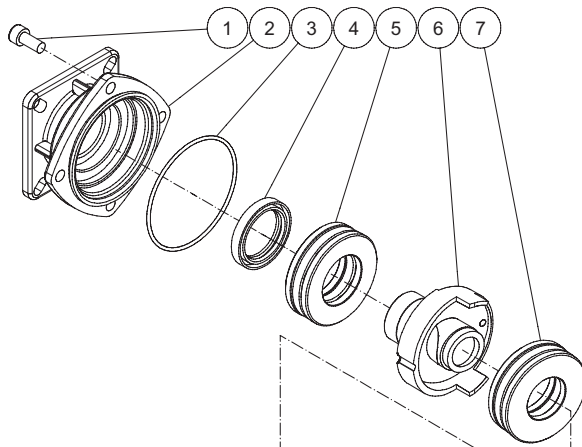

TORQUE SPECIFICATIONS		
POSITION	FT-LBS	NM
1	14.7	20
8	22.1	30
16	14.7	20
17	14.7	20

For parts Call 888-279-9274

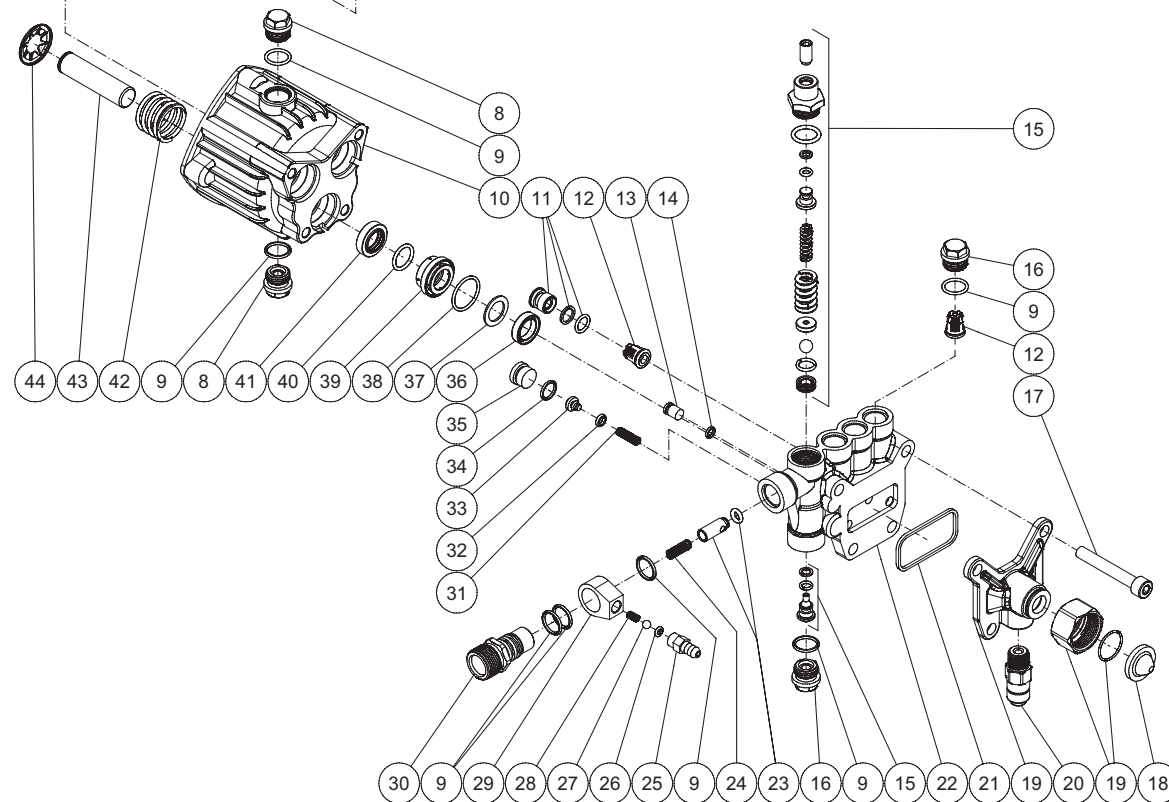

3-0436 113017 CH

3-0436 113017 CH			
PUMP ASSEMBLY			
ITEM	DESCRIPTION	PART #	QTY
1	BOLT	27-8433	4
2	FLANGE	46-1330	1
3	O-RING	25-0605	1
4	OIL SEAL	26-0320	1
5	REAR BEARING	48-0103	1
6	WOBBLE PLATE	46-1612	1
7	FRONT BEARING	48-0104	1
8	PLUG	39-0233	2
9	O-RING (SEE KIT 70-0692)	25-0606	9
10	CRANKCASE	46-1613	1
11	KIT - INLET PLUG ASSEMBLY (SEE KIT 70-0512)	70-0512	3
12	VALVE ASSEMBLY (SEE KIT 70-0516)	70-0516	6
13	PLUG	39-0377	1
14	O-RING	25-0687	1
15	KIT - COMPLETE UNLOADER	70-0646	1
16	PLUG	39-0372	4
17	HEAD BOLT	27-0905	4
18	FILTER	19-0001	1
19	KIT- INLET ASSEMBLY	70-0514	1
20	THERMAL RELIEF VALVE	22-0408	1
21	INLET BODY SEAL	26-0327	1
22	PUMP HEAD	46-1614	1
23	KIT - NON-RETURN VALVE	70-0511	1
24	NON-RETURN VALVE SPRING	46-1332	1
25	HOSE BARB (SEE KIT 70-0692)	46-0869	1
26	O-RING (SEE KIT 70-0293 AND 70-0692)	25-0371	1
27	BALL (SEE KIT 70-0293 AND 70-0692)	8-0521	1
28	SPRING (SEE KIT 70-0293 AND 70-0692)	8-0520	1
29	BARB SEAT (SEE KIT 70-0692)	46-1643	1
30	OUTLET FITTING (SEE KIT 70-0692)	SEE KIT	1
31	SPRING (SEE KIT 70-0657)	46-1604	1
32	O-RING (SEE KIT 70-0657)	25-0690	1
33	SPRING BASE (SEE KIT 70-0657)	46-1603	1
34	O-RING (SEE KIT 70-0657)	25-0689	1
35	PLUG (SEE KIT 70-0657)	39-0378	1
36	WATER SEAL (SEE KIT 70-0515)	SEE KIT	3
37	WATER SEAL WASHER (SEE KIT 70-0515)	SEE KIT	3
38	O-RING (SEE KIT 70-0515)	SEE KIT	3
39	LOCATING RING	46-1586	3
40	O-RING (SEE KIT 70-0515)	SEE KIT	3
41	OIL SEAL	26-0325	3
42	PLUNGER SPRING	46-1615	3
43	PISTON	46-1587	3
44	SPRING RETAINER	46-1616	3

REPLACEMENT KITS				
KIT #	DESCRIPTION	ITEMS	# OF ASSEMBLIES	# OF CYLINDERS
70-0293	KIT - INJECTOR	26-28	1	-
70-0692	KIT - OUTLET/BARB	9, 25, 26, 27, 28, 29, 30	3, 1, 1, 1, 1, 1	-
70-0512	KIT - INLET PLUG	11	3	3
70-0515	KIT - PACKINGS	36, 37, 38, 40	3, 3, 3, 3	3
70-0516	KIT - VALVES W/ O-RING	12	6	3
70-0657	KIT - EZ START	31-35	1	-