


UNLOADER ASSEMBLY (8-0373)

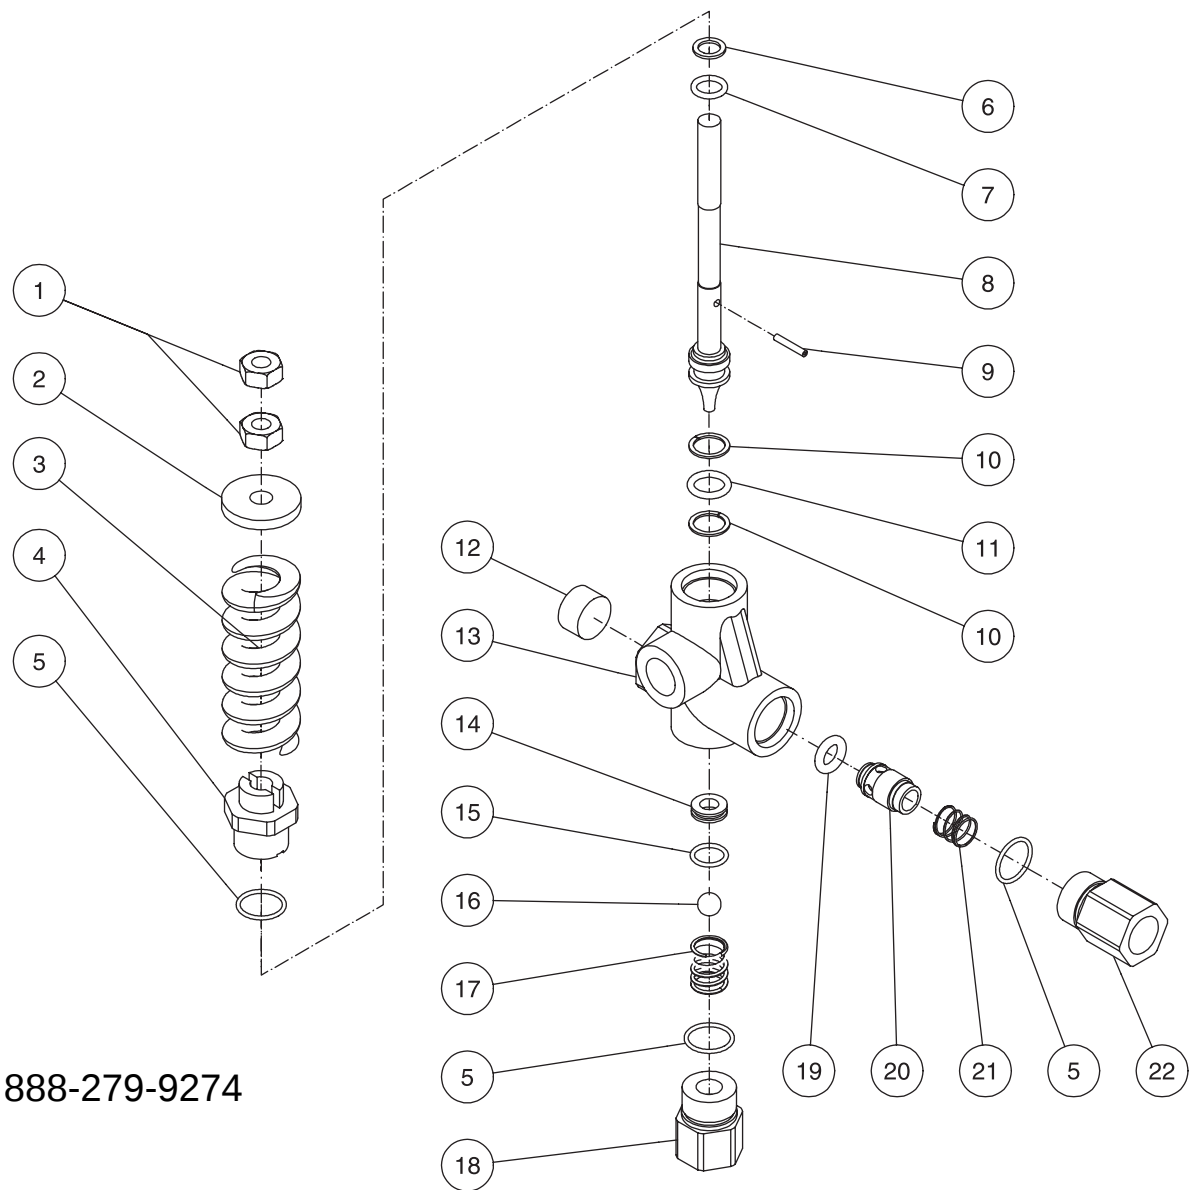

Call for Parts 888-279-9274

8-0373-090105-IJT

UNLOADER ASSEMBLY (8-0373)

REF. #	DESCRIPTION	PART #	QTY.		REF. #	DESCRIPTION	PART #	QTY.
1	Hex Nut	30-7203	2		13	Valve Housing	8-0377	1
2	Spring Guide	8-0278	1		14	Seat	8-0272	1
3	Spring	49-0098	1		15	O-ring	25-0190	1
4	Piston Housing	8-0374	1		16	Ball	8-0273	1
5	O-ring	25-0189	3		17	Ball Spring	49-0059	1
6	Back-up Ring	8-0277	1		18	Inlet Connection	8-0379	1
7	O-ring	25-0313	1		19	O-ring	25-0193	1
8	Piston	8-0375	1		20	Check Valve	22-0202	1
9	Pin	43-0059	1		21	Check Valve Spring	49-0058	1
10	Back-up Ring	8-0276	2		22	Outlet Connection	8-0376	1
11	O-ring	25-0314	1			Unloader Repair Kit (Inc. 5-7, 10, 11, 14, 16, 19)	8-0380	
12	Plug	39-0070	1			Complete Unloader (Inc. 1-22)	8-0373	

Call for Parts 888-279-9274