


UNLOADER (8-0494) & DETERGENT INJECTOR (46-0590) ASSEMBLY

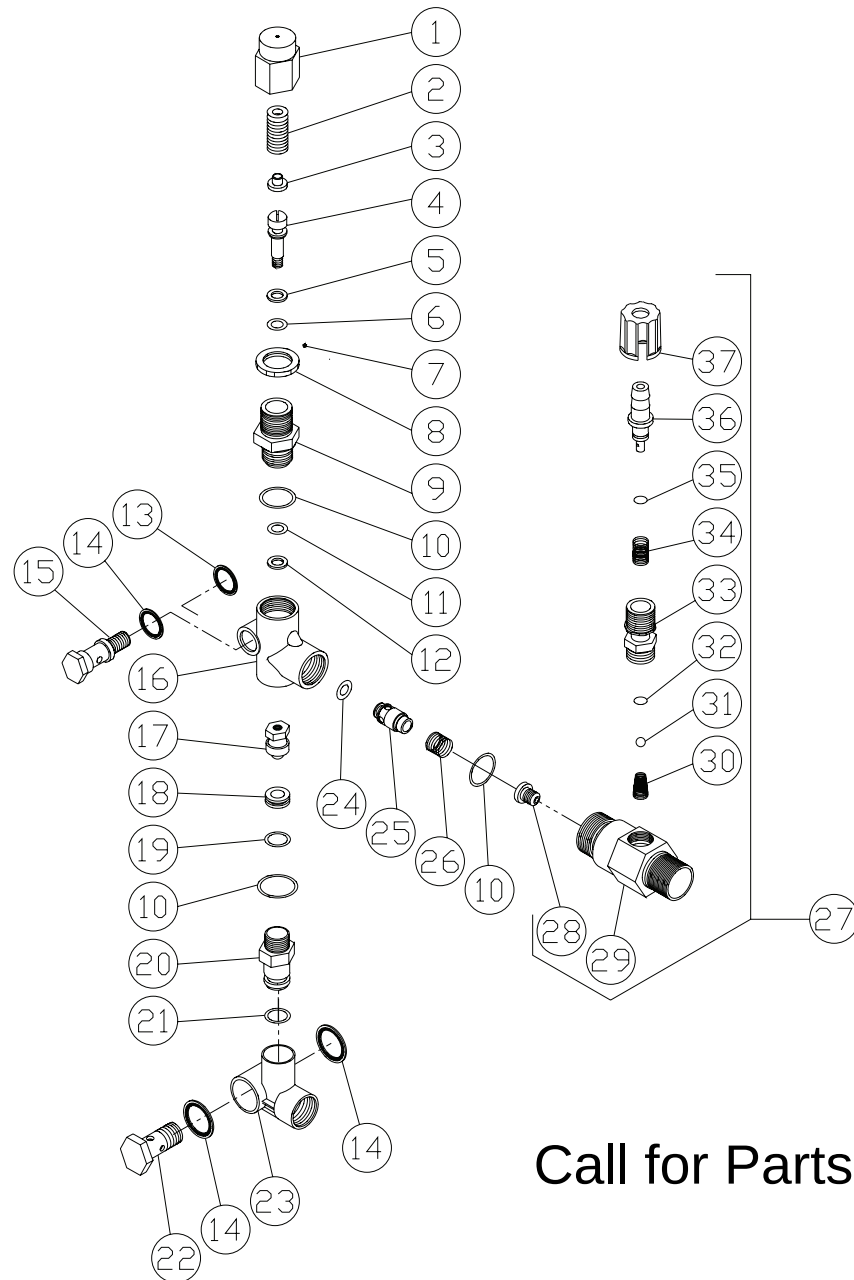

Call for Parts 888-279-9274

UNLOADER (8-0494) & DETERGENT INJECTOR (46-0590) ASSEMBLY								
REF. #	DESCRIPTION	PART #	QTY.		REF. #	DESCRIPTION	PART #	QTY.
1	Adjusting Cap	39-0092	1		21	O-ring	25-0376	1
2	Spring	49-0120	1		22	Connector	23-0285	1
3	Spring Retainer	8-0421	1		23	Bypass Fitting	N/A	1
4	Piston Stem	46-0324	1		24	O-ring	25-0375	1
5	Back-up Ring	25-0206	1		25	Flow Balancer	8-0426	1
6	O-ring (See 70-0168)	N/A Sep.	1		26	Spring	49-0121	1
7	Set Screw	8-0479	1		27	Detergent Injector- 2.1mm	46-0590	1
8	Locknut	46-0651	1		28	Orifice- 1.80mm	50-0146	1
9	Piston Retainer	8-0424	1		29	Injector Body	N/A	1
10	O-ring (See 70-0168)	N/A Sep.	3		30	Spring (See 852-0056)	N/A Sep.	1
11	O-ring (See 70-0168)	N/A Sep.	1		31	Ball (See 852-0056)	N/A Sep.	1
12	Back-up Ring	25-0203	1		32	O-ring (See 852-0056)	N/A Sep.	1
13	Washer	8-0433	1		33	Piston Retainer	N/A	1
14	Washer	8-0427	3		34	Spring	49-0056	1
15	Connector	23-0286	1		35	O-ring (See 852-0056)	N/A Sep.	1
16	Body	N/A	1		36	Barb	50-0157	1
17	Valve and Ball Assembly	46-0320	1		37	Adjustable Knob	50-0158	1
18	Bypass Seat	8-0430	1			Unloader Repair Kit (Inc. 4-6, 10-12, 17-19, 21)	70-0168	
19	O-ring	25-0202	1			Injector Repair Kit (Inc. 30-32, 35)	852-0056	
20	Bypass Fitting	N/A	1					