


UNLOADER ASSEMBLY (8-0522)

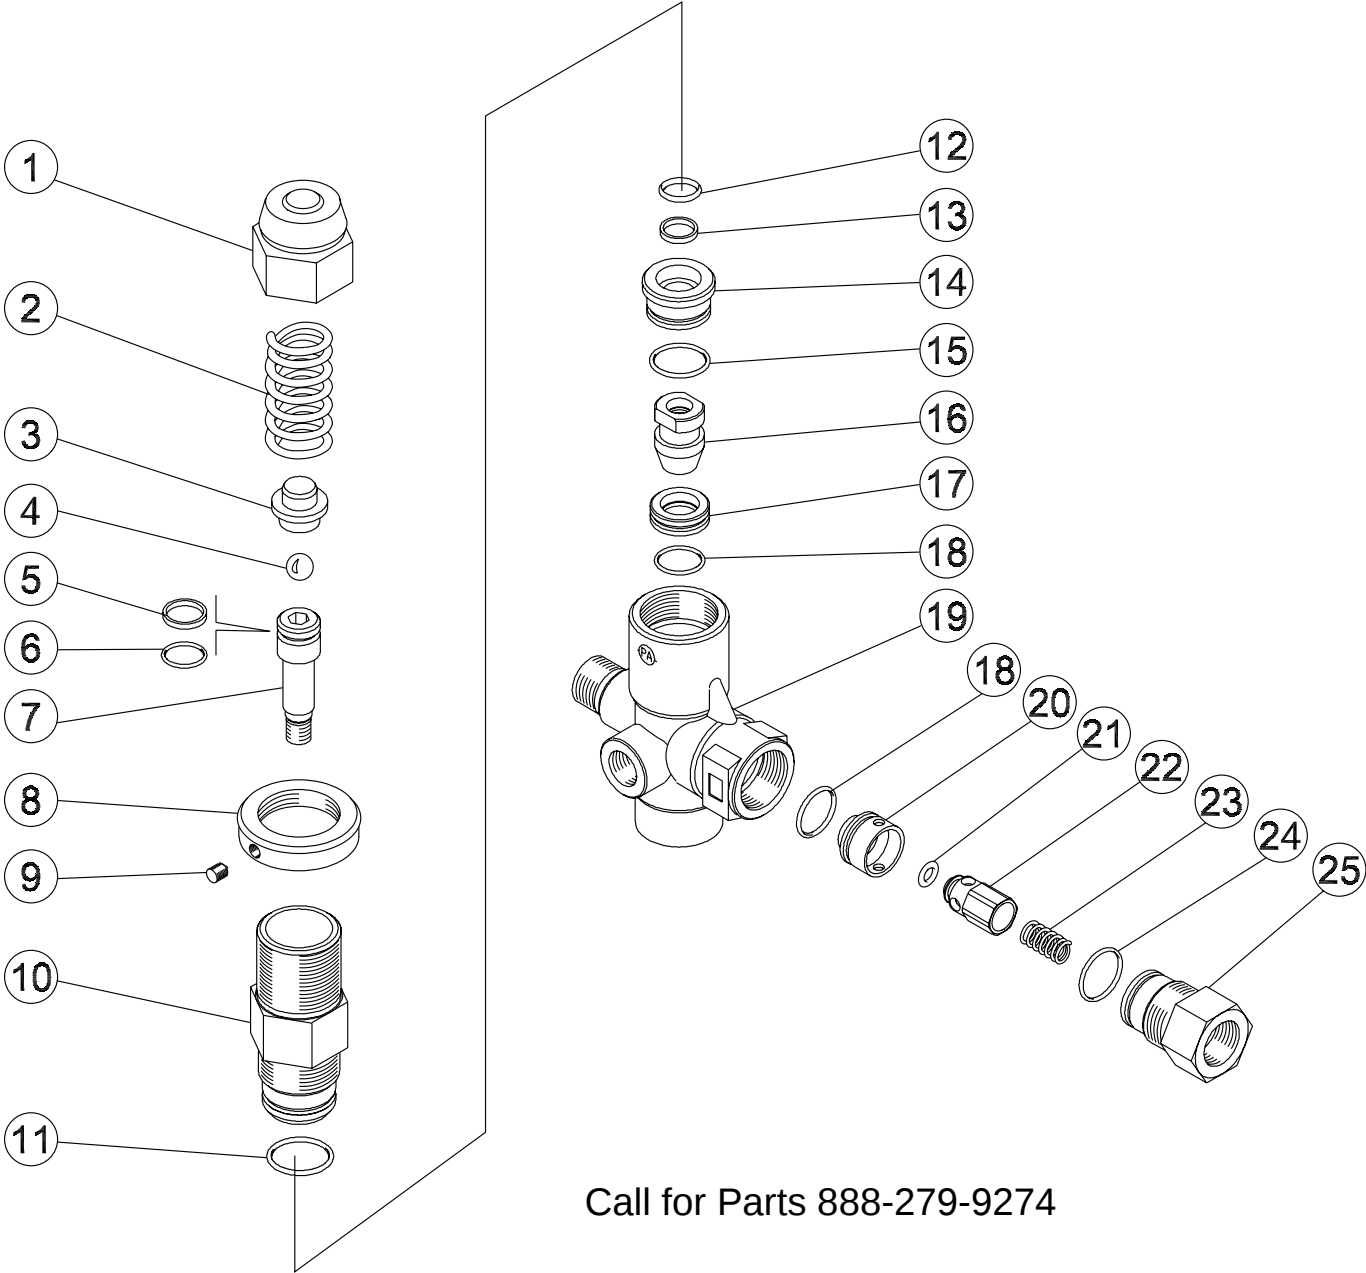

Call for Parts 888-279-9274

UNLOADER ASSEMBLY (8-0522)

REF. #	DESCRIPTION	PART #	QTY.		REF. #	DESCRIPTION	PART #	QTY.
1	Brass Cap	8-0534	1		15	O-ring	25-0368	1
2	Spring	49-0149	1		16	Shutter	8-0540	1
3	Spring Guide	8-0535	1		17	Seat	8-0541	1
4	Ball	8-0318	1		18	O-ring	25-0220	2
5	Back-up Ring (See 70-0342)	N/A Sep.	1		19	Valve Body	8-0542	1
6	O-ring (See 70-0342)	N/A Sep.	1		20	Check Valve Seat	8-0543	1
7	Piston	8-0536	1		21	O-ring	25-0369	1
8	Lock Ring	8-0537	1		22	Check Valve	8-0486	1
9	Set Screw	8-0408	1		23	Spring	49-0150	1
10	Piston Housing	8-0538	1		24	O-ring	25-0325	1
11	O-ring	25-0189	1		25	Nipple	8-0485	1
12	Back-up Ring (See 70-0343)	N/A Sep.	1			Upper Seal Kit (Inc. 5, 6)	70-0342	1
13	O-ring (See 70-0343)	N/A Sep.	1			Lower Seal Kit (Inc. 12, 13)	70-0343	1
14	Spacer	8-0539	1					

Call for Parts 888-279-9274