


UNLOADER ASSEMBLY (8-0572)

Cal for parts 888-279-9274

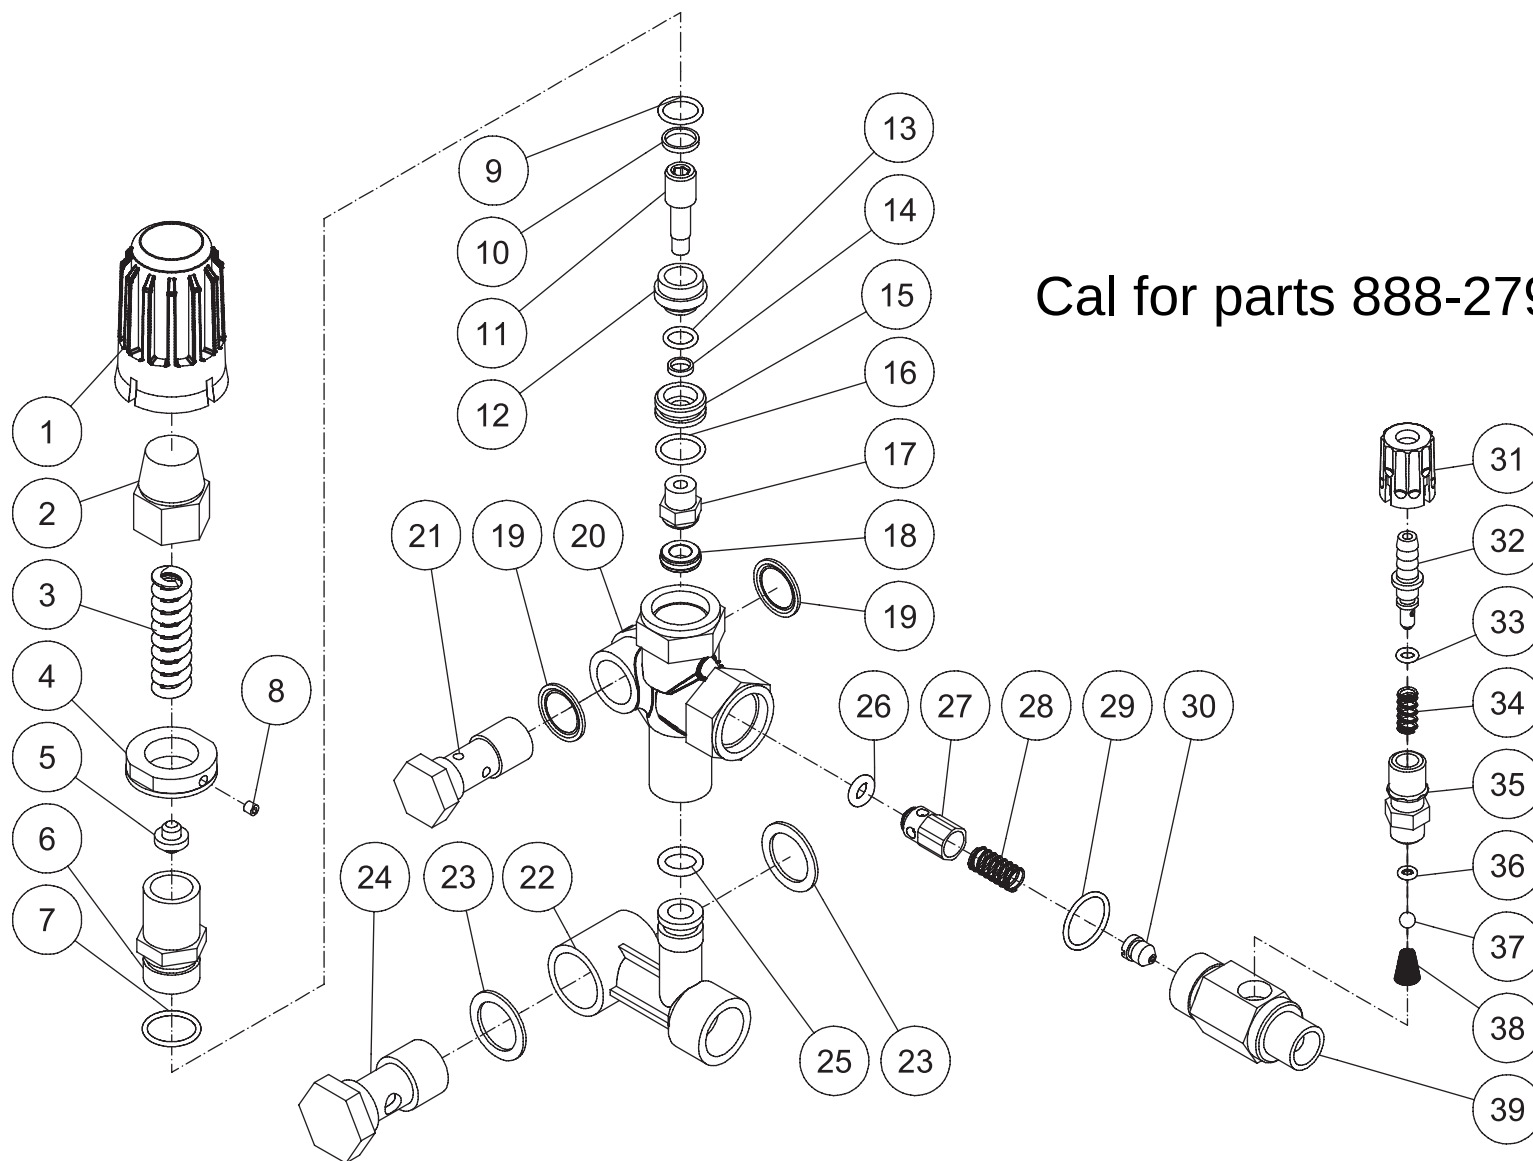

UNLOADER ASSEMBLY

ITEM	DESCRIPTION	PART #	QTY		ITEM	DESCRIPTION	PART #	QTY
1	ADJUSTMENT KNOB	7-0199	1		21	BANJO BOLT	8-0582	1
2	ADJUSTING CAP	8-0573	1		22	INLET MANIFOLD	N/A	1
3	SPRING	49-0163	1		23	SEALING WASHER	28-1052	2
4	RING NUT	8-0574	1		24	BANJO BOLT	8-0583	1
5	SPRING GUIDE PIN	8-0575	1		25	O-RING	N/A	1
6	PISTON HOLDER	8-0576	1		26	O-RING	N/A	1
7	O-RING	N/A	1		27	SHUTTER PIN	8-0584	1
8	SET SCREW	8-0479	1		28	SPRING	49-0150	1
9	O-RING	N/A	1		29	O-RING	N/A	1
10	BACK-UP RING	N/A	1		30	ORIFICE	50-0198	1
11	PISTON	8-0577	1		31	ADJUSTMENT KNOB	N/A	1
12	SPACER RING	8-0578	1		32	ADJUSTABLE SHUTTER BARB	N/A	1
13	O-RING	N/A	1		33	O-RING	N/A	1
14	BACK-UP RING	N/A	1		34	SPRING	N/A	1
15	SPACER RING	8-0579	1		35	PISTON RETAINER	N/A	1
16	O-RING	N/A	1		36	O-RING	25-0645	1
17	SHUTTER PIN	8-0580	1		37	BALL	50-0199	1
18	SEAT AND O-RING	8-0581	1		38	SPRING	49-0166	1
19	WASHER	8-0427	2		39	INJECTOR BODY	N/A	1
20	UNLOADER BODY	N/A	1					

Call for Parts 888-279-9274