


UNLOADER ASSEMBLY (8-0608)

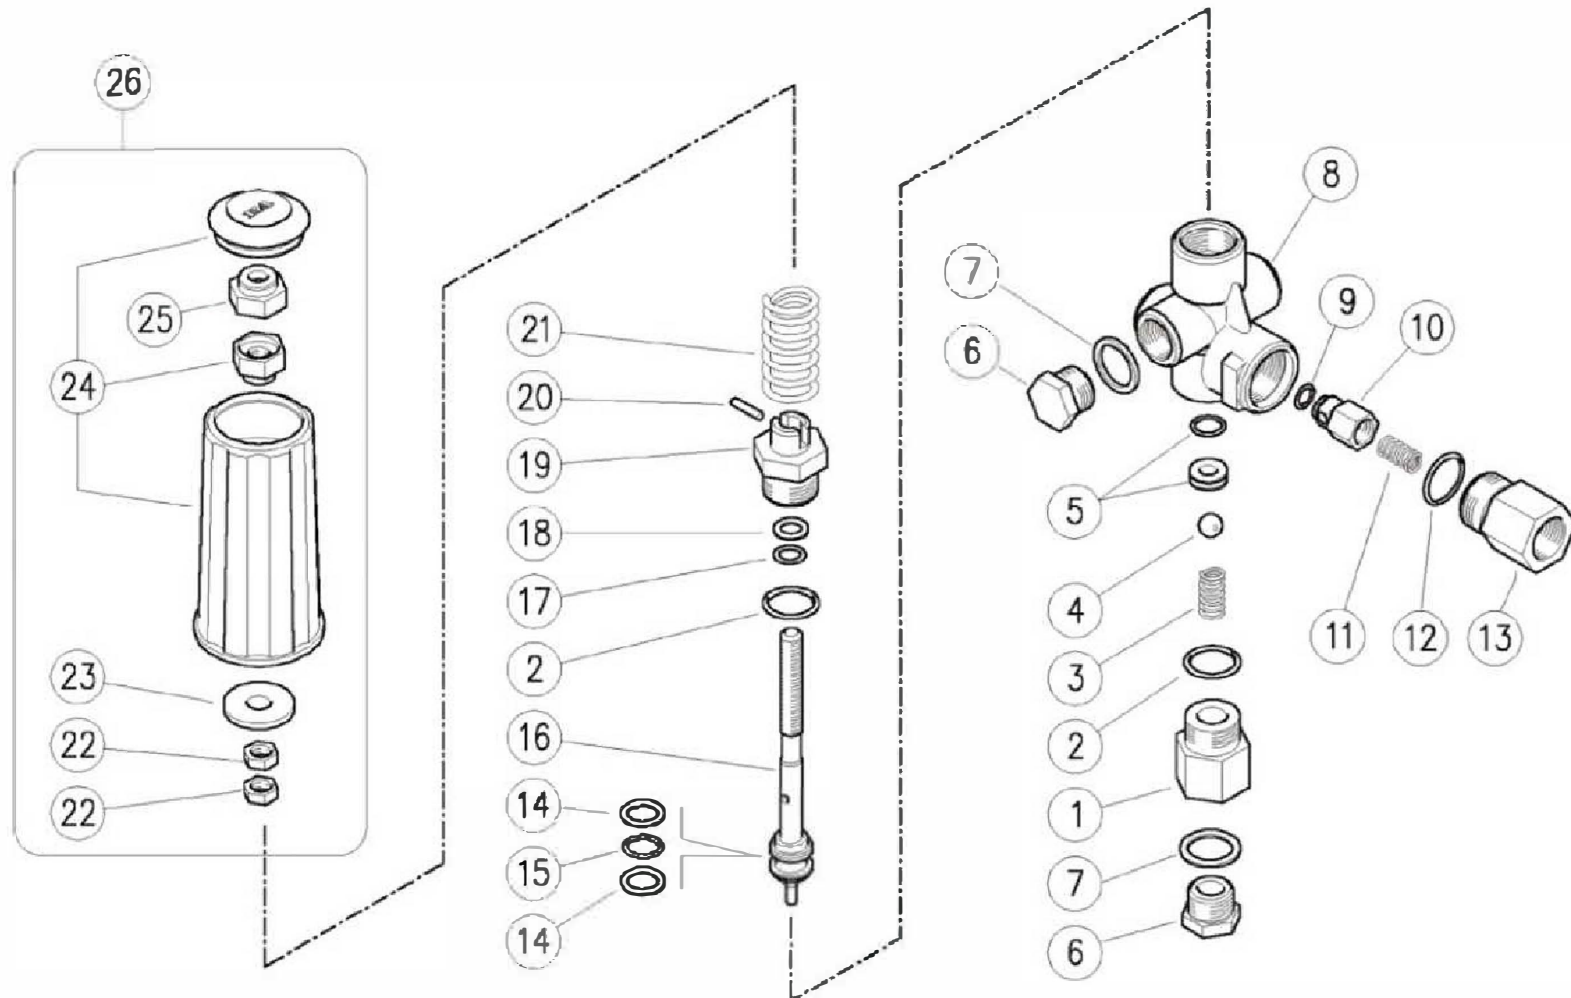

Replacement Parts 888-279-9274

8-0608 100510-AJH			
UNLOADER			
ITEM	DESCRIPTION	MI-T-M #	QTY
1	INLET FITTING, 3/8 NPT-F - BRASS	23-0497	1
2	O-RING, 1.78 X 17.7MM	-	2
3	BALL SPRING, 1.4 X 10 X 16MM	8-0609	1
4	SS BALL, 13/32"	-	1
5	SEAT, 8MM & O-RING	-	1
6	PLUG, 3/8 NPT-M - BRASS	23-0499	2
7	WASHER, 17.7 X 22 X 1.5MM	-	2
8	BRASS HOUSING, 3/8 NPT	8-0623	1
9	O-RING, 3 X 6MM	-	1
10	CHECK VALVE - SS	8-0486	1
11	SPRING, 0.7 X 9 X 20MM - SS	8-0616	1
12	O-RING, 1.78 X 18.77MM	-	1
13	OUTLET FITTING, 3/8 NPT-F - BRASS	23-0498	1
14	BACK-UP RING, OPEN, 11.5 X 15.9 X 1.2MM	-	2
15	O-RING, 2.62 X 10.77MM	-	1
16	VALVE PISTON - SS	8-0611	1
17	O-RING, 2.62 X 7.7MM	-	1
18	BACK-UP RING, 8 X 12.6 X 1.2MM	-	1
19	PISTON HOLDER, BRASS	8-0612	1
20	LOCKING PIN, 3 X 14MM - SS	8-0613	1
21	SPRING, 5.7 X 26 X 53MM	8-0614	1
22	HEX NUT, M8 - BRASS	8-0622	2
23	WASHER, 9.2 X 24 X 0.5MM	8-0621	1
24	KNOB W/PLUG	8-0620	1
25	HEX LOCKNUT, M8 - ZINC	8-0618	1
26	KNOB KIT	8-0624	1
-	KIT, SEAL REPAIR: ITEM #2, 4, 5, 9, 12, 14, 15, 17, 18	70-0549	-