



Mi-T-M[®] CORPORATION

**8545 Kapp Dr., Peosta, IA 52068
319-556-7484 / Fax 319-556-1235**

(Serial #185517 -)

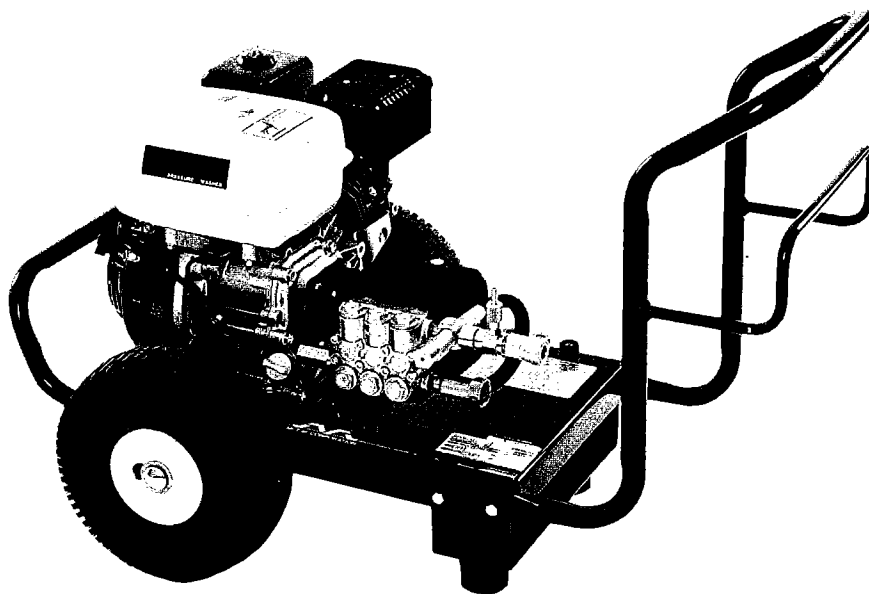


CD-1504-0MHB PARTS LISTING

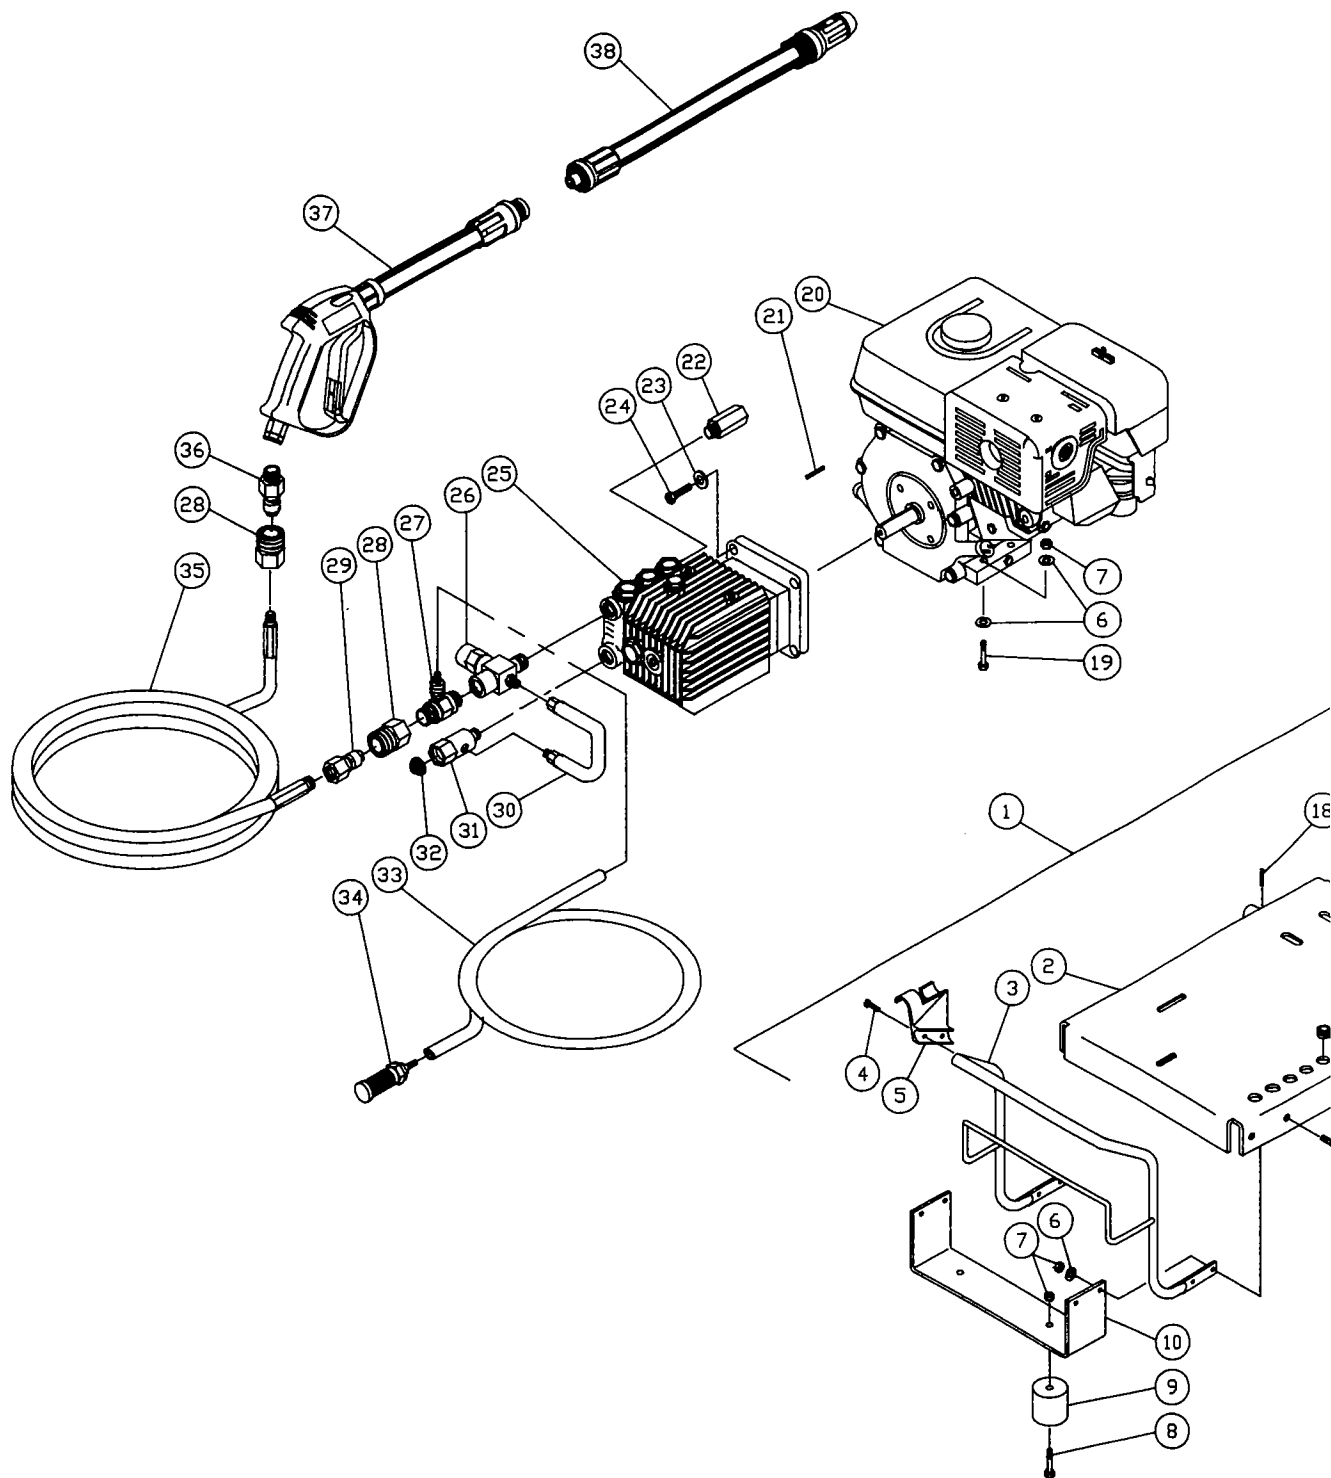


CD-1504-0MHB/0MVB FRAME ASSEMBLY LISTING

Ref. No.	Description	Part No.
1	Base plate assembly	852-0003
2	Base plate	5-0062
3	Front handle.....	7-0100
4	Screw	27-3062
5	Wand holder	62-0085
6	Washer	28-0003
7	Locknut	30-0157
8	Bolt	27-0068
9	Isolator	14-0008
10	Underbracket	13-0002
11	Grommet	33-0002
12	Hub cap	33-0018
13	Axle.....	20-0004
14	Wheel	14-0017
15	Washer	28-0008
16	Bolt	27-0067
17	Rear handle.....	7-0103
18	Roll pin	43-0002
19	Bolt	27-0070
20	Engine-Honda.....	1-0013
	Engine-Vanguard	1-0069
21	Key-engine	43-0073
22	Heat dump valve	22-0114
23	Washer	29-0155
24	Bolt	27-0846
25	Pump.....	3-0092
	Pump/unloader assembly: (Includes items 25-27 and 30-34)	3-0088
26	Unloader.....	8-0314
27	Detergent injector	50-0067
28	Quick connect socket	17-0004
29	Quick connect plug.....	17-0006
30	By-pass hose.....	15-0094
31	Garden hose inlet	23-0148
32	Inlet strainer	19-0001
33	Detergent hose (4 feet required)*	15-0021
34	Detergent strainer	19-0050
35	Hose.....	15-0003
36	Quick connect plug.....	17-0005
37	Gun and lance assembly	16-0167
38	Variable nozzle assembly.....	16-0175

* Order in 1 foot lengths

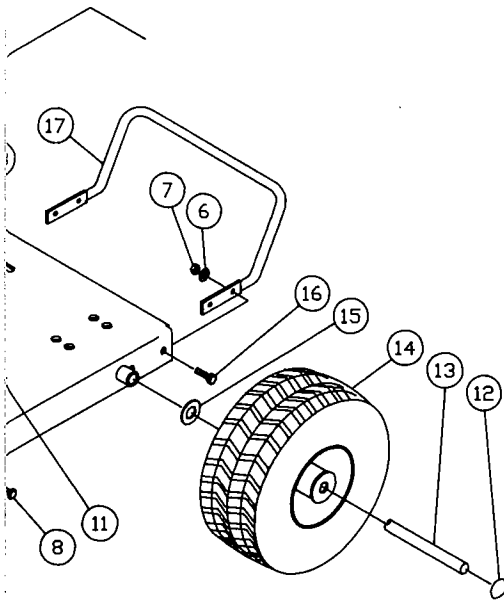


GUN, HOSE, WAND ASSEMBLY EXPLODED VIEW

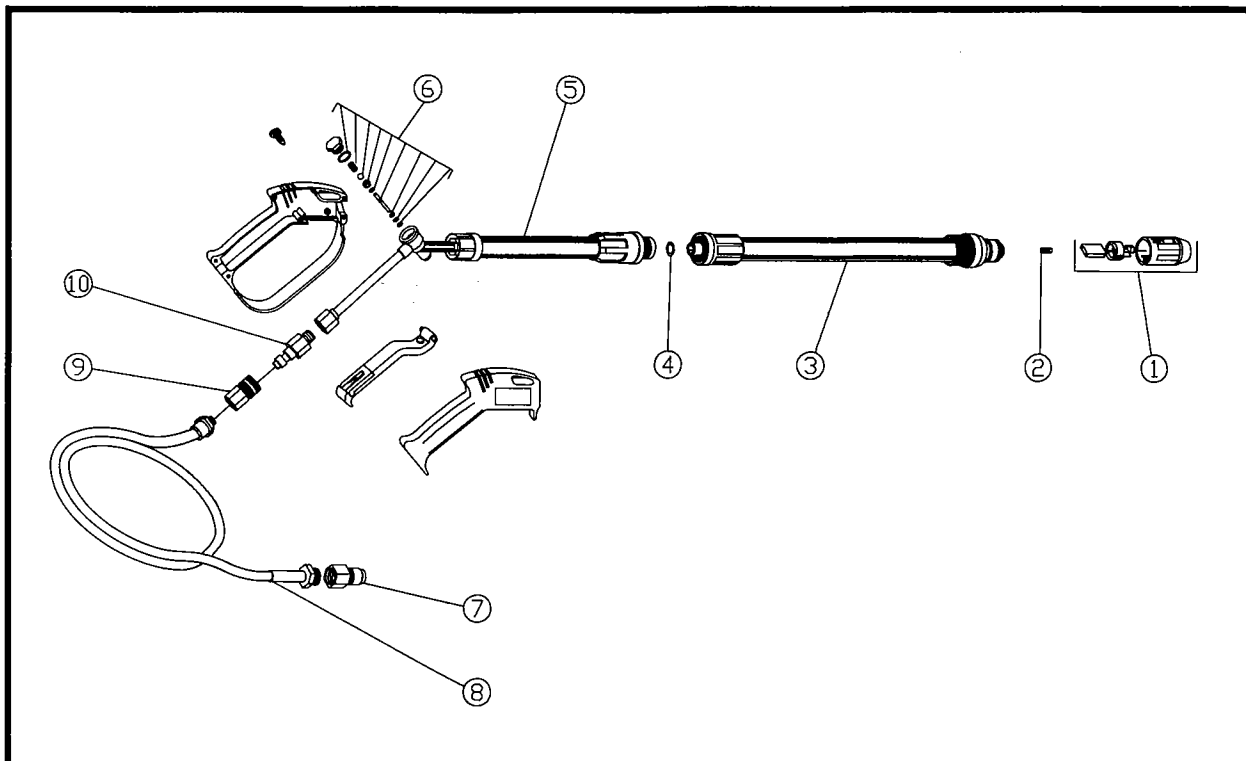

GUN, HOSE, WAND ASSEMBLY PARTS LISTING

Ref. No.	Description	Part No.
1	Angle regulator kit	16-0203
2	Pressure nozzle	18-0229
3	Lance assembly complete (Includes items 1, 2 and 4).....	16-0175
4	O-ring	25-0259
5	Gun assembly complete (Includes item 6)	16-0167
6	Gun repair kit	16-0198
7	Quick connect	17-0006
8	Hose	15-0003
9	Quick connect	17-0004
10	Quick connect plug	17-0005
	Hose assembly complete.....	851-0007

PUMP ASSEMBLY (3-0088) EXPLODED VIEW

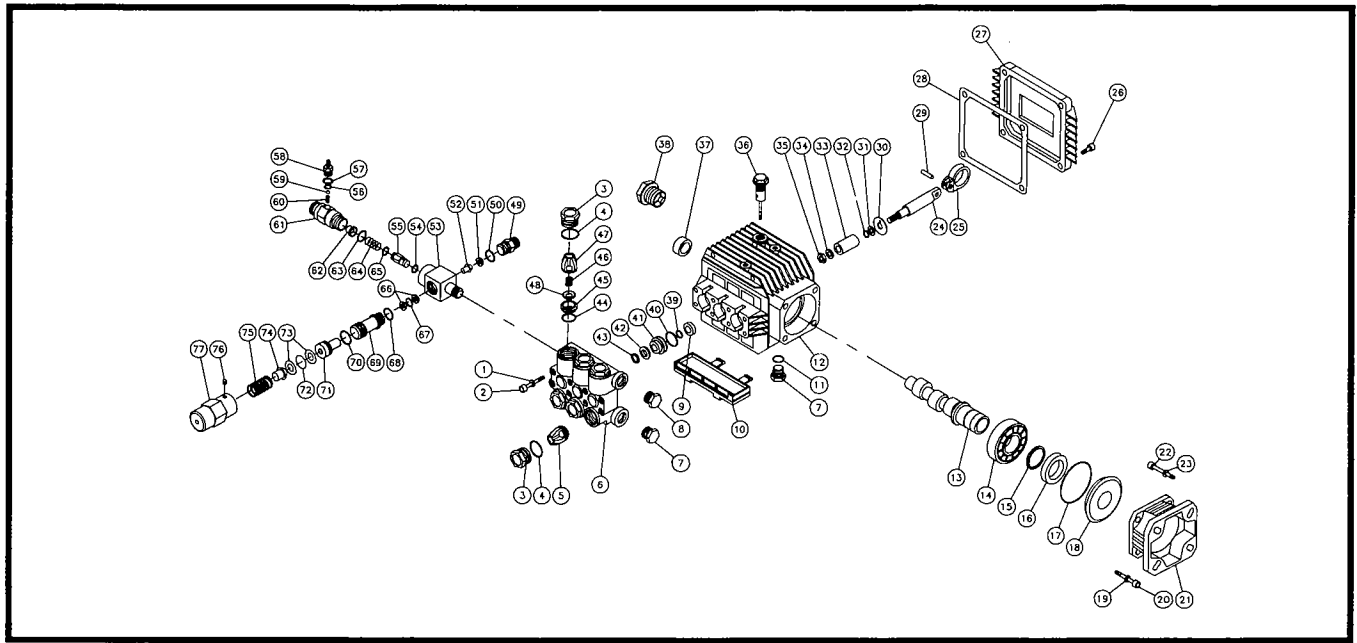

PUMP ASSEMBLY (3-0088) PARTS LISTING

Ref. No.	Description	Part No.	Ref. No.	Description	Part No.
1	Washer	29-0153	43	Head ring	46-0156
2	Screw	27-8406	44	O-ring	
3	Valve cap	39-0035	45	Valve seat	(Not available separately. Must
4	O-ring	25-0012	46	Spring	order complete Valve assembly,
5	Valve assembly (Includes items 44-48)	22-0056	47	Valve cage	item 5, or Valve kit #852-0008)
6	Manifold assembly valve body	46-0163	48	Valve plate	
7	Plug	39-0018	49	Return fitting	8-0299
8	Plug	39-0017	50	O-ring	25-0214
9	Oil seal	26-0111	51	Piston seat	8-0298
10	Protector	46-0229	52	Piston ball	8-0297
11	O-ring	25-0052	53	Shurlok body	8-0296
12	Crankcase	46-0221	54	O-ring	25-0218
13	Crankshaft	46-0321	55	Back flow check	8-0300
14	Bearing	48-0021	56	O-ring	25-0219
15	Snap ring	46-0245	57	O-ring	25-0217
16	Oil seal	26-0126	58	Hose barb	50-0070
17	O-ring	25-0060	59	Ball	50-0072
18	Spacer	46-0087	60	Spring	49-0069
19	Washer	29-0153	61	Injector body	50-0071
20	Screw	27-8409	62	Nozzle	50-0069
21	Flange	38-0021	63	O-ring	25-0216
22	Screw	27-0846	64	Check spring	8-0301
23	Washer	29-0154	65	O-ring	25-0215
24	Connecting rod	46-0149	66	Body back-up ring	8-0308
25	Connecting rod end	46-0152	67	O-ring	25-0213
26	Screw	27-8409	68	O-ring	25-0211
27	Crankcase cover	46-0151	69	Barrel stem retainer	23-0147
28	Cover gasket	26-0114	70	O-ring	25-0210
29	Connecting rod pin	43-0044	71	Piston	8-0315
30	Flinger washer	46-0167	72	O-ring	25-0209
31	Back-up ring	25-0143	73	Piston back-up ring	8-0307
32	O-ring	25-0045	74	Spring seat	8-0309
33	Plunger	46-0148	75	High pressure spring	49-0068
34	Washer	46-0166	76	Stop adjusting knob	7-0082
35	Nut	46-0168	77	Adjusting knob	7-0081
36	Oil dipstick	46-0143		Pump assembly complete	3-0088
37	Needle bearing	48-0019		Valve kit (Includes 6 ea. items 4 & 5)	852-0008
38	Sight gauge	46-0114		Packing kit (Includes 3 ea. items 39-43)	46-0251
39	O-ring	25-0128		Unloader check valve kit	
40	O-ring	25-0141		(Includes items 54, 64 & 65)	852-0087
41	Packing retainer	46-0158		Detergent injector kit	
42	Packing	26-0124		(Includes items 56, 57, 59 & 60)	852-0086