


Mi-T-M[®] CORPORATION

8545 Kapp Dr., Peosta, IA 52068
319-556-7484 / Fax 319-556-1235

For parts Call 888-279-9274





CW-3004-3MGB & CW-3004-3MGH PARTS LISTING

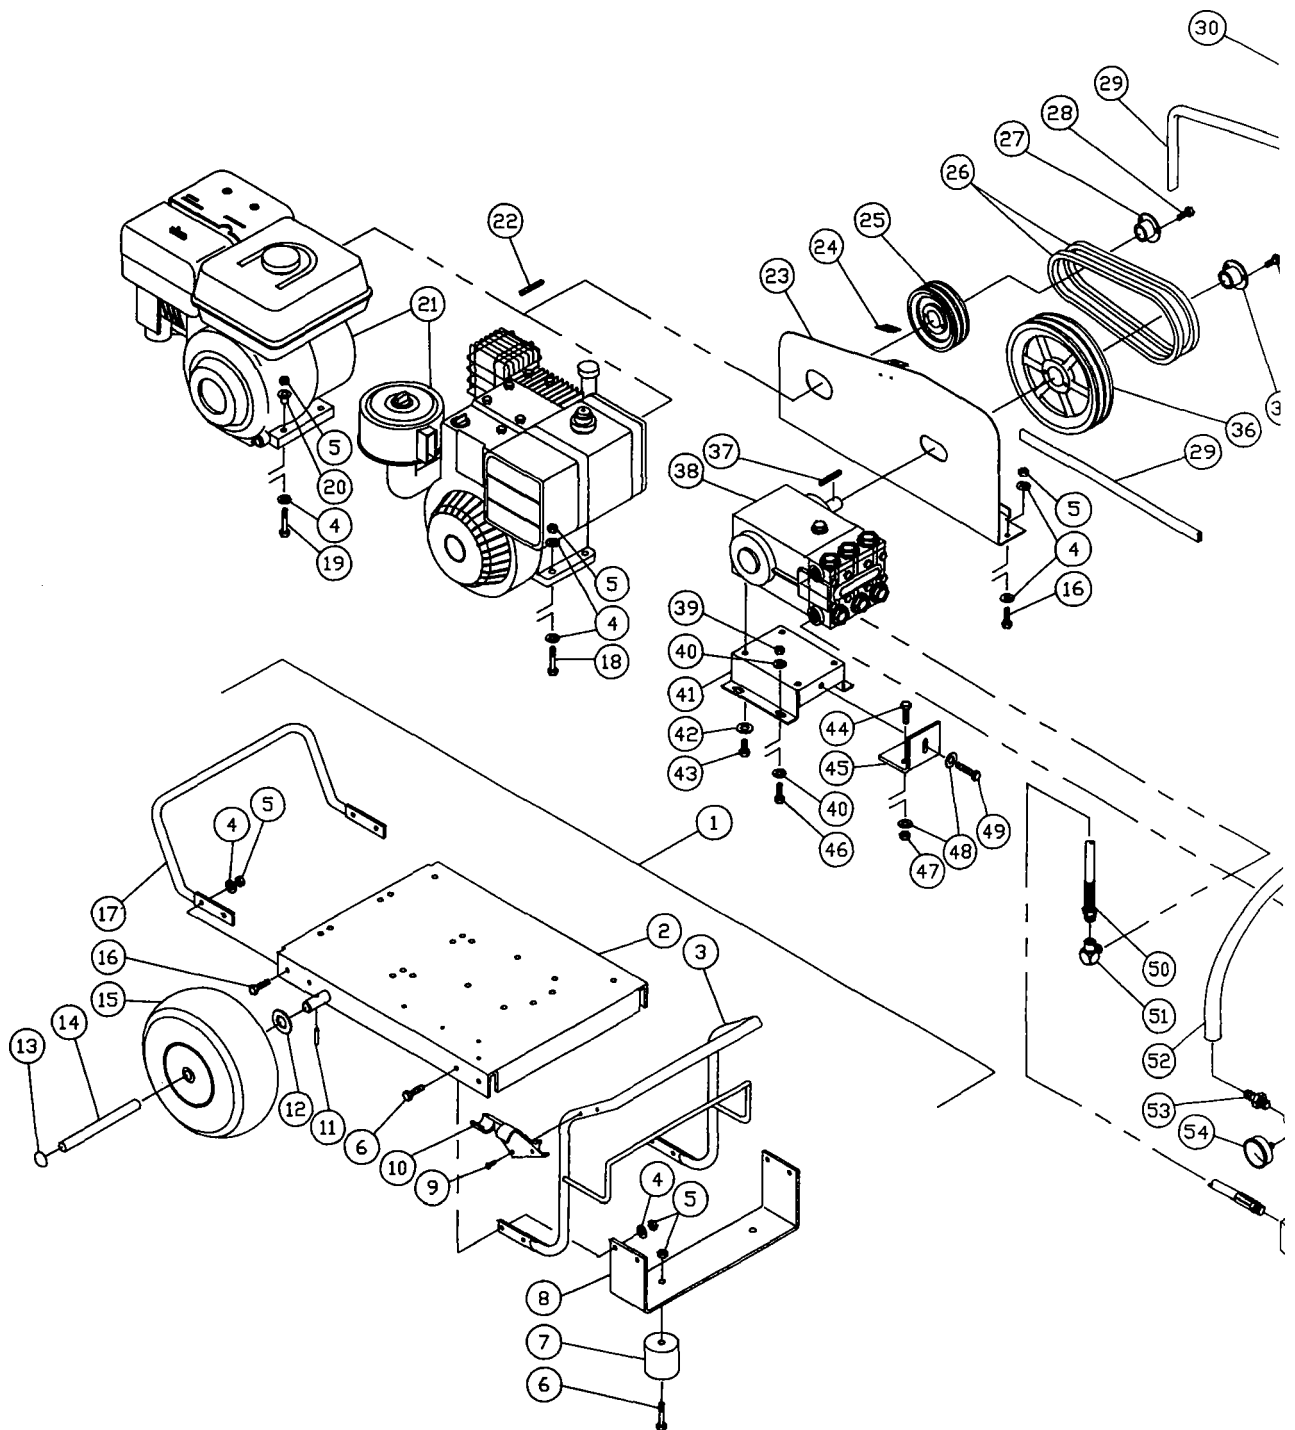


For parts Call 888-279-9274

CW-3004-3MGB/3MGH FRAME ASSEMBLY PARTS LISTING

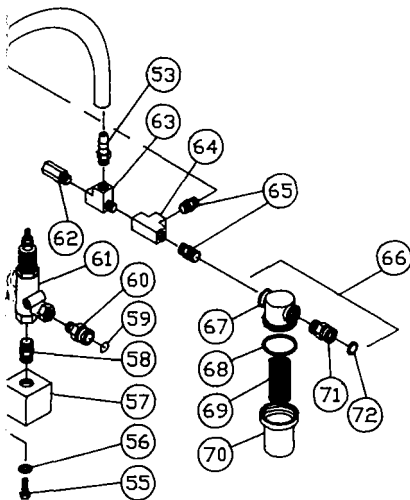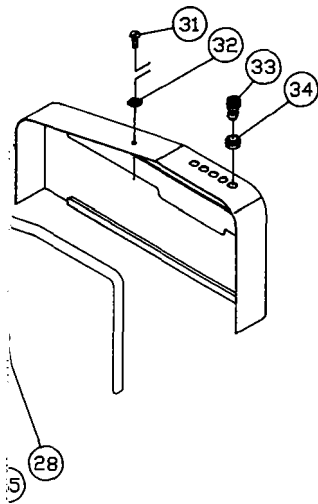

Ref. No.	Description	Part No.
1.	Base plate assembly	851-0210
2.	Base plate	5-0078
3.	Front handle	7-0101
4.	Washer	28-0003
5.	Locknut	30-0157
6.	Bolt	27-0068
7.	Isolator	14-0008
8.	Underbracket	13-0042
9.	Screw	27-3062
10.	Wand holder	62-0085
11.	Roll pin	43-0002
12.	Washer	28-0008
13.	Hub cap	33-0018
14.	Axle	20-0008
15.	Wheel	14-0006
16.	Bolt	27-0067
17.	Rear handle	7-0104
18.	Bolt-Briggs	27-0071
19.	Bolt-Honda	27-0070
20.	Shim-Honda only	33-0169
21.	Engine-Briggs	1-0005
	Engine-Honda	1-0039
22.	Key	43-0078
23.	Beltguard back assembly	851-0215
24.	Slip-on receptacle	33-0198
25.	Sheave	10-0029
26.	Belt	11-0036
27.	Bushing	9-0005
28.	Bolt	27-0015
29.	Edging	33-0020
30.	Beltguard cover	851-0216
31.	Slotted stud	33-0197
32.	Half grommet	33-0199
33.	Nozzles	18-0028, 18-0029, 18-0030, 18-0031
34.	Grommet	33-0001
35.	Bushing	9-0017
36.	Sheave	10-0040
37.	Key-pump	43-0028
38.	Pump	3-0079
39.	Locknut	30-0161
40.	Washer	28-0030
41.	Pump bracket	5-0101
42.	Washer	29-0055
43.	Bolt	27-8471
44.	Bolt	27-0118
45.	Brace tightener	13-0003
46.	Bolt	27-0166
47.	Locknut	30-0159
48.	Washer	28-0023
49.	Bolt	27-0576
50.	Hose	15-0024
51.	Elbow	24-0105
52.	By-pass hose	15-0035
53.	Hose barb	23-0007
54.	Pressure gauge	22-0107
55.	Bolt	27-0116
56.	Washer	29-0008
57.	Manifold block	51-0012
58.	Hex nipple	24-0031
59.	O-ring	25-0123
60.	Quick connect socket	17-0029
61.	Unloader	8-0032
62.	Heat dump valve	22-0005
63.	Tee-street	23-0124
64.	Tee-all female	23-0043
65.	Hex nipple	23-0012
66.	Strainer complete	19-0057
67.	Strainer cap	19-0058
68.	Strainer gasket	26-0160
69.	Stainless steel screen	19-0059
70.	Strainer bowl	19-0060
71.	Garden hose swivel	23-0095
72.	Garden hose gasket	26-0001

UNLOADER ASSEMBLY (8-0032) EXPLODED VIEW

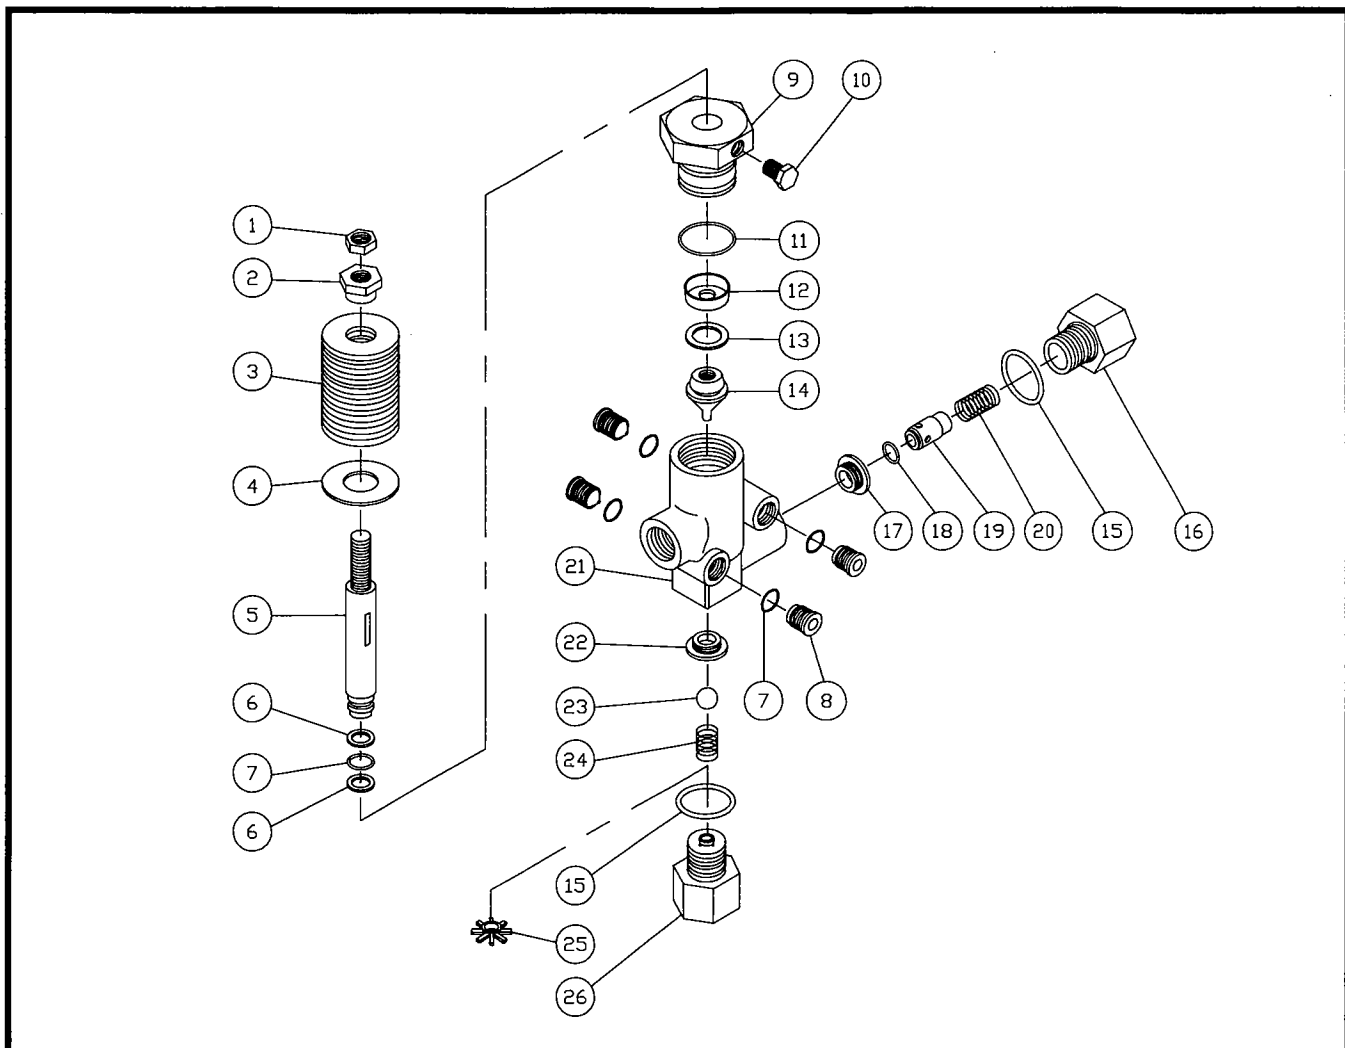


For Unloader Part Nos.: 8-0032 (orange springs), *901-3 (orange springs)

UNLOADER ASSEMBLY (8-0032) PARTS LISTING

Ref. No.	Description	Part No.	Ref. No.	Description	Part No.
1	Locking nut	30-3058	17	Outlet valve seat.....	8-0006
2	Adjusting nut.....	8-0089	18	O-ring	25-0011
3	Orange spring washer.....	8-0009	19	Outlet valve	8-0004
4	Washer	28-0250	20	Spring	49-0016
5	Valve stem	8-0037	21	Valve body (For unloader with item 25) ..	8-0035
6	Back-up ring	8-0038		Valve body (For unloader with item 26) ..	8-0164
7	O-ring	25-0009	22	Inlet valve seat.....	8-0005
8	1/4" brass plug.....	8-0011	23	Ball.....	8-0041
9	Valve cap	8-0036	24	Spring	49-0015
10	Set screw	8-0084	26	Inlet valve retainer (Old style).....	8-0002
11	Valve cap o-ring.....	25-0008	26	Inlet valve retainer (New style)	8-0165
12	Piston cup.....	8-0034			
13	Back-up ring	8-0040			
14	Piston	8-0039			
15	O-ring	25-0010			
16	Outlet valve spring retainer	8-0003			
				Unloader valve seal kit (Includes 1 ea. items	
				11, 12, 13 & 18, 2 ea. items 6 & 15, and	
				5 ea. item 7).....	8-0092


PUMP ASSEMBLY (3-0079) EXPLODED VIEW

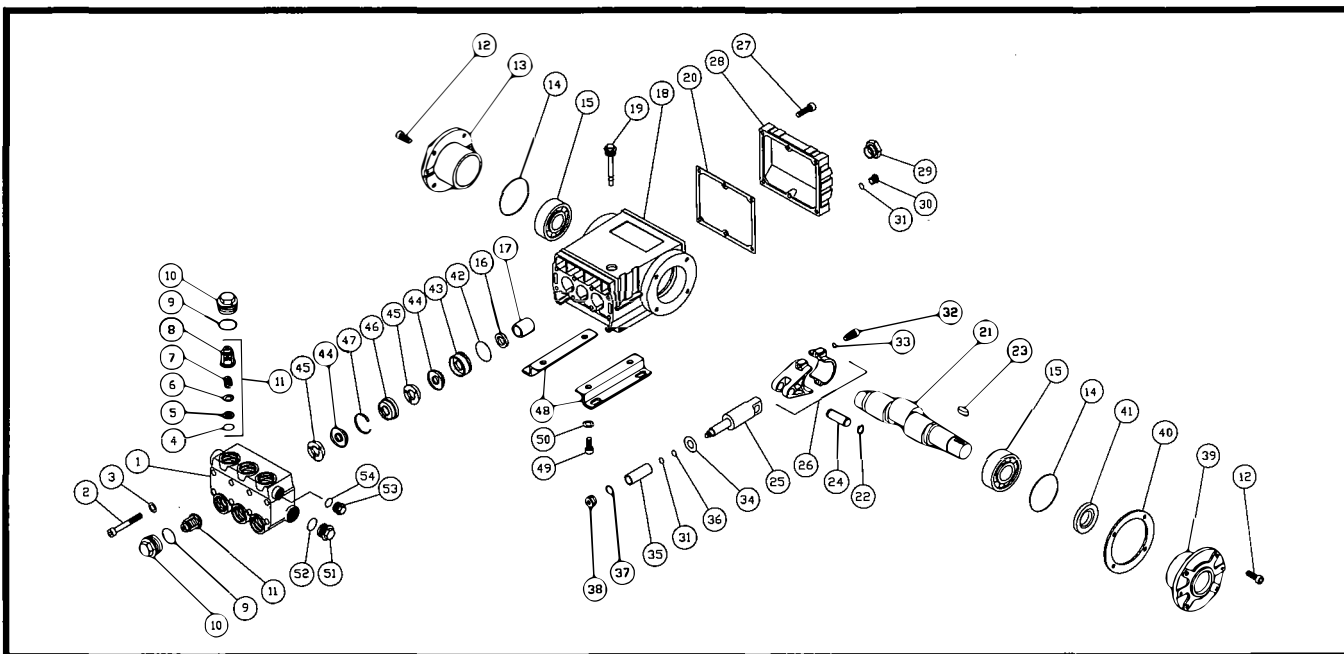

PUMP ASSEMBLY (3-0079) PARTS LISTING

Ref. No.	Description	Part No.	Ref. No.	Description	Part No.
1	Pump head	46-0060	30	Cap	39-0017
2	Screw	27-8185	31	O-ring	25-0014
3	Washer	28-0210	32	Screw	27-8435
4			33	Washer	29-0154
5	(Not available separately. Must		34	Washer	46-0146
6	order complete Valve assembly		35	Plunger	46-0052
7	item 11, or Valve kit #852-0008.)		36	Anti-extrusion ring	46-0109
8			37	Washer	28-0400
9	O-ring	25-0012	38	Piston screw	46-0069
10	Cap	39-0020	39	Crankcase open cover	46-0062
11	Valve assembly (Includes items 4-8)	22-0056	40	Shim	46-0113
12	Screw	27-8431	41	Oil seal	26-0049
13	Crankcase closed cover	46-0063	42	O-ring	25-0015
14	O-ring	25-0013	43	Female adapter	46-0057
15	Tapered roller bearing	48-0004	44	V-packing	26-0098
16	Oil seal	26-0047	45	Head ring	46-0059
17	Bushing	9-0029	46	Intermediate ring	46-0067
18	Crankcase	46-0046	47	"Long life ring"	46-0111
19	Oil dipstick	46-0144	48	Pump rails	46-0066
20	Cover gasket	26-0079	49	Screw	27-8471
21	Crankshaft	46-0050	50	Washer	29-0055
22	Retaining ring	46-0103	51	Cap	39-0019
23	Key	43-0028	52	Washer	28-0601
24	Piston pin	43-0032	53	Cap	39-0018
25	Piston rod	46-0056	54	Washer	28-0600
26	Connecting rod assembly	46-0051		Pump complete	3-0079
27	Screw	27-8404		Valve kit (Includes 6 ea. items 9 & 11)	852-0008
28	Crankcase cover	46-0065		Packing kit (Includes 6 ea. items 44 & 45,	
29	Oil level indicator	46-0114		3 ea. items 42 & 47)	852-0010

HOSE/GUN/WAND ASSEMBLY EXPLODED VIEW

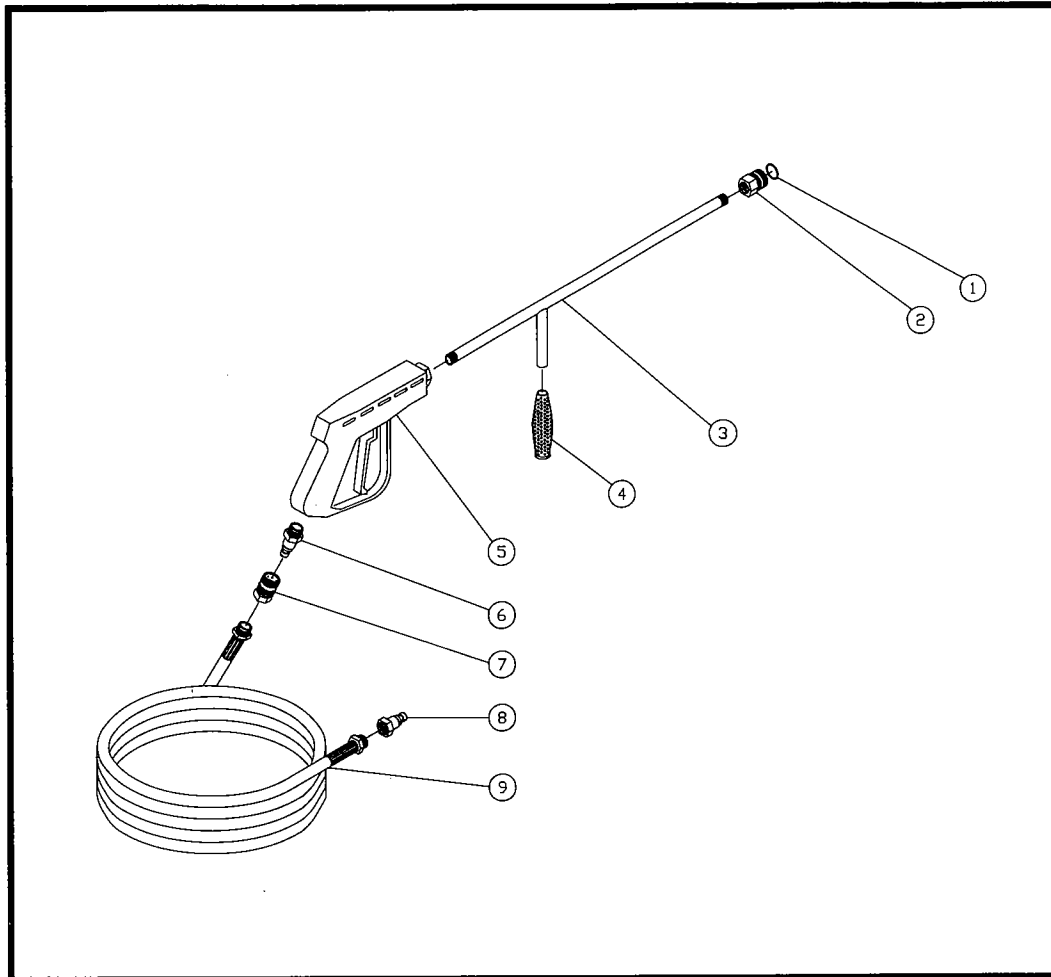

HOSE/GUN/WAND ASSEMBLY PARTS LISTING

Ref. No.	Description	Part No.
1	O-ring for 1/4 inch quick connect	25-0122
2	Quick connect socket (Includes item 1)	17-0001
3	3 foot wand with handle (Includes item 4)	851-0096
4	Rubber grip for wand	7-0002
5	Trigger gun, (0-4000 PSI rated)	16-0001
6	Quick connect plug	17-0005
7	Quick connect socket	17-0004
8	Quick connect plug	17-0006
9	50 foot high pressure hose	
	(For units under 2500 PSI)	15-0003
	(For units over 2500 PSI)	15-0004
Hose assembly complete (Includes items 7-9)		
	(For units under 2500 PSI)	851-0007
	(For units over 2500 PSI)	851-0006
Hose, gun, wand assembly complete (Includes items 1-9)		
	(For units under 2500 PSI)	851-0098
	(For units over 2500 PSI)	851-0097
Gun and wand assembly (All models) (Includes items 1-6)		851-0095
Gun repair kit		16-0059