




For parts Call 888-279-9274

HS-4004-1MAH / HS-4004-1MAH (sn:15100090-99999999)

UNIT ASSEMBLY

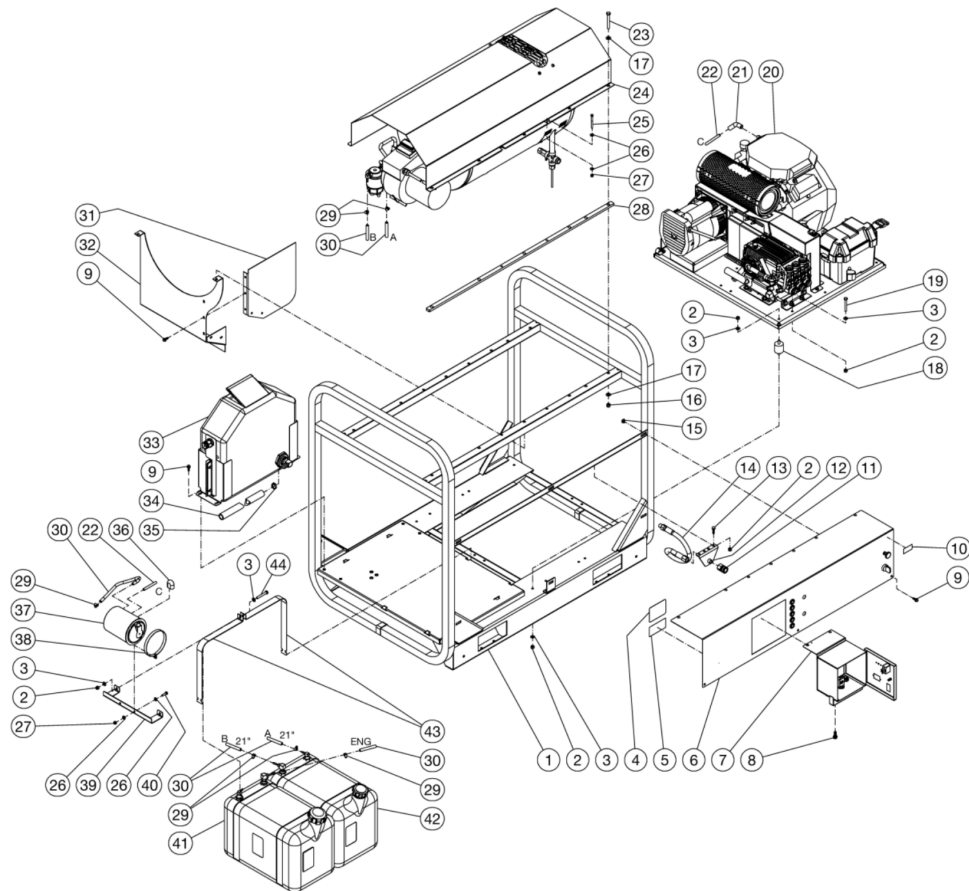

Id	Item #	Description	Quantity
1	5-0275A18	FRAME (GASOLINE MODELS)	1
1	N/A	FRAME (DIESEL MODELS)	1
2	30-0157	LOCKNUT	22
3	28-0003	WASHER	22
4	34-1138	DECAL - DATA PLATE	1
5	N/A	DECAL- SILVER STICKER	1
6	N/A	HS_HVS CONTROL PANEL ASSY (GASOLINE MODELS)	1
6	N/A	HS_HVS KUBOTA CONTROL PANNEL ASSY (DIESEL MODELS)	1
7	N/A	ELECTRIC BOX ASSEMBLY	1
8	27-1201	BOLT	2
9	27-1200	BOLT (3008 GASOLINE MODELS)	12


Id	Item #	Description	Quantity
9	27-1200	BOLT	7
10	34-3553	DECAL - MADE IN USA	1
11	17-0004	QC SOCKET	1
12	13-0199A18	WATER OUTLET BRACKET	1
13	27-0067	BOLT	2
14	15-0202	HIGH PRESSURE HOSE	1
15	30-6027	CLIP NUT	3
16	30-0159	LOCKNUT	10
17	28-0004	WASHER	20
18	14-0110	ISOLATOR	8
19	27-0073	BOLT	2
20	N/A	ISOLATION PLATE ASSEMBLY (GASOLINE MODELS)	1
20	N/A	ISOLATION PLATE ASSEMBLY (DIESEL MODELS)	1
21	62-0229	AIR CLEANER ADAPTER (HONDA MODELS)	1
22	15-0261	FUEL HOSE (GASOLINE MODELS)	2
23	27-0576	BOLT	10
24	N/A	HEAT EXCHANGER ASSEMBLY (3005, 3006, 3504, 3505, 3506)	1
24	N/A	HEAT EXCHANGER ASSY (4004, 4005)	1
24	N/A	HEAT EXCHANGER ASSY (3008)	1
25	27-0022	BOLT	4
26	28-0002	WASHER (GASOLINE MODELS)	12
26	28-0002	WASHER (DIESEL MODELS)	8
27	30-0155	LOCKNUT (GASOLINE MODELS)	6
27	30-0155	LOCKNUT (DIESEL MODELS)	4
28	20-1289A18	SHIM (3008 DIESEL MODELS)	2
29	42-0004	CLAMP WORM (GASOLINE MODELS)	6
29	42-0004	CLAMP WORM (DIESEL MODELS)	8
30	15-0008	FUEL HOSE *(SIX FEET REQUIRED)	3
31	20-1099A18	HEAT SHIELD SIDE (3008 GASOLINE MODELS)	1
32	20-1098A18	HEAT SHIELD (3008 GASOLINE MODELS)	1
33	N/A	FLOAT TANK ASSEMBLY	1
34	15-0033	HOSE *(FOUR FEET REQUIRED)	1
35	42-0003	HOSE CLAMP	1
36	62-0218	BREATHER VENT COVER (GASOLINE MODELS)	1
37	62-0212	CARB CANISTER (GASOLINE MODELS)	1
38	20-1187A01	CARB CANISTER STRAP (GASOLINE MODELS)	2
39	20-1197A18	CARB CANISTER MOUNT (GASOLINE MODELS)	1
40	27-0016	BOLT (GASOLINE MODELS)	2
41	N/A	GAS TANK ASSEMBLY (GASOLINE MODELS)	1

Id	Item #	Description	Quantity
41	N/A	DIESEL FUEL TANK ASSEMBLY (DIESEL MODELS)	1
42	N/A	BURNER FUEL TANK ASSEMBLY	1
43	20-0585A18	TANK STRAP	4
44	27-0072	BOLT	2
*MUST ORDER IN ONE FOOT LENGTHS			



HS-4004-1MAH / HS-4004-1MAH (sn:15100090-99999999)

CONTROL PANEL

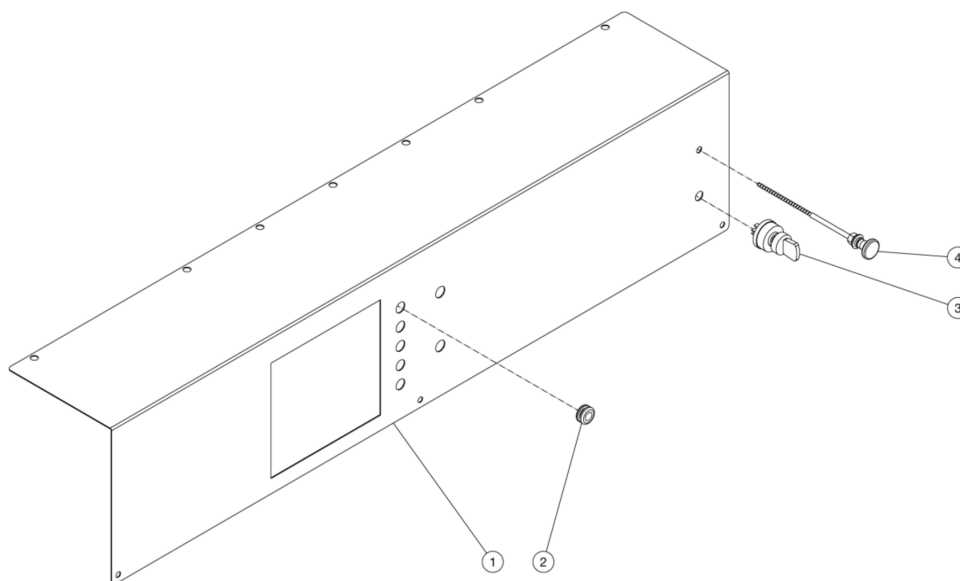


Id	Item #	Description	Quantity
1	20-1095A18	CONTROL PANEL	1
1	20-1095A29	CONTROL PANEL (3505-1SGV)	1
2	33-0001	GROMMET	5
3	45-0076	KEY SWITCH (HONDA)	1
3	45-0071	KEY SWITCH (KOHLER)	1
3	45-0079	KEY SWITCH (VANGUARD)	1
4	33-0081	CHOKE CABLE	1



For parts Call 888-279-9274

HS-4004-1MAH / HS-4004-1MAH (sn:15100090-99999999)

ISOLATION PLATE

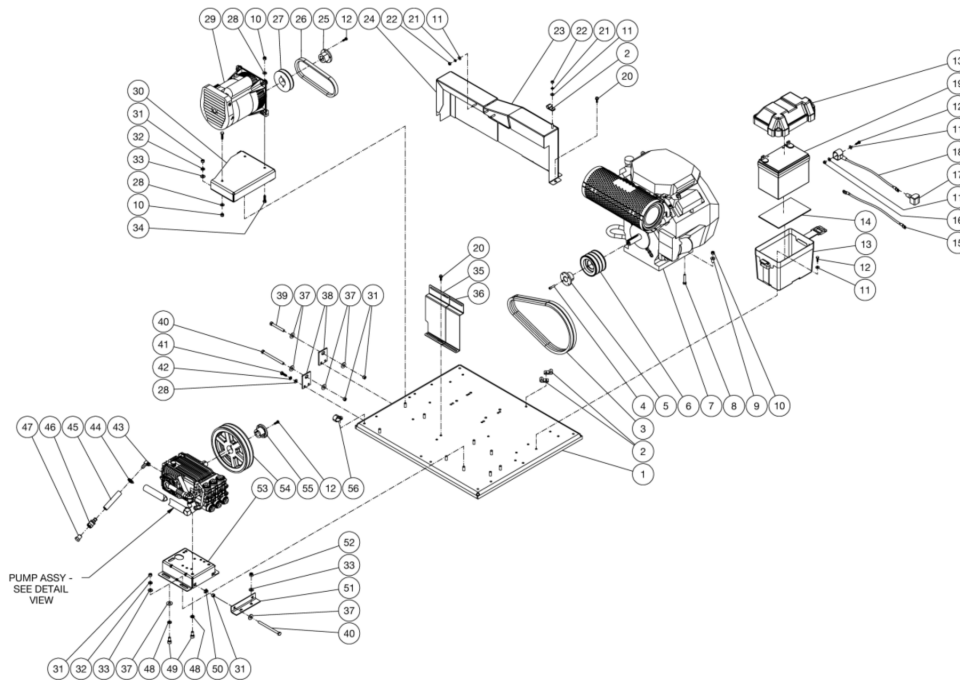

Id	Item #	Description	Quantity
1	5-0170A18	ISOLATION PLATE	1
2	43-0003	CLIP	3
3	11-0052	BELT (3505)	2
3	11-0050	BELT (3506, 4004)	2
4	27-0850	BOLT	2
5	9-0005	BUSHING	1
6	10-0061	SHEAVE	1
7	850-0294	ENGINE (3005-0MGV)	1
7	850-0393	ENGINE (3505-1MGH, 3506-1MGH, 4004-1MAH)	1
7	850-0295	ENGINE (3505-1SGV)	1
8	27-0070	BOLT	4
9	33-0169	SHIM (HONDA ENGINE)	4
9	28-0003	WASHER (VANGUARD ENGINE)	4
10	30-0157	LOCKNUT	7
11	28-0002	WASHER	12

Id	Item #	Description	Quantity
12	27-0015	BOLT	10
13	33-0092	BATTERY BOX	1
14	33-0509	RUBBER PAD	1
15	32-9113	CABLE	1
16	30-0155	LOCKNUT	2
17	33-0004	BATTERY CABLE COVER	1
18	32-9114	CABLE	1
19	32-1077	BATTERY	1
20	27-1200	BOLT	6
21	29-0006	LOCKWASHER	4
22	30-0002	NUT	4
23	6-0092A18	PUMP BELTGUARD	1
24	6-0091A18	GENERATOR BELTGUARD	1
25	9-0033	BUSHING	1
26	11-0048	BELT	1
27	10-0028	SHEAVE	1
28	28-0003	WASHER	7
29	850-0352	ALTERNATOR	1
30	20-0583A18	ALTERNATOR HAT	1
31	30-0006	NUT	11
32	29-0008	LOCKWASHER	7
33	28-0004	WASHER	9
34	27-0068	BOLT	3
35	20-1642A18	BRACKET	1
36	20-0589A18	BELTGUARD COVER	1
37	28-0023	WASHER	7
38	20-0587A18	TENSION BRACKET	2
39	27-0576	BOLT	1
40	27-0133	BOLT	3
41	27-0067	BOLT	4
42	29-0007	LOCKWASHER	4
43	23-0119	ELBOW	1
44	42-0011	HOSE CLAMP	1
45	15-0305	HOSE *(TWO FEET REQUIRED)	1
46	23-0360	HOSE BARB	1
47	23-0411	PLUG	1
48	29-0055	LOCKWASHER (A/R MODELS)	4
48	29-0054	LOCKWASHER (GENERAL MODELS)	4
49	27-8471	BOLT (A/R MODELS)	4

Id	Item #	Description	Quantity
49	27-8884	BOLT (GENERAL MODELS)	4
50	30-6025	CLIP NUT	2
51	20-0584A18	TENSION BRACKET	1
52	30-0159	LOCKNUT	2
53	5-0153A18	PUMP HAT	1
54	10-0037	SHEAVE (3005, 3505)	1
54	10-0012	SHEAVE (3506, 4004)	1
55	9-0017	BUSHING	1
56	33-0291	CLIP	1


*MUST ORDER IN ONE FOOT LENGTHS



For parts Call 888-279-9274

HS-4004-1MAH / HS-4004-1MAH (sn:15100090-99999999)

PUMP PLUMBING

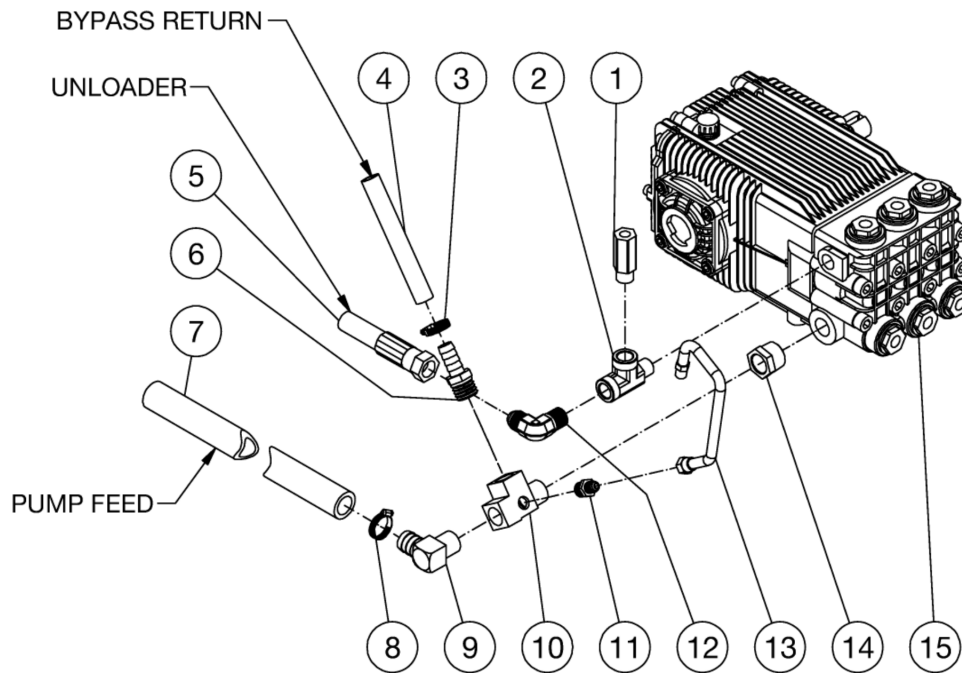


Id	Item #	Description	Quantity
1	22-0242	EASY START VALVE	1
2	23-0058	STREET TEE	1
3	42-0011	HOSE CLAMP	1
4	15-0007	HOSE *(THREE FEET REQUIRED)	1
5	15-0221	HIGH PRESSURE HOSE ASSEMBLY	1
6	23-0045	BARB	1
7	15-0033	HOSE *(FOUR FEET REQUIRED)	1
8	42-0003	HOSE CLAMP	1
9	23-0037	ELBOW	1
10	23-0388	STREET TEE	1
11	23-0247	NIPPLE	1
12	24-0092	ELBOW	1
13	15-0140	EASY START HOSE	1
14	23-0023	BUSHING (3008)	1
15	3-0213	PUMP (4004)	1

Id	Item #	Description	Quantity
15	3-0301	PUMP (3008)	1
15	3-0262	PUMP (4005)	1
*MUST ORDER IN ONE FOOT LENGTHS			



HS-4004-1MAH / HS-4004-1MAH (sn:15100090-99999999)

ENGINE ASSEMBLY

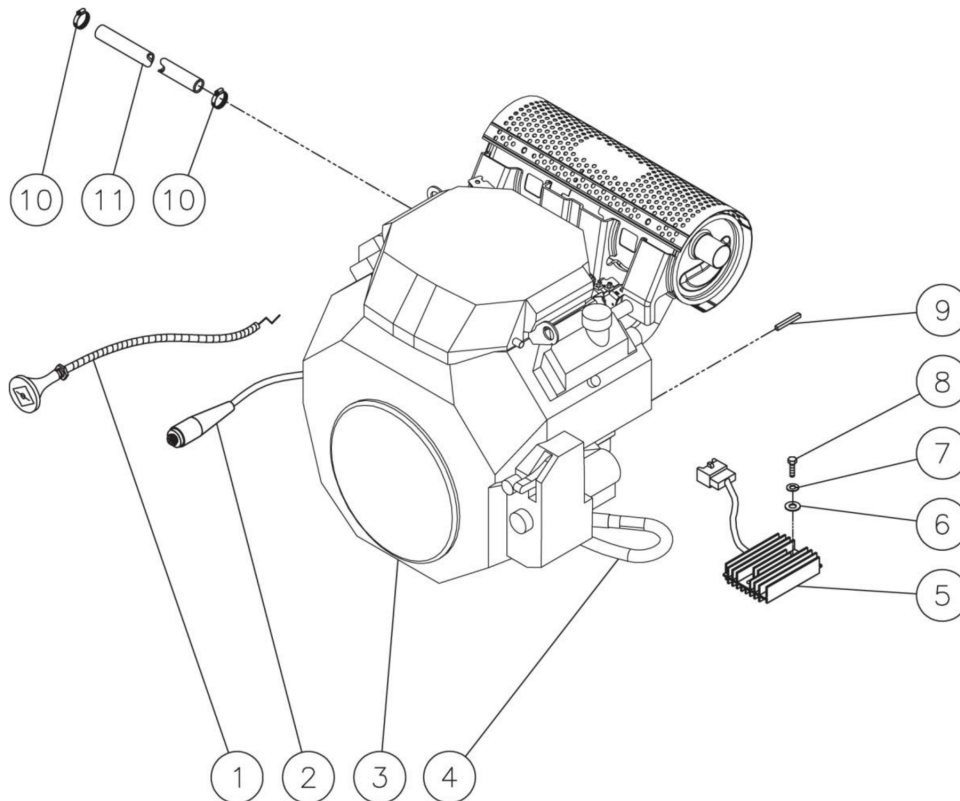

Id	Item #	Description	Quantity
1	33-0081	CHOKE CABLE	1
2	45-0076	KEY SWITCH ASSEMBLY	1
3	1-0186	ENGINE (850-0393)	1
3	1-0187	ENGINE (850-0394)	1
4	70-0555	KIT/ENGINE OIL DRAIN	1
5	N/A	RECTIFIER	1
6	28-0002	WASHER	2
7	29-0006	LOCKWASHER	2
8	27-0016	SCREW	2
9	43-0078	KEY	1
10	42-0004	CLAMP	2
11	15-0008	HOSE *(FOUR FEET REQUIRED)	1


*MUST ORDER IN ONE FOOT LENGTHS



For parts Call 888-279-9274

HS-4004-1MAH / HS-4004-1MAH (sn:15100090-99999999)

PUMP ASSEMBLY

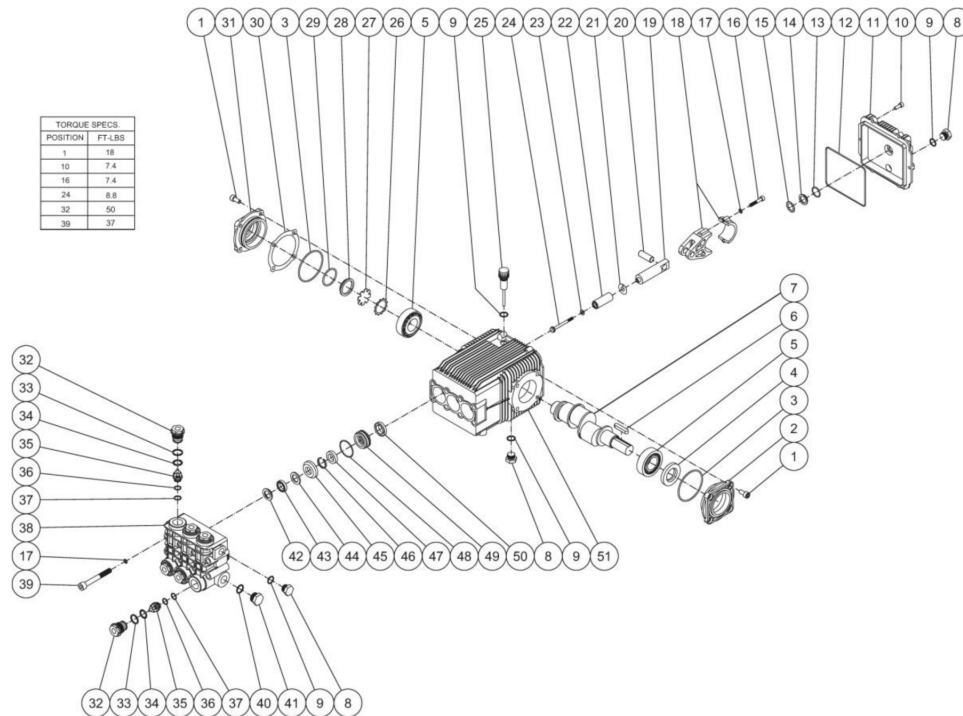

Id	Item #	Description	Quantity
1	27-8884	BOLT	8
2	46-0909	COVER	1
3	25-0512	O-RING	2
4	26-0243	OIL SEAL	1
5	48-0073	BEARING	2
6	43-0091	PUMP KEY	1
7	46-0944	CRANKSHAFT	1
8	39-0203	PLUG	3
9	25-0510	O-RING	4
10	27-8888	BOLT	6
11	46-0912	COVER	1
12	25-0513	O-RING	1
13	25-0370	O-RING	1
14	46-0670	OIL SIGHT GLASS	1

Id	Item #	Description	Quantity
15	46-0671	SPRING RETAINER	1
16	27-8892	BOLT	6
17	29-0153	LOCKWASHER	14
18	46-0913	CONNECTING ROD	3
19	46-0915	PLUNGER ROD	3
20	46-0914	PIN	3
21	46-0916	WASHER	3
22	46-0917	PISTON	3
23	29-0014	WASHER	3
24	27-8965	BOLT	3
25	39-0204	DIPSTICK	1
26	46-0924	RETAINER	1
27	46-0925	PUMP	1
28	46-0926	OIL SIGHT GLASS	1
29	25-0514	O-RING	1
30	46-0947	SHIM - .05MM	1
30	46-0948	SHIM - .10MM	0
30	46-0949	SHIM - .19MM	0
30	46-0950	SHIM - .25MM	0
31	46-0918	COVER	1
32	39-0201	VALVE CAP	6
33	25-0509	BACK-UP RING	6
34	25-0386	O-RING	6
35	22-0318	VALVE (SEE KIT 70-0314)	6
36	25-0516	BACK-UP RING (SEE KIT 70-0314)	6
37	25-0407	O-RING (SEE KIT 70-0314)	6
38	46-0900	PUMP MANIFOLD	1
39	27-8470	BOLT	8
40	25-0372	O-RING	1
41	39-0202	PLUG	1
42	46-0901	SUPPORT RING (SEE KIT 70-0317)	3
43	46-0902	HIGH PRESSURE SEAL (SEE KIT 70-0317)	3
44	46-0903	BACK-UP RING (SEE KIT 70-0317)	3
45	46-1201	GUIDE	3
46	46-0905	BACK-UP RING (SEE KIT 70-0317)	3
47	46-0906	LOW PRESSURE SEAL (SEE KIT 70-0317)	3
48	25-0511	O-RING (SEE KIT 70-0317)	3
49	46-1200	GUIDE REAR	3
50	26-0242	OIL SEAL	3


Id	Item #	Description	Quantity
51	46-0911	CRANKCASE	1
KIT	70-0317	WATER SEALS KIT (INC. 3 EACH 42, 43, 44, 46, 47, 48)	
KIT	70-0314	VALVES KIT (INC. 6 EACH 35, 36, 37)	

*MUST ORDER IN ONE FOOT LENGTHS



HS-4004-1MAH / HS-4004-1MAH (sn:15100090-99999999)

FLOAT TANK ASSEMBLY

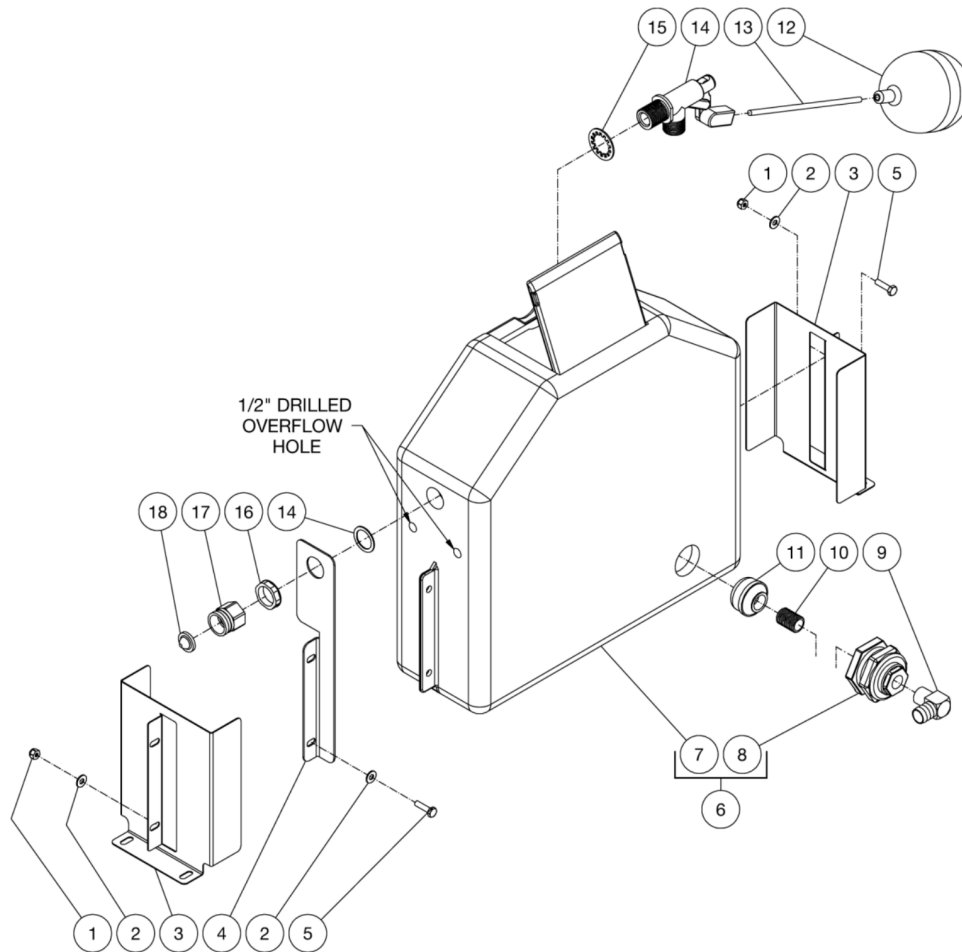


Id	Item #	Description	Quantity
1	30-0155	LOCKNUT	4
2	28-0002	WASHER	6
3	20-0586A18	BRACKET / FLOAT TANK	2
4	20-0912A18	BRACKET	1
5	27-0016	BOLT	4
6	850-0322	FLOAT TANK ASSEMBLY (INC. 7-8)	1
7	N/A	FLOAT TANK	1
8	N/A	BULKHEAD (INC. 25-0506 GASKET)	1
9	23-0037	ELBOW	1
10	23-0019	NIPPLE	1

Id	Item #	Description	Quantity
11	19-0203	STRAINER	1
12	22-0059	FLOAT	1
13	31-3320	BALL FLOAT STUD	1
14	22-0317	FLOAT VALVE	1
15	29-0074	LOCKWASHER	1
16	23-0428	LOCKNUT	1
17	23-0021	GARDEN HOSE INLET	1
18	19-0001	FILTER	1




HS-4004-1MAH / HS-4004-1MAH (sn:15100090-99999999)

GAS TANK ASSEMBLY

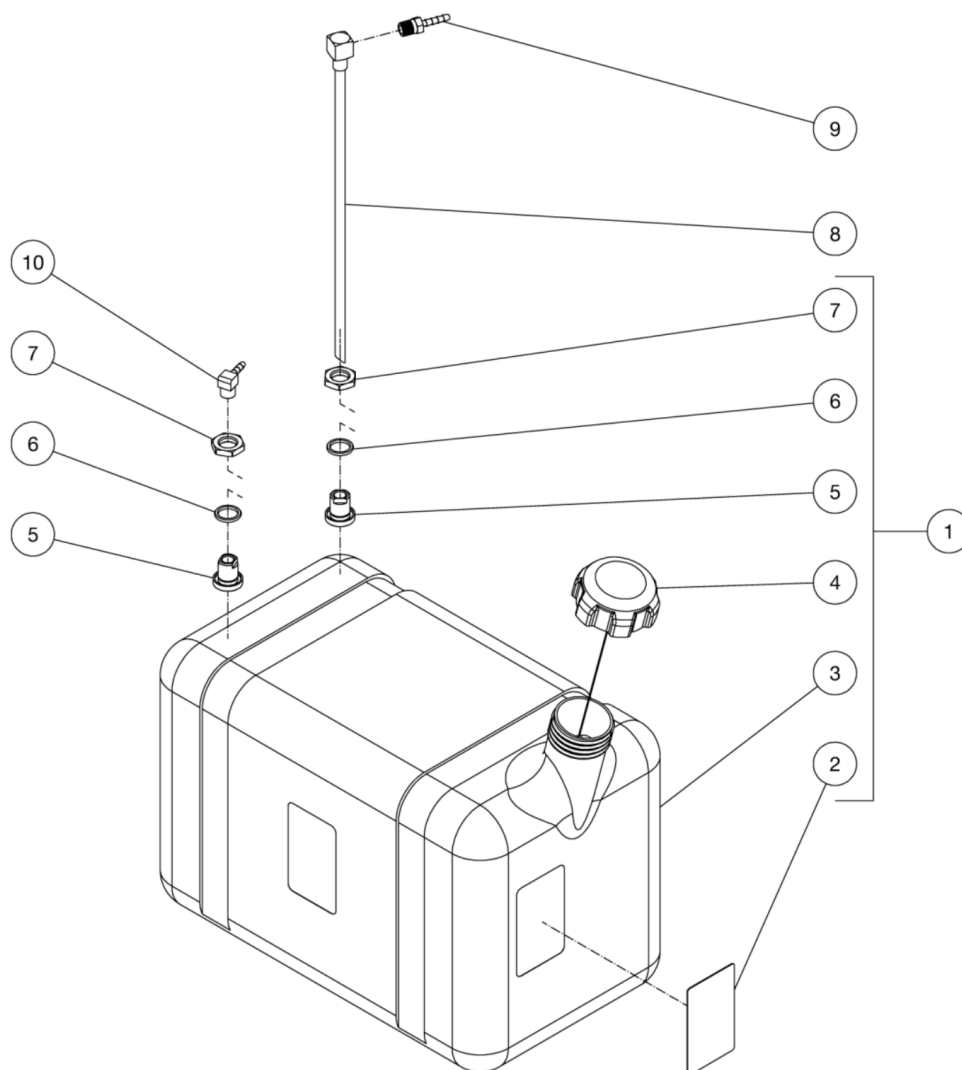

Id	Item #	Description	Quantity
1	850-0306	GAS TANK ASSY (INC 2-7)	1
2	N/A	DECAL- CAUTION: GASOLINE ONLY (SEE 71-0034)	1
3	N/A	FUEL TANK - RED	1
4	12-0220	FUEL CAP - SEALED/TETHERED	1
5	23-0408	BULKHEAD FITTING	2
6	25-0427	O-RING	2
7	23-0409	NUT	2
8	33-0352	FUEL PICK-UP	1

Id	Item #	Description	Quantity
9	23-0051	BARB	1
10	23-0054	ELBOW	1

 

This diagram illustrates the assembly components for a 5L chemical container. The main body is a rectangular container with a handle on the right side and a spout on the left. The components are numbered as follows:

- 1**: A bracket indicating the main container body.
- 2**: A rectangular label or sticker.
- 3**: The spout of the container.
- 4**: The cap for the spout.
- 5**: A small cylindrical component, likely a filter or seal, located at the top of the spout.
- 6**: A ring or O-ring component, shown in two positions: one around the spout and another around the top of the container.
- 7**: A hexagonal nut or flange component, shown in two positions: one around the spout and another around the top of the container.
- 8**: A long, thin tube or pipe.
- 9**: A small cylindrical component, likely a filter or seal, located at the top of the tube.
- 10**: A small cylindrical component, likely a filter or seal, located at the top of the tube.


Id	Item #	Description	Quantity
1	850-0307	FUEL TANK ASSEMBLY (INC. 2-7)	1
2	34-1034	DECAL- CAUTION: RISK OF FIRE	1

Id	Item #	Description	Quantity
3	N/A Sep.	FUEL TANK (SEE 850-0307)	1
4	12-0033	FUEL CAP	1
5	23-0408	BULKHEAD FITTING	2
6	25-0427	O-RING	2
7	23-0409	NUT	2
8	23-0051	HOSE BARB	1
9	33-0352	FUEL PICKUP	1
10	23-0054	ELBOW	1



HS-4004-1MAH / HS-4004-1MAH (sn:15100090-99999999)

ELECTRIC BOX

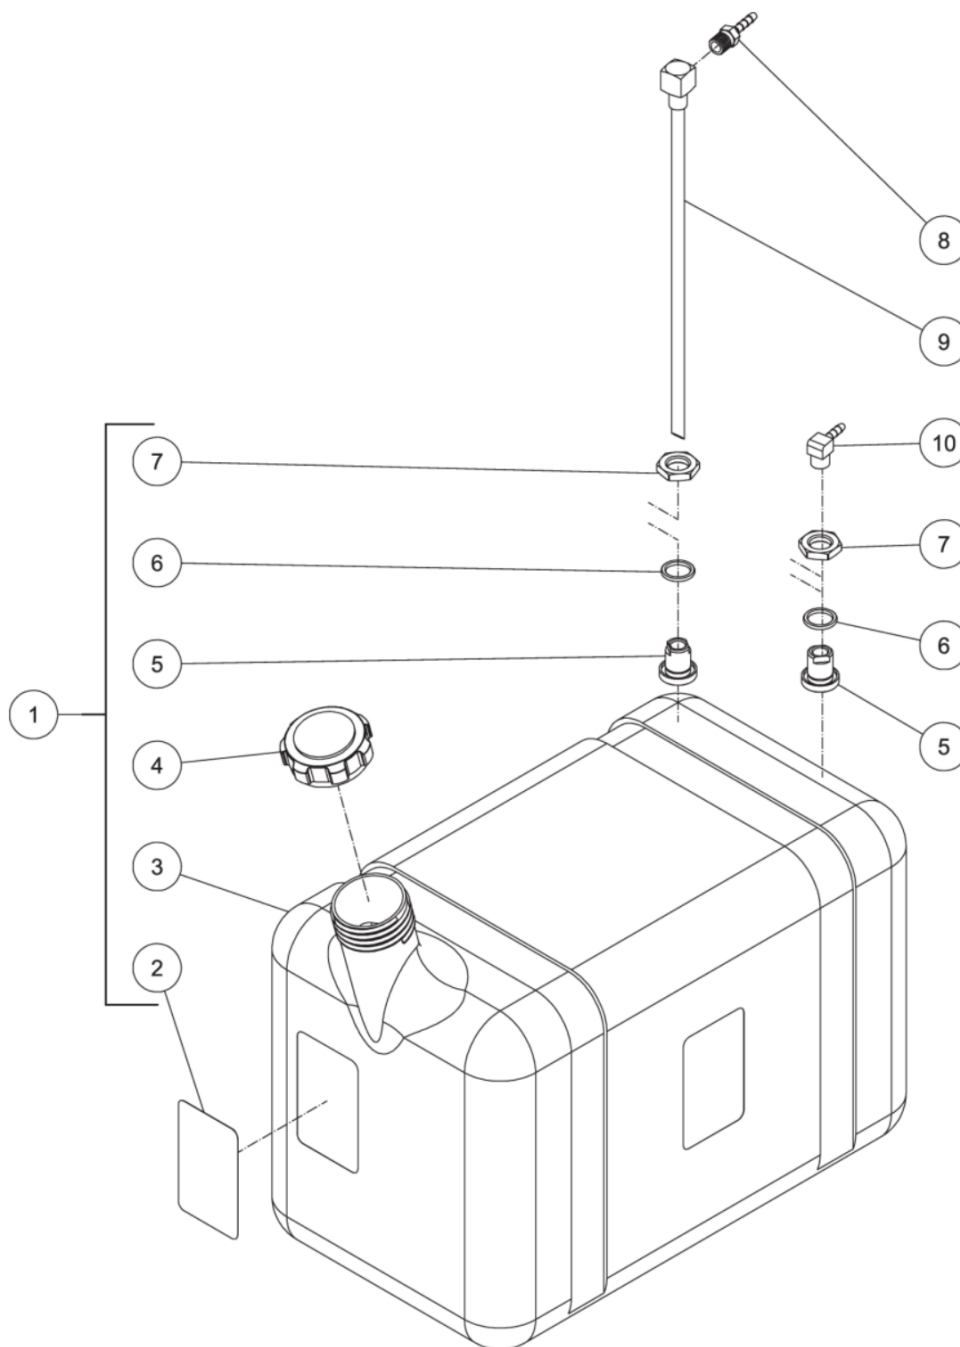

Id	Item #	Description	Quantity
1	850-0307	FUEL TANK ASSEMBLY (INC. 2-7)	1
2	34-1034	DECAL- CAUTION: RISK OF FIRE	1


Id	Item #	Description	Quantity
3	N/A Sep.	FUEL TANK (SEE 850-0307)	1
4	12-0033	FUEL CAP	1
5	23-0408	BULKHEAD FITTING	2
6	25-0427	O-RING	2
7	23-0409	NUT	2
8	23-0051	HOSE BARB	1
9	33-0352	FUEL PICKUP	1
10	23-0054	ELBOW	1



For parts Call 888-279-9274

HS-4004-1MAH / HS-4004-1MAH (sn:15100090-99999999)

HEAT EXCHANGER

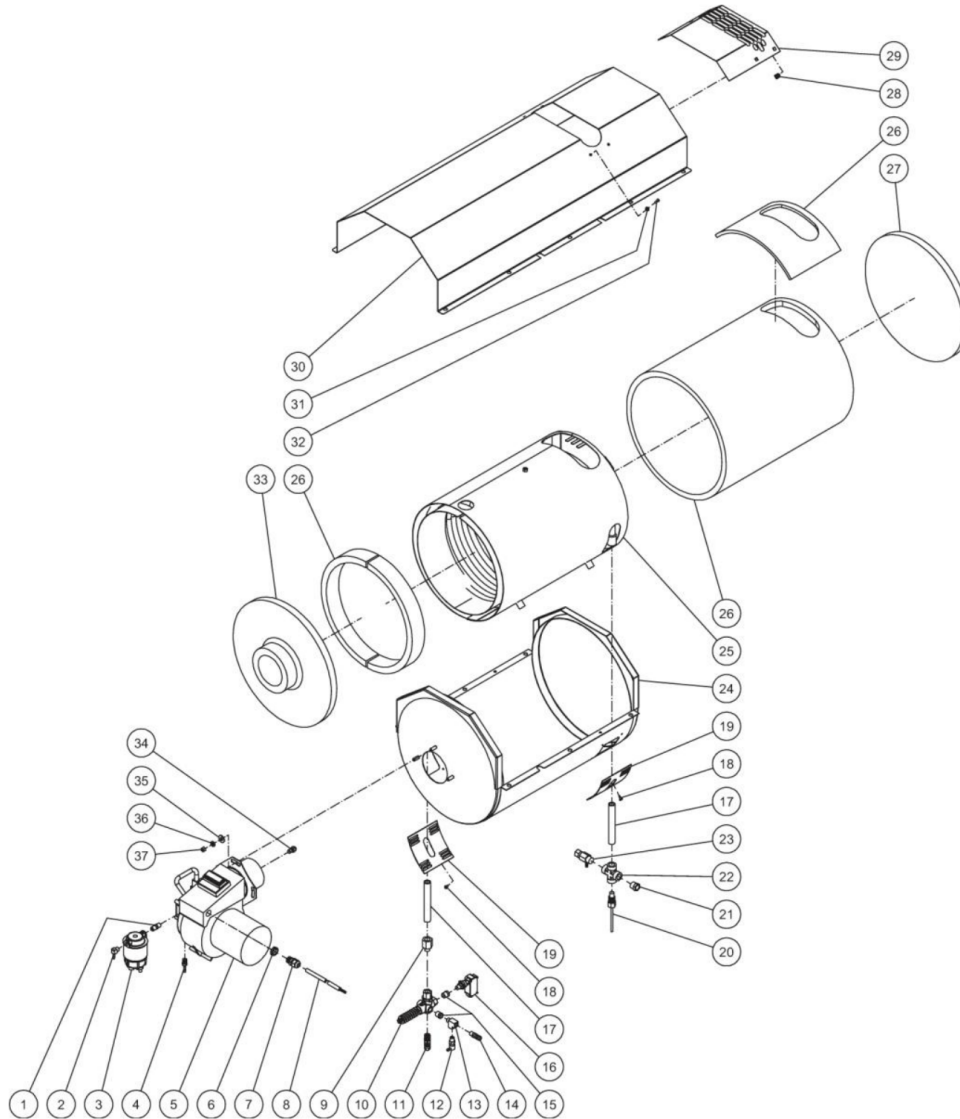

Id	Item #	Description	Quantity
1	24-0145	NIPPLE	1
2	23-0054	ELBOW	1
3	19-0070	FUEL FILTER / WATER SEPERATOR	1
4	23-0051	BARB	1
5	4-0017	BURNER	1
6	32-0108	ELECTRICAL LOCKNUT	1
7	32-0437	STRAIN RELIEF	1


Id	Item #	Description	Quantity
8	32-0247	CORD *(FOUR FEET REQUIRED)	1
9	24-0048	REDUCER	1
10	8-0634	UNLOADER	1
11	24-0092	ELBOW	1
12	22-0408	HEAT DUMP VALVE	1
13	23-0127	TEE	1
14	23-0120	HOSE BARB	1
15	23-0017	REDUCER	2
16	22-0243	PRESSURE SWITCH	1
17	24-0254	PIPE NIPPLE	2
18	27-3062	BOLT	8
19	20-0537A18	PATCH PLATE	2
20	32-0667	HI-LIMIT SWITCH	1
21	23-0016	REDUCER BUSHING	1
22	24-0241	CROSS	1
23	22-0434	SAFETY RELEIF VALVE	1
24	20-0666A18	BOTTOM WRAP	1
25	66-0014	COIL	1
26	850-0314	INSULATION FOR HS HEAT EXCHANGER	1
27	33-0346	INSULATION DISC	1
28	30-6028	CLIP NUT	4
29	21-0171	EXHAUST GUARD	1
30	20-0664A18	TOP WRAP	1
31	28-0001	WASHER	4
32	27-8912	SCREW	4
33	33-0345	INSULATION DRUM HEAD	1
34	18-0090	FUEL NOZZLE	1
34	18-0361	NOZZLE SOLID OIL (4005)	1
35	28-0023	WASHER	3
36	29-0008	LOCKWASHER	3
37	30-0006	NUT	3

*MUST ORDER IN ONE FOOT LENGTHS



HS-4004-1MAH / HS-4004-1MAH (sn:15100090-99999999)

BURNER ASSEMBLY

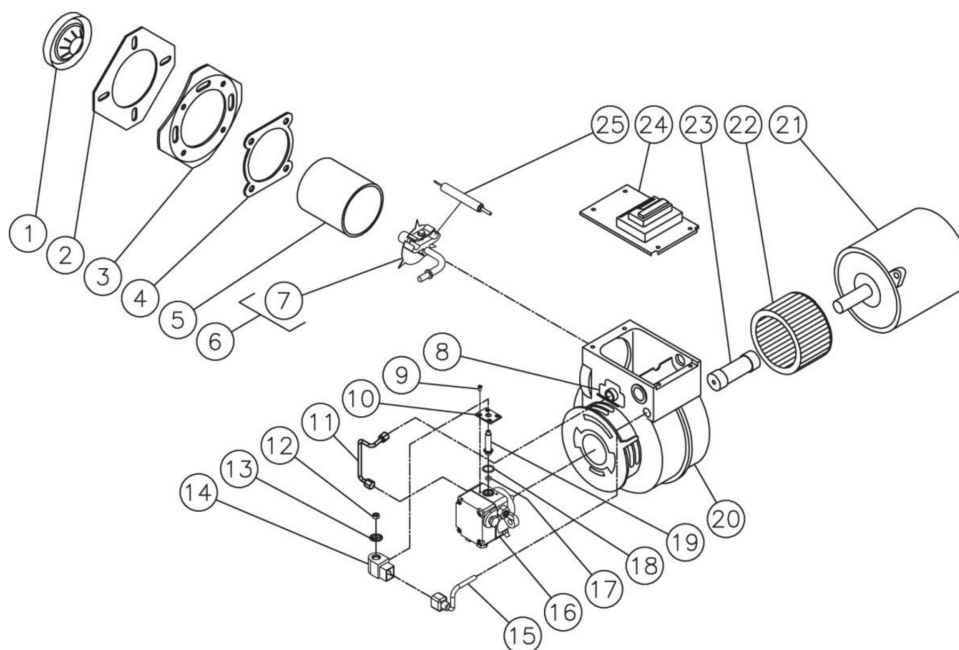


Id	Item #	Description	Quantity
1	44-0011	BURNER HEAD	1
2	44-0108	MOUNTING GASKET	1
3	44-0109	FLANGE	1
4	26-0138	GASKET	1
5	44-0110	AIR TUBE	1
6	44-0113	NOZZLE LINE ASSEMBLY	1
7	44-0114	ELECTRODE KIT	1
8	44-0031	ESCUTCHEON PLATE	1
9	SEE KIT	SCREW (SEE 70-0746)	1
10	46-1004	BASE PLATE (SEE 70-0746)	1
11	44-0026	FUEL LINE	1
12	46-1016	PISTON NUT (SEE 70-0746)	1
13	SEE KIT	SPRING WASHER (SEE 70-0746)	1
14	46-1020	FUEL SOLENOID	1
15	44-0122	CORD SET	1
16	3-0236	FUEL PUMP	1

Id	Item #	Description	Quantity
17	SEE KIT	O-RING (SEE 70-0746)	1
18	SEE KIT	O-RING (SEE 70-0746)	1
19	SEE KIT	SOLENOID PISTON (SEE 70-0746)	1
20	44-0033	BURNER HOUSING	1
21	2-0068	MOTOR (4-0017)	1
21	2-0067	MOTOR (4-0018)	1
22	44-0071	BLOWER WHEEL	1
23	44-0014	COUPLER	1
24	44-0017	IGNITION TRANSFORMER (4-0017)	1
24	44-0015	IGNITION TRANSFORMER (4-0018)	1
25	44-0114	ELECTRODE	2
	4-0017	COMPLETE BURNER (INC 1-17)	
	4-0018	COMPLETE BURNER (INC 1-17)	
KIT	70-0746	SOLENOID TUBE KIT (INC 9, 10, 12, 13, 17-19)	



HS-4004-1MAH / HS-4004-1MAH (sn:15100090-99999999)

UNLOADER ASSEMBLY

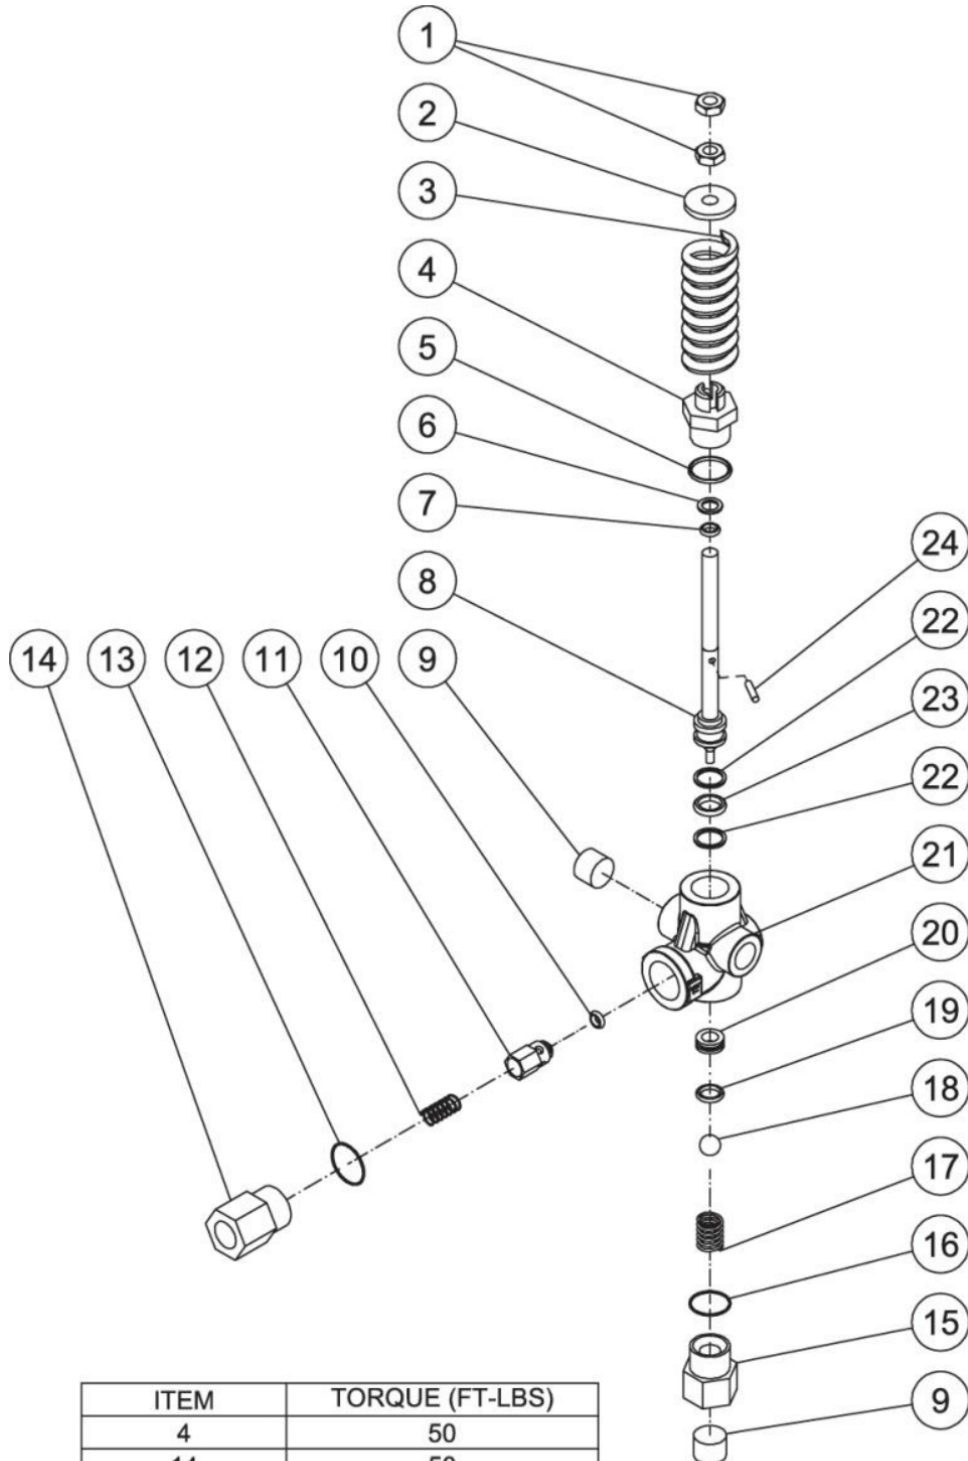


ITEM	TORQUE (FT-LBS)
4	50
14	50
15	50

Id	Item #	Description	Quantity
1	8-0293	NUT	2
2	46-1527	SPRING SPACER	1
3	49-0171	SPRING	1
4	46-1529	FITTING	1
5	SEE KIT	O-RING (SEE KIT 70-0625)	1
6	SEE KIT	O-RING (SEE KIT 70-0625)	1
7	SEE KIT	O-RING (SEE KIT 70-0625)	1
8	46-1530	STEM	1
9	23-0244	PLUG	2
10	SEE KIT	O-RING (SEE KIT 70-0624)	1
11	SEE KIT	POPPET (SEE KIT 70-0624)	1
12	SEE KIT	SPRING (SEE KIT 70-0624)	1
13	25-0672	O-RING	1
14	46-1531	OUTLET FITTING	1
15	SEE KIT	INLET FITTING (SEE KIT 70-0625)	1
16	SEE KIT	O-RING (SEE KIT 70-0625)	1
17	49-0172	SPRING	1
18	SEE KIT	BALL (SEE KIT 70-0625)	1
19	SEE KIT	O-RING (SEE KIT 70-0625)	1
20	46-1532	SEAT	1
21	46-1533	FORGING	1
22	SEE KIT	BACKUP RING (SEE KIT 70-0625)	2
23	SEE KIT	O-RING (SEE KIT 70-0625)	1
24	SEE KIT	PIN (SEE KIT 70-0625)	1
KIT	70-0624	CHECK VALVE (INC. 10-12)	
KIT	70-0625	UNLOADER REBUILD (INC. 5-7, 15-16, 18-19, 23-24; INC. 2 EACH 22)	



HS-4004-1MAH / HS-4004-1MAH (sn:15100090-99999999)

PRESSURE SWITCH

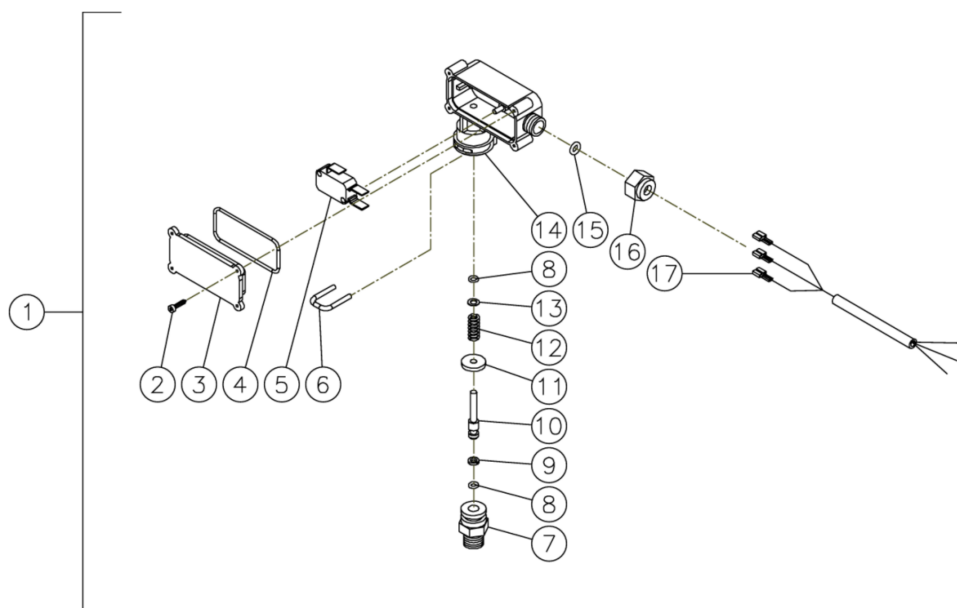


Id	Item #	Description	Quantity
1	22-0171	PRESSURE SWITCH- 15 BAR	1
1	22-0243	PRESSURE SWITCH- 25 BAR	1
2	N/A	SCREW	4
3	N/A	COVER	1
4	N/A Sep.	O-RING (SEE 70-0306)	1
5	N/A	MICRO SWITCH	1
6	N/A	RETAINER CLIP	1
7	N/A	BODY	1
8	N/A Sep.	O-RING (SEE 70-0306)	2
9	N/A Sep.	BACK-UP RING (SEE 70-0306)	1
10	N/A	PISTON	1
11	N/A	WASHER	1
12	49-0144	SPRING- 15 BAR	1
12	49-0145	SPRING- 25 BAR	1
13	N/A	WASHER	1
14	N/A	PLASTIC HOUSING	1

Id	Item #	Description	Quantity
15	N/A Sep.	O-RING (SEE 70-0306)	1
16	N/A	NUT- 15 BAR	1
16	N/A	NUT- 25 BAR	1
17	N/A	WIRE ASSEMBLY	1
KIT	70-0306	O-RING REPAIR KIT (INC. 4, 8-9, 15)	



HS-4004-1MAH / HS-4004-1MAH (sn:15100090-99999999)

GUN/WAND/HOSE ASSEMBLY

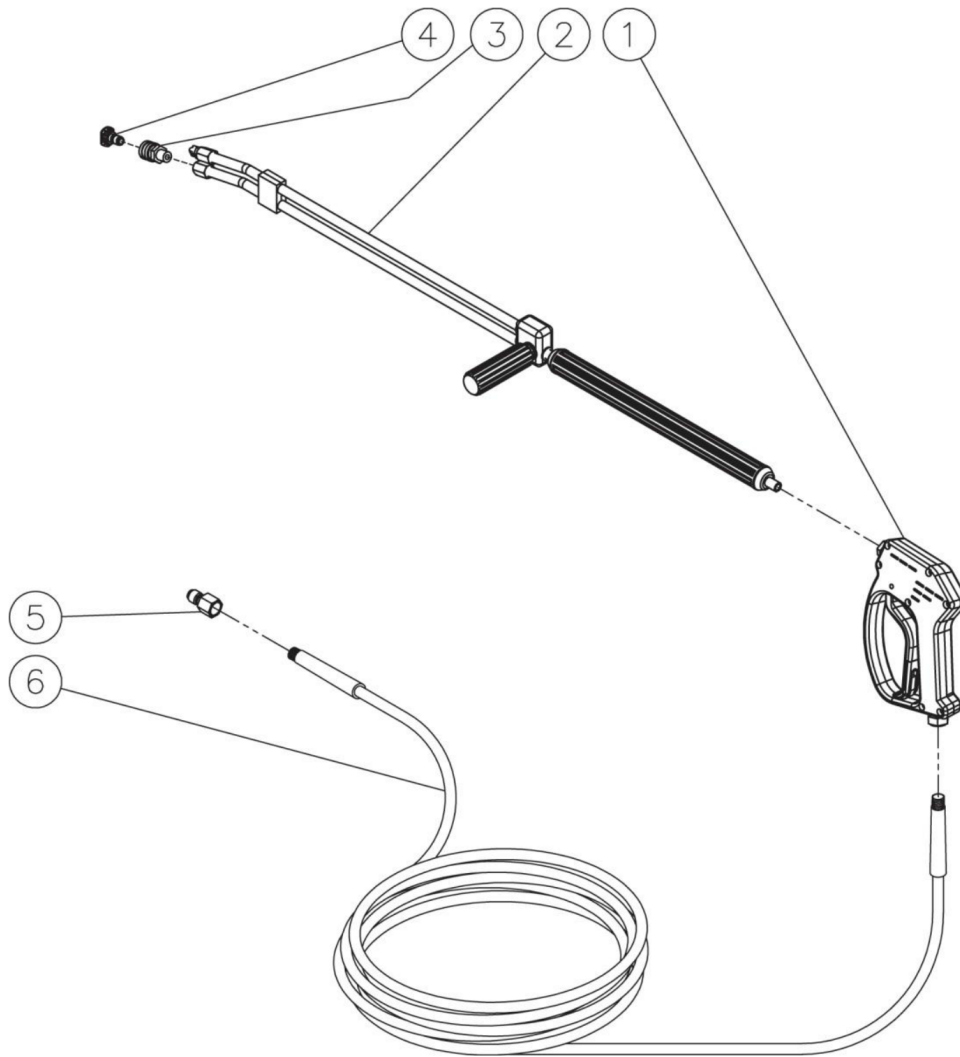


Id	Item #	Description	Quantity
1	16-0446	GUN ASSEMBLY	1
2	16-0417	DUAL LANCE 48" (3005)	1
2	16-0416	DUAL LANCE 36" (1803/2004/3004)	1
3	17-0028	QUICK CONNECT SOCKET	1
4	18-0402	NOZZLE- 0004.5 (3004)	1
4	18-0403	NOZZLE- 1504.5 (3004)	1
4	18-0404	NOZZLE- 2504.5 (3004)	1
4	18-0405	NOZZLE- 4004.5 (3004)	1

Id	Item #	Description	Quantity
4	18-0410	NOZZLE- 0005.5 (3005)	1
4	18-0411	NOZZLE- 1505.5 (3005)	1
4	18-0412	NOZZLE- 2505.5 (3005)	1
4	18-0413	NOZZLE- 4005.5 (3005)	1
4	18-0414	NOZZLE- 0006 (2004)	1
4	18-0415	NOZZLE- 1506 (2004)	1
4	18-0416	NOZZLE- 2506 (2004)	1
4	18-0417	NOZZLE- 4006 (2004)	1
4	18-0007	NOZZLE- 0007 (1805)	1
4	18-0008	NOZZLE- 1507 (1805)	1
4	18-0009	NOZZLE- 2507 (1805)	1
4	18-0032	NOZZLE- 4007 (1805)	1
5	17-0006	QUICK CONNECT PLUG	1
6	15-0166	HIGH PRESSURE HOSE ASSEMBLY 4500 PSI	1
6	15-0146	HIGH PRESSURE HOSE ASSEMBLY 3000 PSI	1



HS-4004-1MAH / HS-4004-1MAH (sn:15100090-99999999)

GUN ASSEMBLY

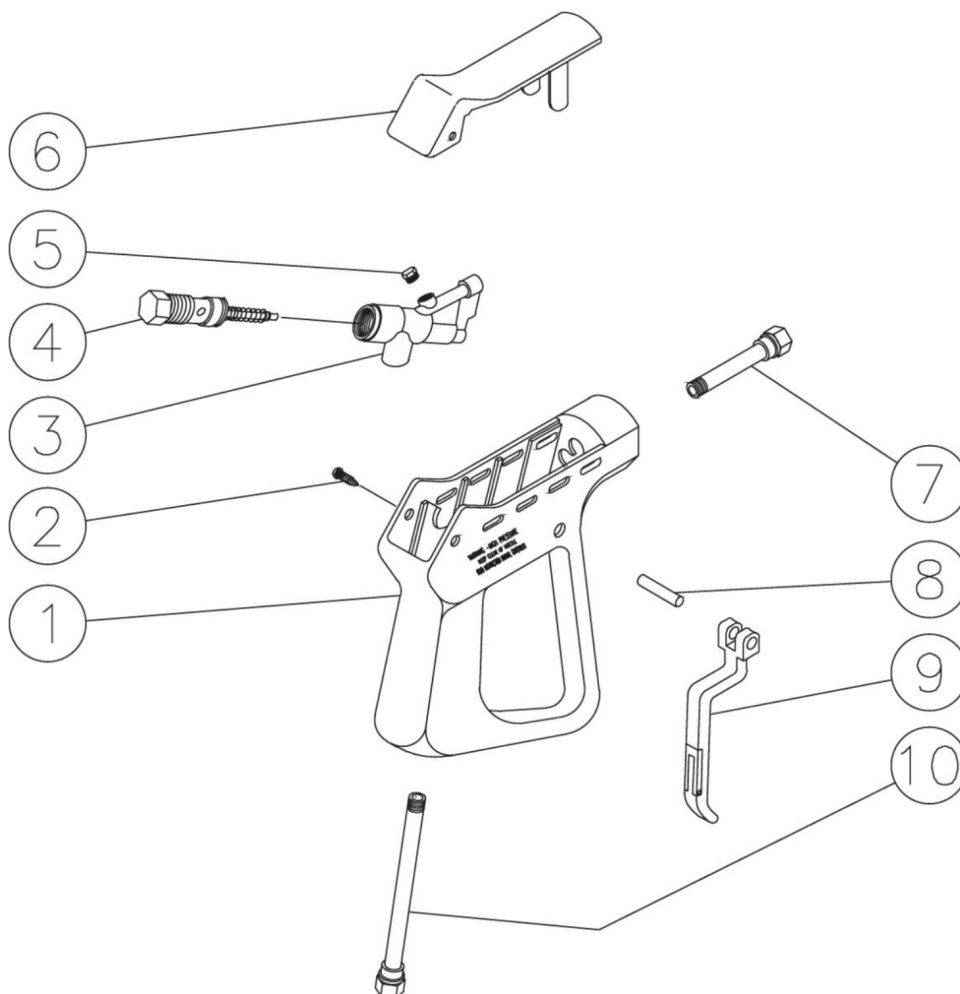


Id	Item #	Description	Quantity
1	16-0008	PLASTIC HOUSING	1
2	27-3230	SCREW	2
3	16-0012	BRASS HOUSING	1
4	70-0055	GUN REPAIR KIT	1
5	39-0024	BRASS PLUG	1
6	16-0009	PLASTIC COVER	1
7	16-0013	PIPE ASSEMBLY	1
8	16-0063	TRIGGER PIN	1
9	16-0010	TRIGGER/SAFETY LOCK-OFF	1

Id	Item #	Description	Quantity
10	16-0016	PIPE ASSEMBLY- INLET	1
	16-0001	COMPLETE GUN ASSEMBLY	1



HS-4004-1MAH / HS-4004-1MAH (sn:15100090-99999999)

ANGLED DUAL LANCE

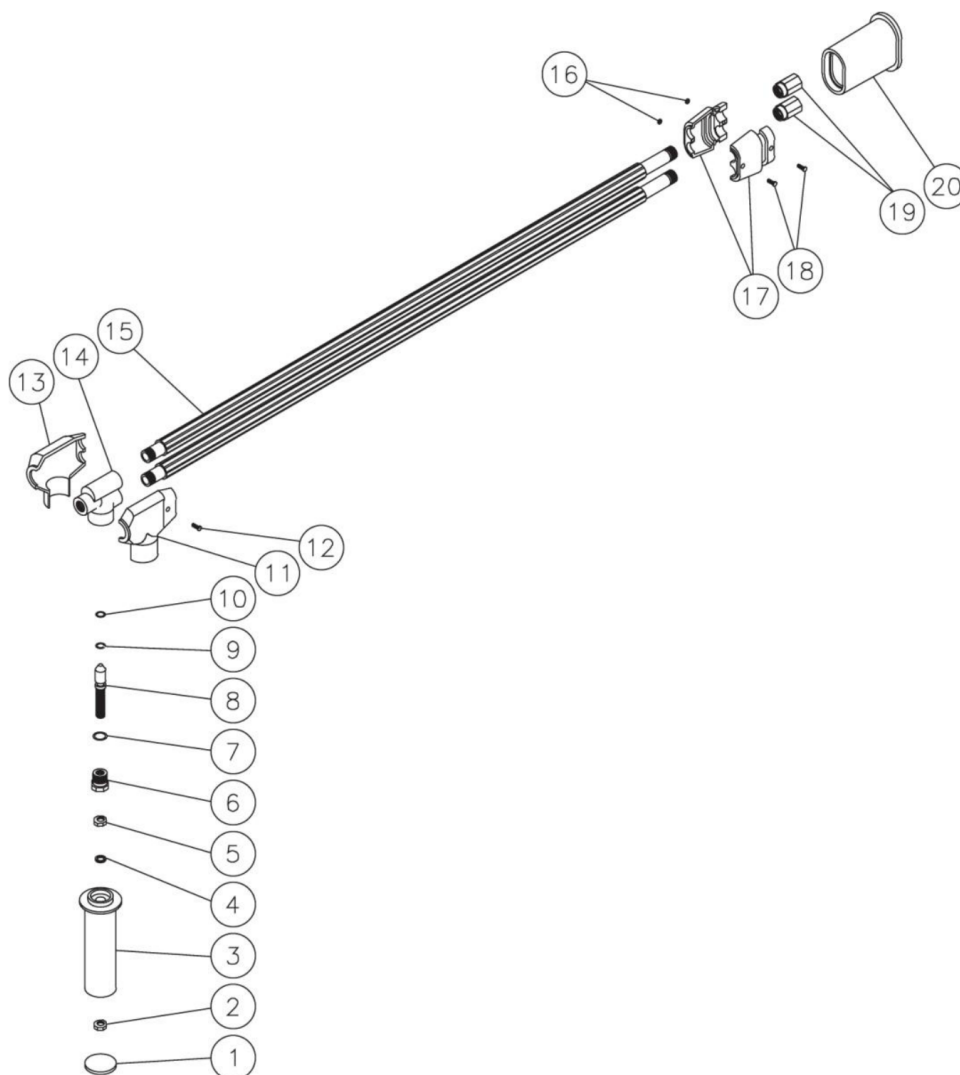


Id	Item #	Description	Quantity
1	16-0312	HANDLE PLUG	1
2	30-3002	HEX NUT	1
3	16-0313	HANDLE	1
4	28-1021	WASHER	1
5	30-3010	HEX NUT	1
6	23-0271	HEX ADAPTER	1
7	25-0351	O-RING	1

Id	Item #	Description	Quantity
8	16-0314	PISTON STEM	1
9	25-0352	BACK-UP RING	1
10	25-0353	O-RING	1
11	16-0315	UPPER PROTECTOR	1
12	27-8862	SELF TAPPING SCREW	1
13	16-0316	LOWER PROTECTOR	1
14	23-0272	BODY	1
15	N/A	ANGLED LANCE W/PROTECTIVE COVER	2
16	30-3060	HEX NUT	2
17	16-0318	PIPE CLAMP	2
18	27-8861	SCREW	2
19	24-0127	NIPPLE	2
20	16-0319	NOZZLE PROTECTOR	1
	70-0143	O-RING KIT (INC. 7, 9, 10)	



HS-4004-1MAH / HS-4004-1MAH (sn:15100090-99999999)

DUAL LANCE ASSEMBLY

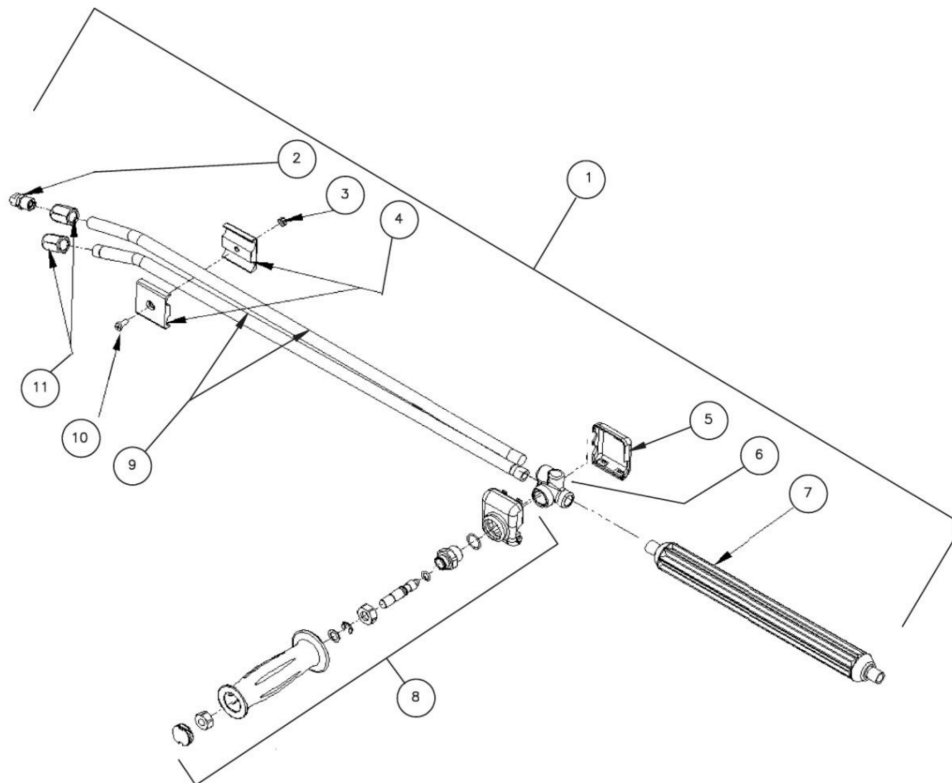

Id	Item #	Description	Quantity
1	16-0416	DUAL LANCE ASSEMBLY - 36" (INC. 2-11)	1
1	16-0417	DUAL LANCE ASSEMBLY - 48" (INC. 2-11)	1
2	18-0110	DETERGENT NOZZLE	1
3	30-6001	NUT	1
4	16-0420	CLAMP	2
5	N/A Sep.	LOWER VALVE COVER (SEE 16-0416 OR 16-0417)	1
6	N/A Sep.	HOUSING (SEE 16-0416 OR 16-0417)	1
7	16-0419	LANCE	1
8	70-0419	HANDLE REPAIR KIT	1
9	N/A Sep.	LANCE (SEE 16-0416)	2
9	N/A Sep.	LANCE (SEE 16-0417)	2
10	27-8196	SCREW	1

Id	Item #	Description	Quantity
11	24-0280	NOZZLE ADAPTER	2