



register and win!  
[www.kaercher.com](http://www.kaercher.com)

 **KÄRCHER**

**K 5.85 M**




## Operating Instructions

Before first use of the unit read these operating instructions and act in accordance with them.



5.960-847.0 (08/07)

**Assembly  
see page 10**

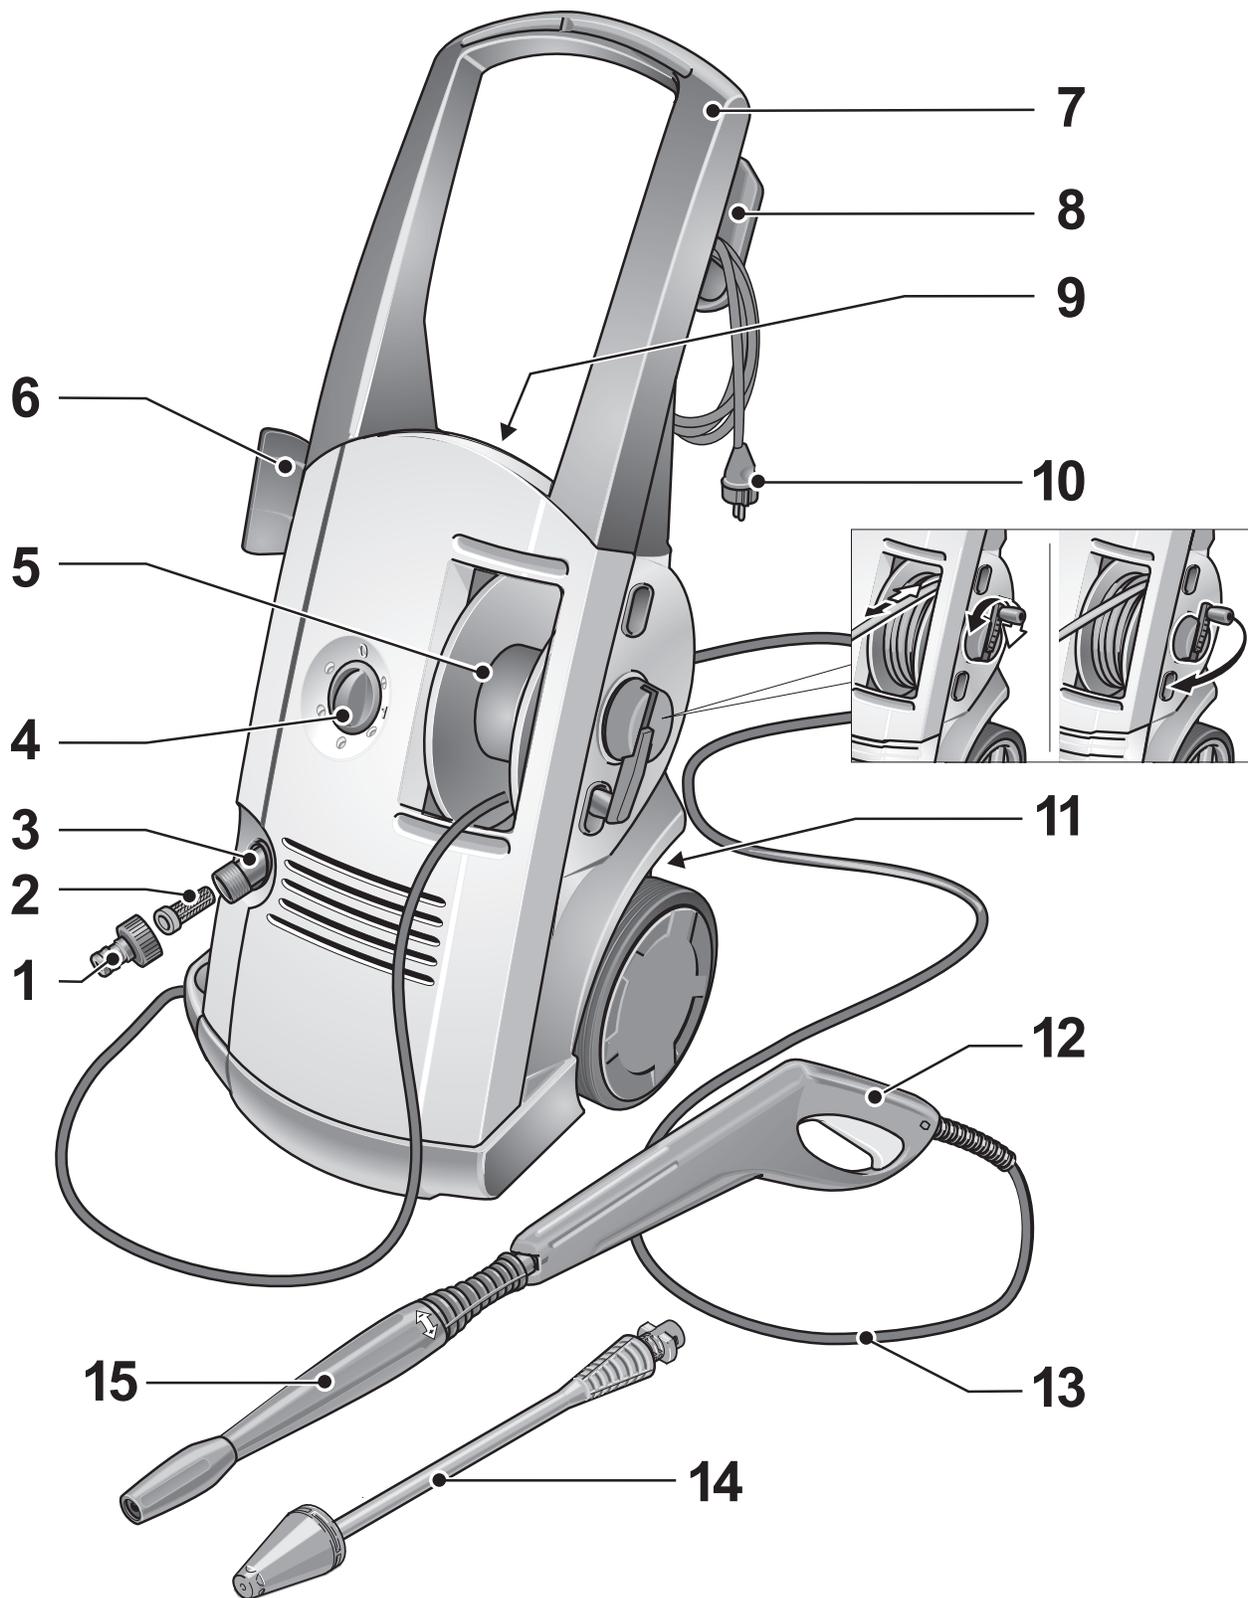

## Dear Customer,



Please read and comply with these instructions prior to the initial operation of your appliance. Retain these operating instructions for future reference or for subsequent possessors.

## Proper Use

This high-pressure cleaner is designed for domestic use only:

- to clean machines, vehicles, buildings, tools, facades, terraces, garden equipment etc. using a high-pressure water jet (and detergents if required).
- with accessories, replacement parts and detergents approved by Kärcher. Observe the instructions provided with these detergents.

## Environmental protection



The packaging material can be recycled. Please do not place the packaging into the ordinary refuse for disposal, but arrange for the proper recycling.



Old appliances contain valuable materials that can be recycled. Please arrange for the proper recycling of old appliances. Please dispose your old appliances using appropriate collection systems

## Warranty

The terms of the guarantee applicable in each country have been published by our respective national distributors. We will repair possible faults on your unit free of charge within the warranty period, insofar as the faults are caused by material defects or defective workmanship. Guarantee claims should be addressed to your dealer or the nearest authorized customer service centre, and supported by documentary evidence of purchase.

## Description of the Appliance

When unpacking the product, make sure that no accessories are missing and that none of the package contents have been damaged. If you detect any transport damages please contact your dealer.

### Illustrations on Page 2

- 1 Coupling element for water connection
- 2 Fine filter in the water connection
- 3 Water connection
- 4 ON/OFF switch for appliance
- 5 High pressure hose drum with handle
- 6 Handgun storage clip
- 7 Transport handle
- 8 Storage, power cord
- 9 Accessory mount
- 10 Power cable with plug
- 11 Detergent tank
- 12 Trigger gun with safety catch
- 13 High pressure hose
- 14 Spray lance with dirt blaster
- 15 Spray lance with pressure regulation (Vario Power)

## Special accessories

Special accessories expand the possibilities of using your appliance. Please contact your Kärcher dealer for further information.

## Safety instructions

### **⚠ Danger**

- Never touch the mains plug and the socket with wet hands.
- The appliance must not be used if the power cable or important parts of the appliance, e.g. safety devices, high-pressure hoses, spray guns, are damaged.
- The appliance may not be used in areas where a risk of explosion is present.
- If the appliance is used in hazardous areas (e.g. filling stations) the corresponding safety provisions must be observed.
- Check the power cord with mains plug for damage before every use. If the power cord is damaged, please arrange immediately for the exchange by an authorized customer service or a skilled electrician.
- High-pressure jets can be dangerous if improperly used. The jet must not be directed at persons, animals, live electrical equipment or at the appliance itself.
- The jet must not be directed at other persons or directed by the user at him/herself to clean clothing or footwear.
- Never use the appliance to clean objects containing hazardous substances (e.g. asbestos).
- Vehicle tyres or tyre valves are susceptible to damage from the high-pressure jet and may burst. The first indication of this is a discolouration of the tyre. Damaged vehicle tyres/tyre valves are highly dangerous. Ensure that a distance of at least 30 cm is observed when cleaning with the jet!
- Never draw in fluids containing solvents or undiluted acids and solvents! This includes petrol, paint thinner and heating oil. The spray mist thus generated is highly inflammable, explosive and poisonous. Do not use acetone, undiluted acids and solvents as they are aggres-



sive towards the materials from which the appliance is made.

### **⚠ Warning**

- Check the high-pressure hose for damage before every use. Please arrange for the immediate exchange of a damaged high-pressure hose.
- High-pressure hoses, fixtures and couplings are important for the safety of the appliance. Only use high-pressure hoses, fixtures and couplings recommended by the manufacturer.
- Do not use the appliance when there are other persons around unless they are also wearing safety gear.
- Unsuitable extension cables can be hazardous. Only use extension cables outdoors which have been approved for this purpose and labelled with a sufficient cable cross section:  
1 - 10 m: 1,5 mm<sup>2</sup>; 10 - 30 m: 2,5 mm<sup>2</sup>

### **Note**

- This device is not intended for use by persons (including children) with reduced physical, sensory or mental abilities or lacking experience and/or knowledge, unless they are supervised by a person responsible for their safety or are instructed by these persons on the use of the device. Children should be supervised, in order to guarantee that they do not play with the device.
- The operator must use the appliance properly. When working with the appliance, he must consider the local conditions and pay due care and attention to other persons, in particular children, who are nearby.
- Observe a distance of at least 30 cm when using the jet to clean painted surfaces to avoid damaging paintwork.
- Cleaning operations which produce oily waste water, e.g. engine washes, underbody washes, may only be carried out using washing stations equipped with an oil separator.

- *Wear protective clothing and safety goggles to protect against back spray containing water or dirt.*
- *Never leave the appliance unattended when it is in operation.*
- *Make sure that the power cable or extension cables are not damaged by running over, pinching, dragging or similar. Protect the power cable from heat, oil, and sharp edges.*
- *The connection between the power cable and extension cable must not lie in water.*
- *All current-conducting parts in the working area must be protected against jet water.*
- *The appliance may only be connected to an electrical supply which has been installed in accordance with IEC 60364.*
- *The appliance may only be connected to alternating current. The voltage must correspond with the type plate on the appliance.*
- *The minimum fuse rating required at the socket outlet is 10 A (slow-blow).*
- *To avoid accidents due to electrical faults we recommend the use of sockets with a line-side current-limiting circuit breaker (max. 30 mA nominal tripping current).*
- *The plug and coupling of the extension cable used must be watertight.*
- *Always fully unroll electrical cables from the cable drum.*
- *This appliance was designed to be used with detergents which are supplied or recommended by the manufacturer. The use of other detergents or chemicals may compromise the safety of the appliance.*

## Safety Devices

Safety devices serve to protect the user and must not be rendered inoperational or their functions bypassed.

### **Power switch**

The switch prevents unintended starting of the appliance. Stop the appliance during breaks or after operation.

### **Safety catch**

The safety catch on the trigger gun prevents the appliance from being switched on unintentionally.

# Commissioning and operation

## Before Startup

### Illustrations on Page 10

#### Figures 1-6

- Attach the loose individual parts to your high pressure cleaner.

#### Figures 7-8

- Join high pressure hose and trigger gun together.
- Push clip in until it engages and check that it is securely fastened by pulling on the high pressure hose.

## Water supply

According to the applicable regulations, the appliance must never be used on the drinking water net without a system separator. Use a suitable system separator manufactured by Kärcher; or, as an alternative, a system separator as per EN 12729 Type BA.



### Water supply from mains

For connection values, see type plate/technical data.

Observe regulations of water supplier.

- Use a fibre-reinforced hose (not included) with a standard coupling:
  - Minimum diameter, 1/2 inches (13 mm)
  - Minimum length, 7.5 m.
- Screw the coupling unit (supplied) to the water connection on the appliance.
- Push the water supply hose onto the coupling unit, then connect it to the tap.

### ⚠ Caution

Never operate the high-pressure cleaner when the tap is turned off as dry running will damage the high pressure pump.

If the water supply is not clean, the Kärcher water filter must be used (special accessory - order No. 4.730-059).

### Drawing in water from open reservoirs

When fitted with the appropriate accessories, this high-pressure cleaner can draw in surface water, e.g. from water butts or ponds (max. suction height 0.5 m).

- As the standard coupling system is not suitable for use in suction mode, the Kärcher suction hose with integrated filter should be used instead (special accessory, order no. 4.440-238) and suspended inside the water butt.
- Use the Kärcher water filter to protect the high pressure pump and accessories (special accessories, order no. 4.730-059). This filter removes dirt from incoming water.
- Appliance ventilation: Switch on the appliance without connection the high pressure hose and run it until the water discharging from the high pressure outlet is free of bubbles. Switch off appliance and reconnect high pressure hose.  
**Note:** Fill suction hose with water before use, this will help ventilate the pump of air.

## Start up

- Unwind the high pressure hose from the hose reel.
- Push the appropriate spray lance on to the trigger gun and fasten it by turning it through 90°.
- Open tap.
- Plug in the main plug.
- Set main switch to "I/ON".
- Press safety catch on the trigger gun to release it and pull lever.

## High pressure operation

### ⚠ Risk of injury

The trigger gun is subjected to a recoil force when the water jet is discharged. Make sure that you have a firm footing and are also holding the trigger gun and spray lance firmly.

### Spray lance with pressure regulation

Carrying out the most common cleaning tasks. The work pressure can be stagelessly regulated between "Min" and "Max".

- Release the lever on the trigger gun.
- Turn the spray lance to the desired position.

### Spray lance with dirt blaster

For strong contaminations.

## Operation with detergent

### Note

*Detergent can only be added when the appliance is being operated in low pressure mode.*

*All washing brushes supplied by Kärcher are designed for use with detergents.*

- Use spray lance with pressure regulation (Vario Power).
- Turn the spray lance to "Mix" position - low pressure.

### Detergent infeed from detergent tank

*During low pressure operation, detergent is automatically drawn in from the filled detergent tank.*

- Fill the detergent reservoir with, detergent tablet and water or detergent concentrate and water (*observe metering recommendations on the packaging label of the detergent*).
- Adjusting the detergent metering valve.
  - Medium quantity: Central position
  - Large quantity: "+" position
  - Small quantity: "-" position

### Recommended Cleaning Method

- 1 Spray a small dose of the detergent on the dry surface, and allow it to react (make sure the detergent does not dry up).
- 2 Wash off the loosened dirt using the high-pressure jet.

### Detergents

To ensure a trouble-free operation of the appliance and to match the individual cleaning task, we recommend our Kärcher detergent and maintenance agents. Please ask for our advice, or request information on the products.

## Interrupting operation

- Release the lever on the trigger gun.
- During breaks, use the safety catch to secure the trigger gun lever.
- During longer breaks (more than 5 minutes), also turn the appliance off using the ON/OFF switch.

## Finish operation

- If detergent has been added: Suspend detergent suction hose in a container filled with clear water, switch the appliance on for around 1 minute once the spray lance has been removed and rinse until water runs clear.
- Release the lever on the trigger gun.
- Set the appliance switch to "0/OFF".
- Turn off tap.
- Press the lever on the trigger gun to release any remaining pressure in the system.
- Disconnect the appliance from the water supply.
- Detach spray lance from the trigger gun.
- Switch the appliance on ("I/ON"), press the trigger gun lever until no further water is discharged (approx. 1 min).
- Set the appliance switch to "0/OFF".
- Pull out the mains plug.
- Store the coiled power cord above the accessories compartment.
- Use the safety catch to secure the trigger gun lever.
- Roll the high pressure hose on to the hose drum: Pull out the hose drum handle, turn it clockwise then retract the handle.
- Store the handgun and spray lance in the accessory mount.

## Transport

### Note

*Please remove the detergent from the detergent tank if the application is transported in a reclined position.*

## Maintenance and care

### **⚠ Risk of electric shock**

*Always switch off the appliance and pull out the mains plug before care and maintenance work.*

### Cleaning

Prior to longer periods of storage, e.g. in the winter:

- ➔ Clean the fine filter in the water supply connection: this can be easily removed using flat-nose pliers.
- ➔ Remove filter from suction hose for detergent and clean with running water.

### Maintenance

The appliance is maintenance-free.

### Frost protection

### **⚠ Risk of frost**

*Protect the appliance and accessories against frost.*

The appliance and its accessories can get destroyed through frost if there are any water residues in them. To avoid damage to them:

- ➔ Store the appliance and the entire accessories in a frost-safe room.

### Spare Parts

Only use original Kärcher spare parts. You will find a list of spare parts at the end of this document.

## Troubleshooting

You can rectify minor faults yourself with the help of the following overview. If in doubt, please consult the authorized customer service.

### **⚠ Risk of electric shock**

*Always switch off the appliance and pull out the mains plug before care and maintenance work.*

### **⚠ Warning**

*Repair works may only be performed by the authorized customer service.*

### **Appliance does not start**

- ➔ Check whether the voltage indicated on the type plate corresponds to the voltage of the socket.
- ➔ Check the power cable for damage.

### **Pressure does not build up in the appliance**

- ➔ Check the setting at the spray lance.
- ➔ Deaerate the appliance (see "Start-up")
- ➔ Clean the fine filter in the water supply connection: this can be easily removed using flat-nose pliers.
- ➔ Check all supply lines to the high pressure pump for leaks or blockages.

### **Strong pressure fluctuations**

- ➔ Clean the high-pressure nozzle: Remove dirt and debris from the nozzle bore with a needle and rinse through with water towards the front.
- ➔ Check the volume of incoming water.

### **High pressure pump leaking**

- ➔ Slight leakage from the high pressure pump is normal. If the leakage increases contact the authorized customer service.

### **No detergent infeed**

- ➔ Select the low-pressure setting for the spray lance.
- ➔ Clean the filter of the detergent suction hose.
- ➔ Check the detergent suction hose for kinks.

## Specifications

### Power connection

Voltage	(1~50 Hz) 230-240 V
Connected load	2,1 kW
Mains fuse (slow-blow)	10 A
Protective class	I
Protection class	IP X5

### Water connection

Max. feed temperature	40 °C
Min. feed volume	10 l/min
Max. feed pressure	0,6 MPa

### Performance data

Working pressure	12,5 MPa
Max. permissible pressure	13 MPa
Water flow rate	7,5 l/min
Detergent flow rate	0-0,2 l/min
Recoil force of trigger gun	20 N
Hand-arm vibration (ISO 5349)	0,8 m/s <sup>2</sup>
Sound pressure level L <sub>pA</sub> (EN60704-1)	78 dB(A)
Sound power level L <sub>WA</sub> (2000/14/EG)	92 dB(A)

### Dimensions

Length	400 mm
Width	365 mm
Height	900 mm
Weight	16,2 kg

***Subject to technical modifications!***











## Customer Service

### Australia


Kärcher Pty. Ltd.  
40 Koornang Road  
Scoresby, Victoria 3179

1800 675 714 (Free Call)  
[www.karcher.com.au](http://www.karcher.com.au)

# Assembly

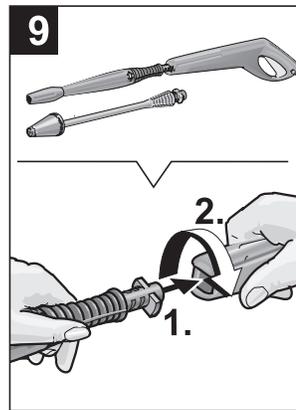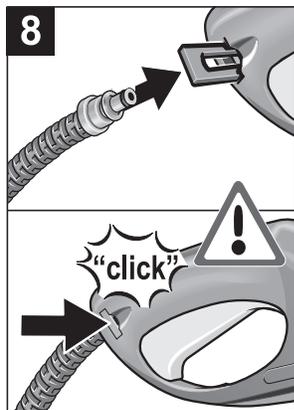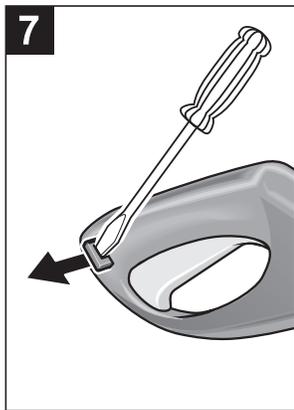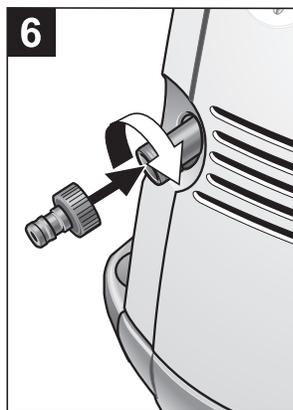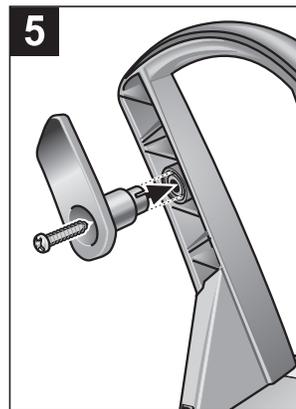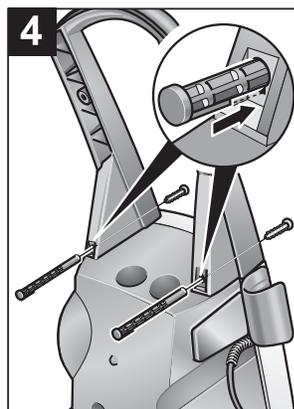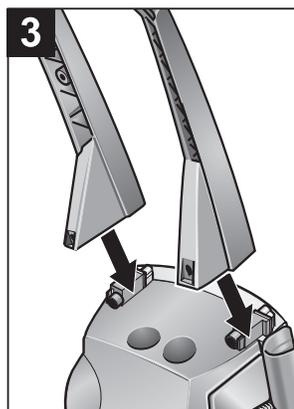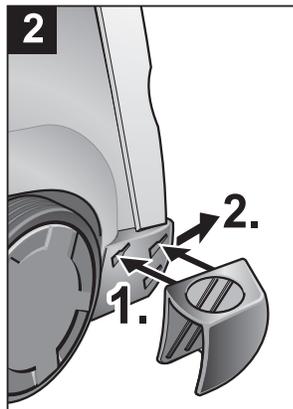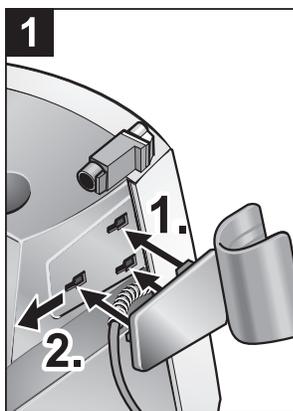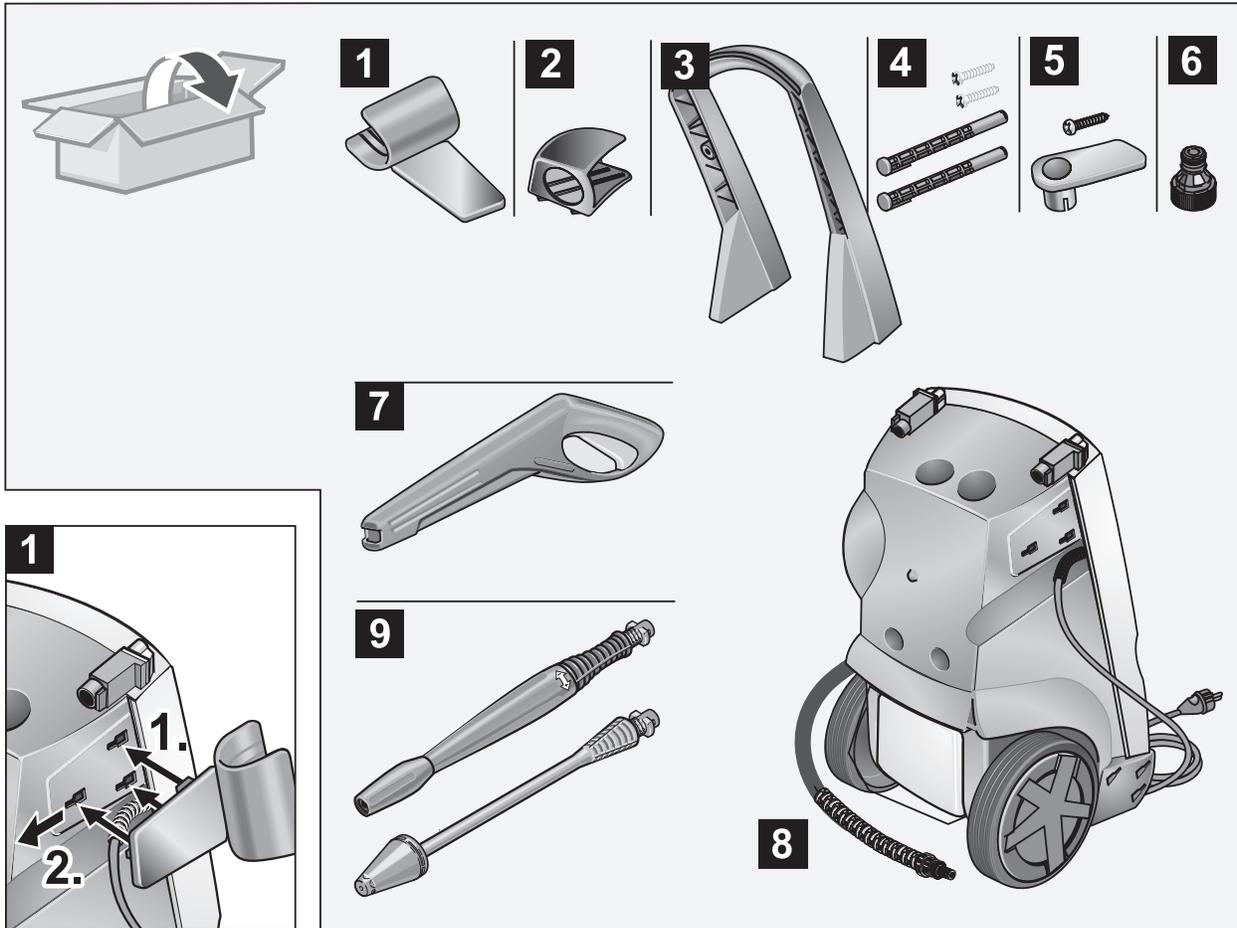

# Spare Parts

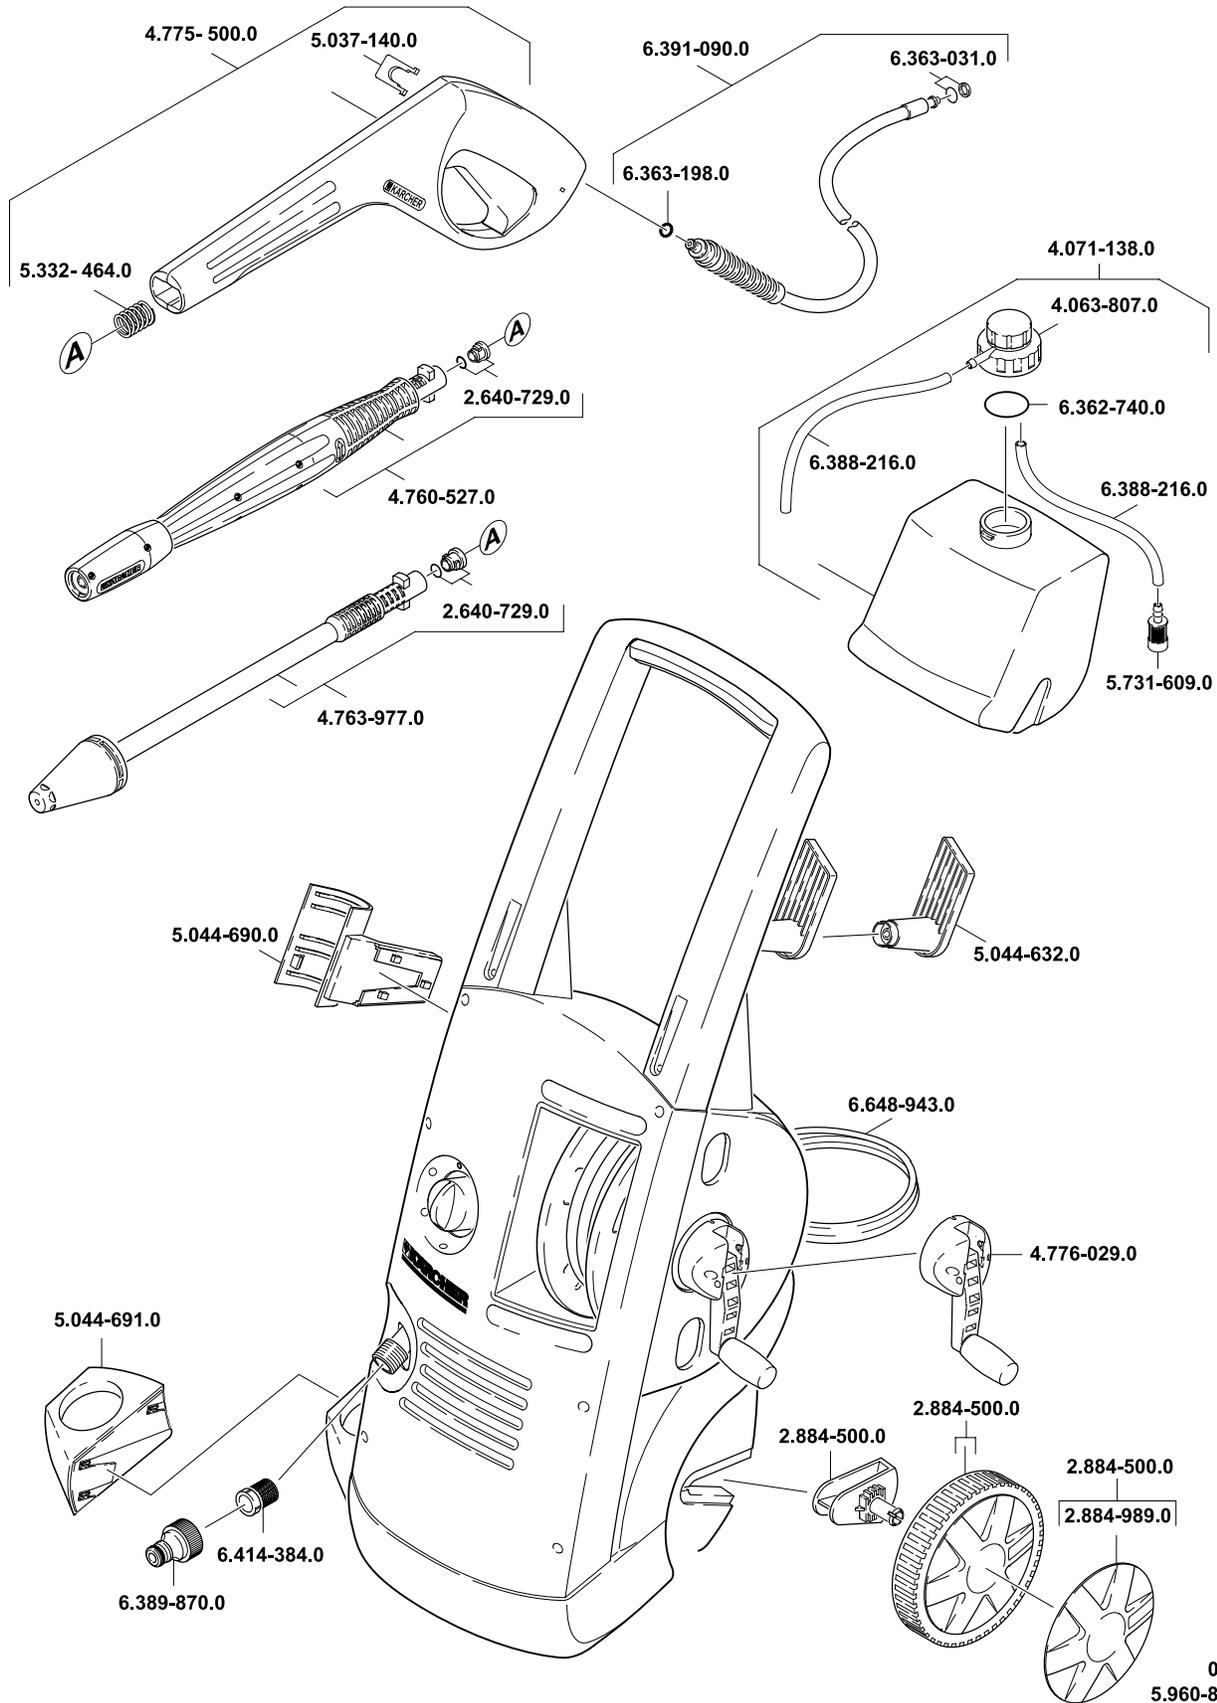

09/07  
5.960-847.0



[www.kaercher.com](http://www.kaercher.com)