

RY40020 STRING TRIMMER / EDGER ATTACHMENT

BATTERIES AND CHARGERS SOLD SEPARATELY

This unit consists of a Power Head (RY40000) and a String Trimmer/Edger Attachment

Since this is an electric unit, there are only a few replaceable parts on the unit:

- The spool (310917001) Spool w/Line AC14RSL
- The spool cap (522994001) SPOOL CAP AC14HC GRAY
- The 40V Slim Li-Ion Battery 15Ah (522994001)
- The 40V Lithium Ion Charger (140181001)

All of these replacement parts are available at Home Depot stores under the marketing model numbers (AC & OP)



Model # OP4015 (130208001)
40V Slim Li-Ion Battery 15Ah



Model # OP400 (140181001)
Charger, Ryobi 40V Lithium Ion

MAINTENANCE

STORING THE TRIMMER

- Remove the battery pack from the string trimmer before storing.
- Clean all foreign material from the trimmer.
- Store it in a place that is inaccessible to children.
- Keep away from corrosive agents such as garden chemicals and de-icing salts.

Replacement Spool Part Number AC14RSLA

Replacement Spool Cap Part Number..... AC14HCA

BATTERY PACK REMOVAL AND PREPARATION FOR RECYCLING

WARNING:

Upon removal, cover the battery pack's terminals with heavy-duty adhesive tape. Do not attempt to destroy or disassemble battery pack or remove any of its components. Lithium-ion batteries must be recycled or disposed of properly. Also, never touch both terminals with metal objects and/or body parts as short circuit may result. Keep away from children. Failure to comply with these warnings could result in fire and/or serious injury.