RY803265 QUICK REFERENCE GUIDE

WARNING:

This Quick Reference Guide is not a substitute for reading the operator's manual. To reduce the risk of injury or death, user must read and understand operator's manual before using this product. All page references refer to the operator's manual.

Connect your garden hose to the pressure washer

Completely uncoil garden hose or remove completely from reel to prevent kinks.

With no nozzle installed, squeeze the trigger

to relieve air pressure. Hold the trigger until a

Pour all but 2 oz. of the provided lubricant into

the engine through the oil fill hole. Check and

Turn the fuel valve to OFF before adding

Set unit on flat surface so engine is level. Remove dipstick, wipe clean, put back in hole (but don't screw in) and check lubricant level.

add additional lubricant as needed until the level


reaches the upper portion of the hatched area on the dipstick. Do not overfill. (See page 9).

Turn water faucet on fully.


Make sure there are no leaks.

steady stream of water appears.


FIRST TIME ASSEMBLY

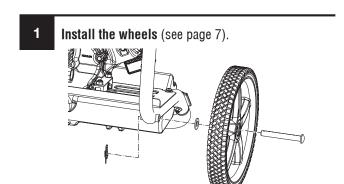

Install the handle (see page 7).

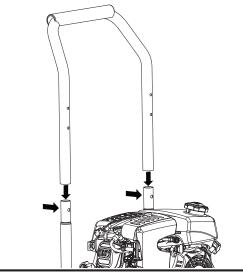


Install the storage panel and trigger handle

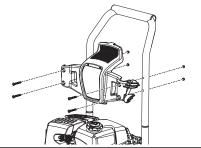


Connect the spray wand to the trigger handle



Connect the high pressure hose to the trigger

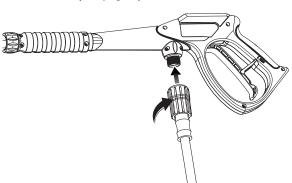

Connect the high pressure hose to the pump

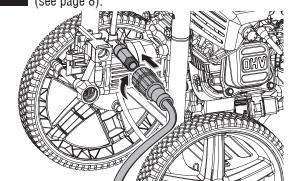

Completely uncoil and straighten high pressure hose to prevent kinks.


STARTING THE UNIT (COLD START)

Add fuel (see pages 9 and 10).

NOTICE:



Do not use E15 or E85 fuel in this product. It is a violation of federal law and will damage the unit and void your warranty. Only use unleaded gasoline containing up to 10% ethanol.

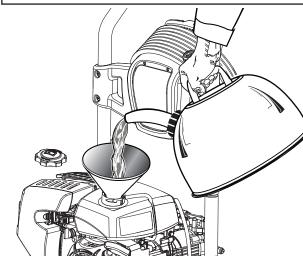


This is a 4-cycle engine. Do not mix fuel and




DO NOT OVERTILT THE UNIT!


Mix fuel stabilizer with gasoline according to manufacturer's directions prior to filling the

2 Open the fuel valve (see page 10).

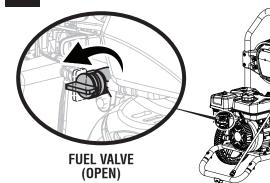


Move the choke lever to the start position

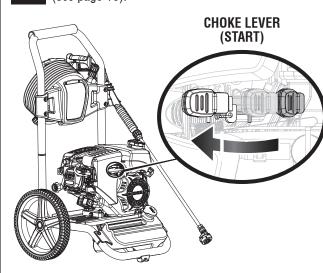


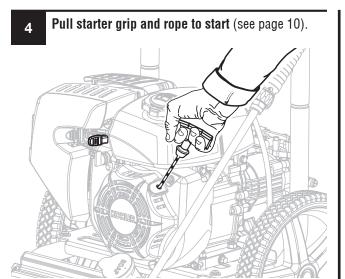

Allow the engine to run for 5 seconds, then push the choke to the RUN position. (see page 10).

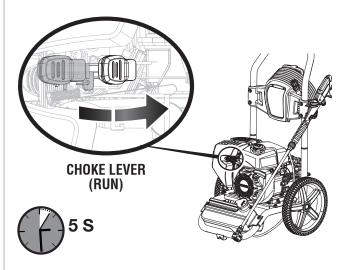


Move the choke lever fully to the right to Stop, then turn the fuel valve Off. (see page 11)

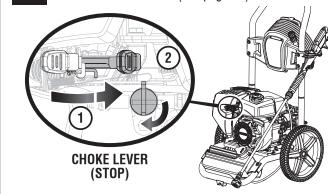

RESTARTING THE UNIT (HOT RESTART)

Pull starter grip and rope to start (see page 10).

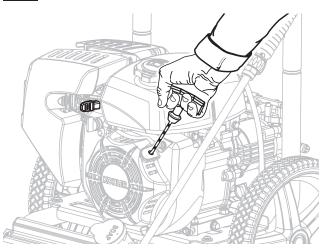


If the engine does not start:

- · check for enough fuel;
- · may need to adjust choke position;
- try starting again.

There may be residual water in the pump and/or lubricant in the engine due to performance testing.

USING DETERGENT

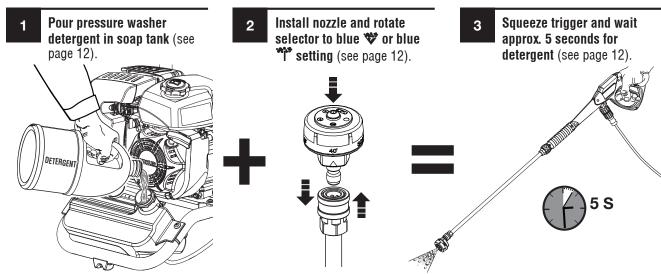




Use of soap nozzle will activate soap injector at a 20:1 dilution ratio. WARNING! Never use bleach or solvent-based detergent.

- Will damage your pump
- Will void your warranty
- Will damage plants/shrubs

NOZZLE SELECTION GUIDE

Use the chart below to determine the correct nozzle for your job.

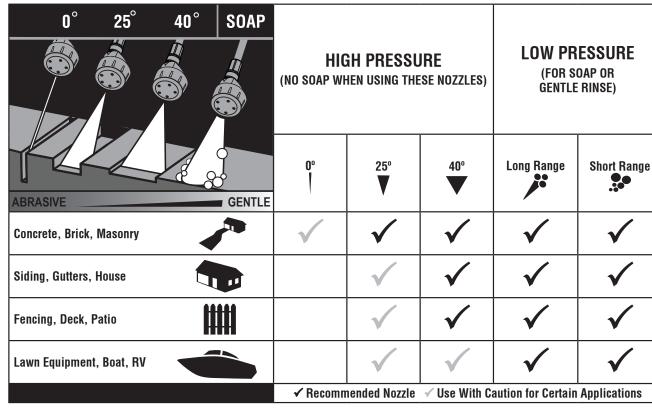

BEFORE STORING THE UNIT

Always add Pump Protector to the unit after each use and before storing. This will significantly improve pump life. (See page 15)

Pump Protector is available from your local retailer. For further assistance, call customer service

To add, follow the instructions provided by the Pump Protector manufacturer.



Make the most of your purchase! Go to www.ryobitools.com and register your new tool online. For questions about operating or maintaining your product, please call, 1-800-525-2579.



