




Travel Oil Cap

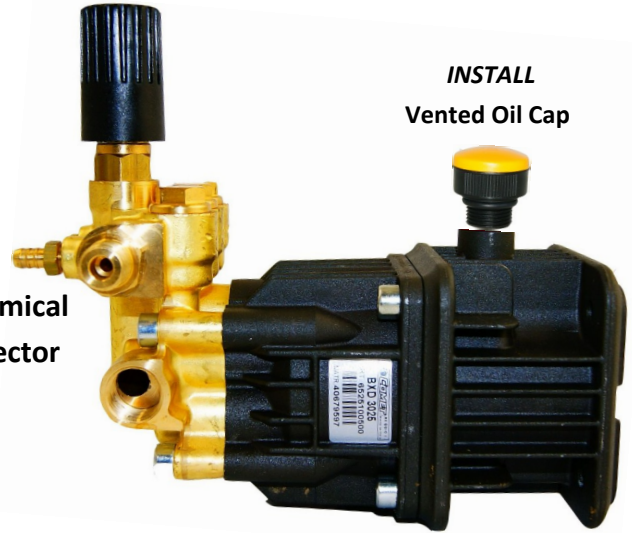

Chemical Injector


INSTALL
Vented Oil Cap

Oil Sight Glass



Pump Oil — 4.5 ounces

NOTE: Do not overfill. Oil should be at red dot level only.

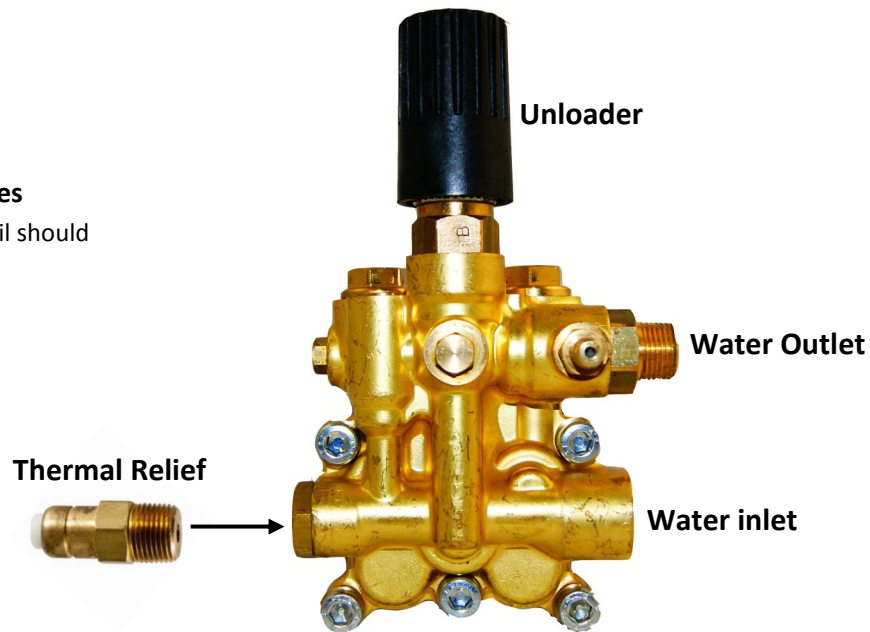

PUMP TIPS — BXD Series

- Make sure to remove the red oil travel plug before using the pump. Install the yellow vented oil cap is included. (See above)
- Install the Thermal Relief Valve before use. This will help prevent the pump from overheating.
- Pump oil should be replaced after every 25 hours of use. Special pump oil is required, **DO NOT** use standard motor oil.
- When storing over winter or in cold conditions, make sure to use *Pump Saver* or antifreeze to prevent pump damage.

Please contact APW Distributing with any questions **888-279-9274**