



**021000**

# Illustrated Parts List

## Model Series

# 021000

TYPE NUMBERS  
0010 through 0681.

### TABLE OF CONTENTS

<b>Air Cleaner</b> .....	3
<b>Blower Housing/Shrouds</b> .....	4
<b>Cams</b> .....	2
<b>Carburetor</b> .....	3
<b>Crankcase Cover/Sump</b> .....	2
<b>Cylinder</b> .....	2
<b>Flywheel</b> .....	2
<b>Fuel Tank</b> .....	4
<b>Head</b> .....	2
<b>Ignition</b> .....	4
<b>Kit/Gasket Sets - Carburetor</b> .....	3
<b>Kits/Gaskets - Engine</b> .....	2
<b>Muffler</b> .....	4
<b>Lubrication</b> .....	2
<b>Piston/Rings/Connecting Rod</b> .....	2
<b>Rewind</b> .....	4
<b>Valves</b> .....	2



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.


1330 REPAIR MANUAL

1058 OPERATOR'S MANUAL





1036 EMISSIONS LABEL









1019 LABEL KIT

GHOSTED PARTS ARE NOT SERVICABLE  
AND ARE SHOWN FOR REFERENCE ONLY.

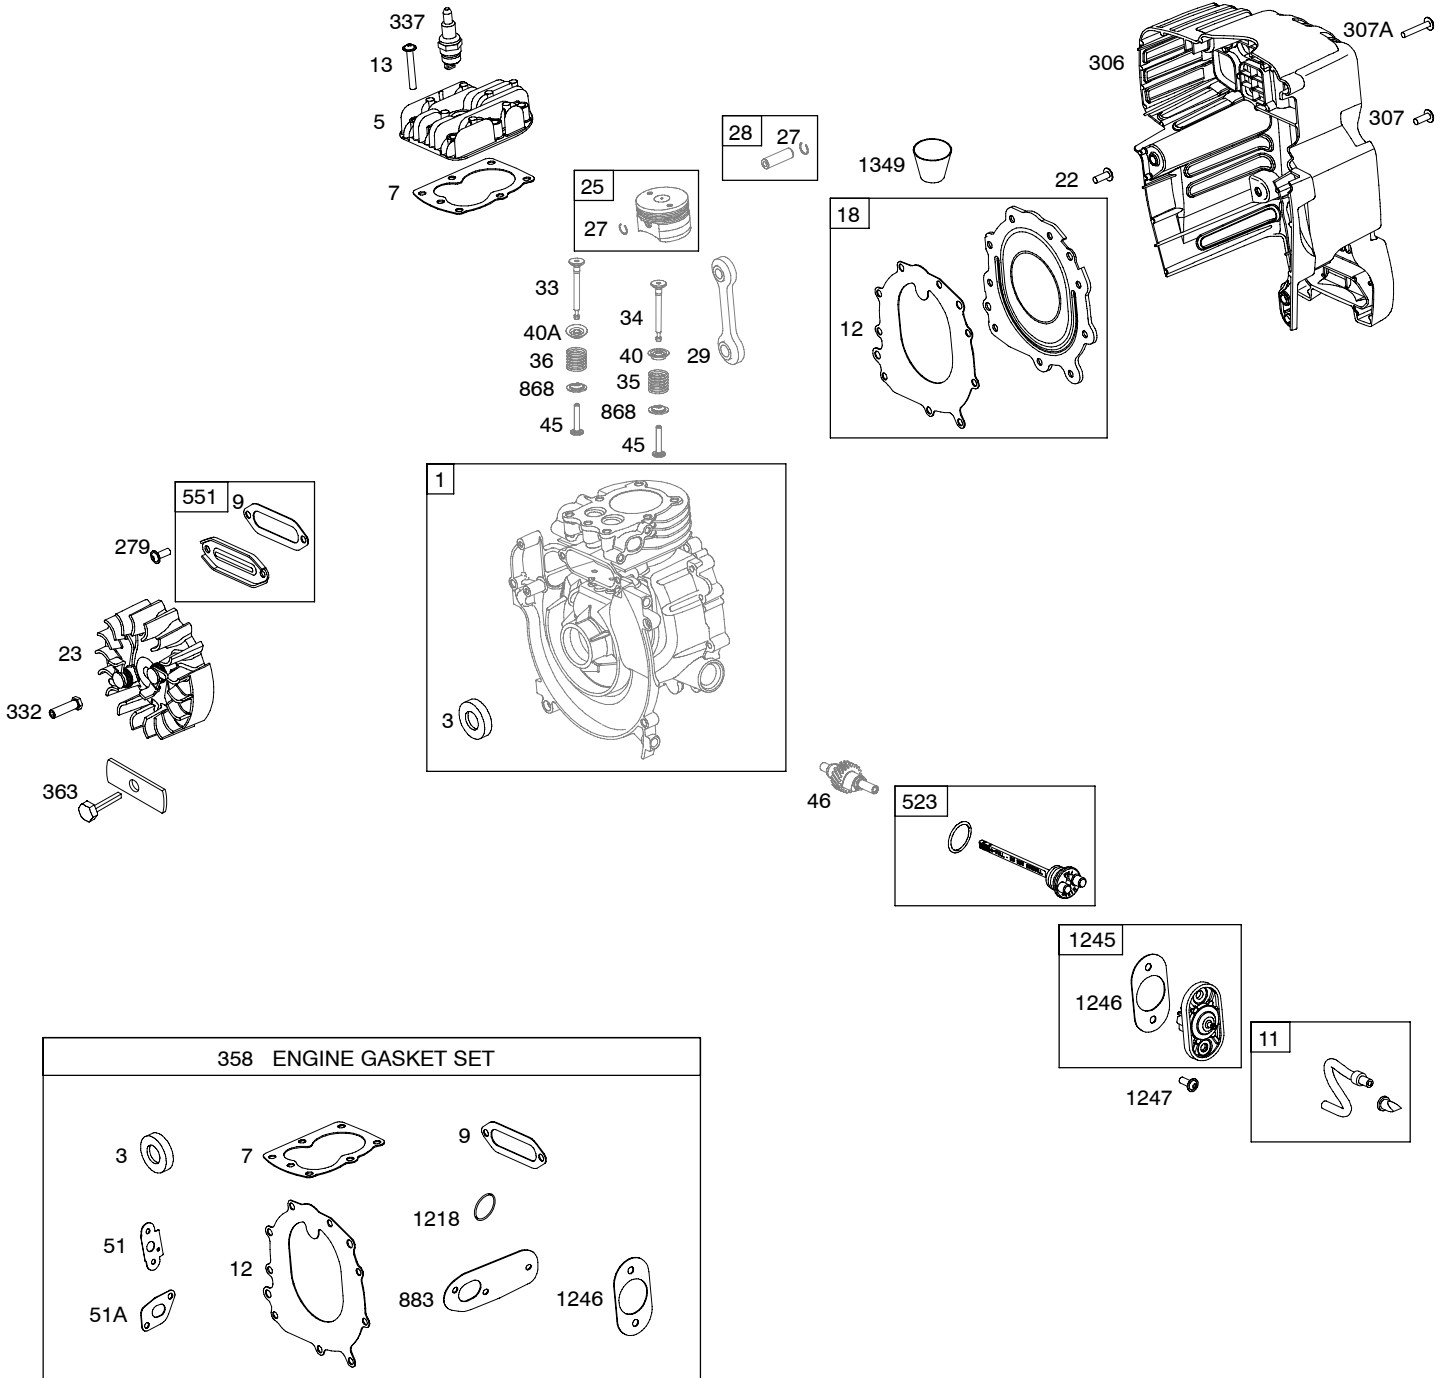

GHOSTED PARTS ARE NOT SERVICEABLE  
AND ARE SHOWN FOR REFERENCE ONLY.

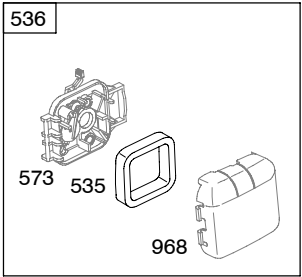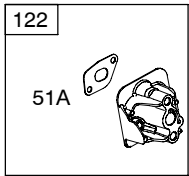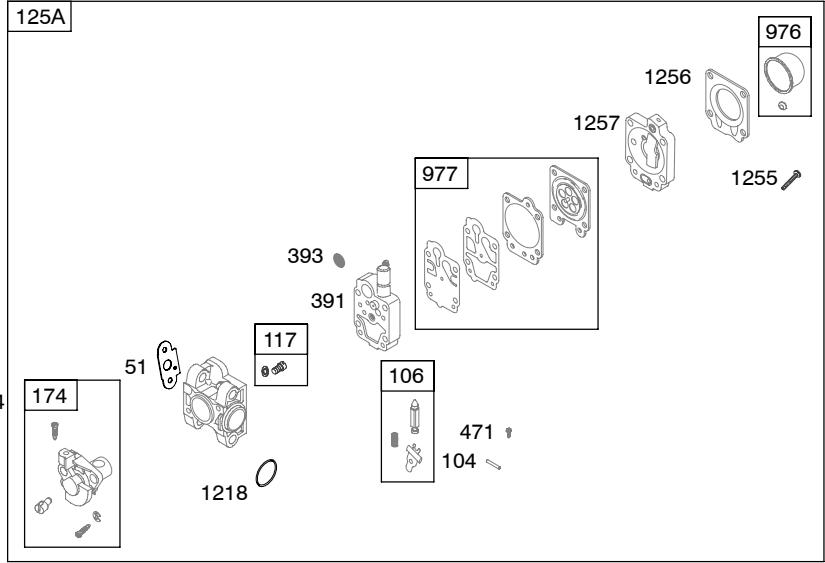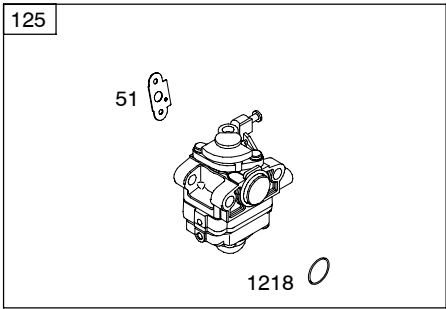

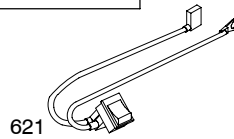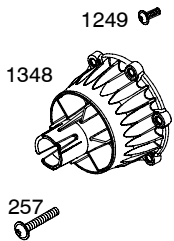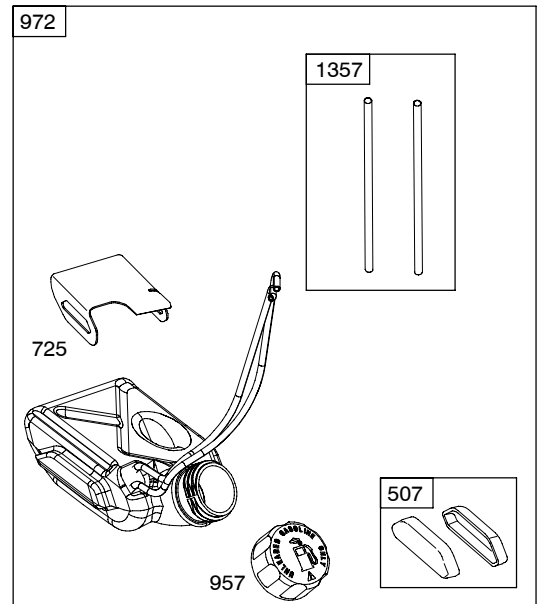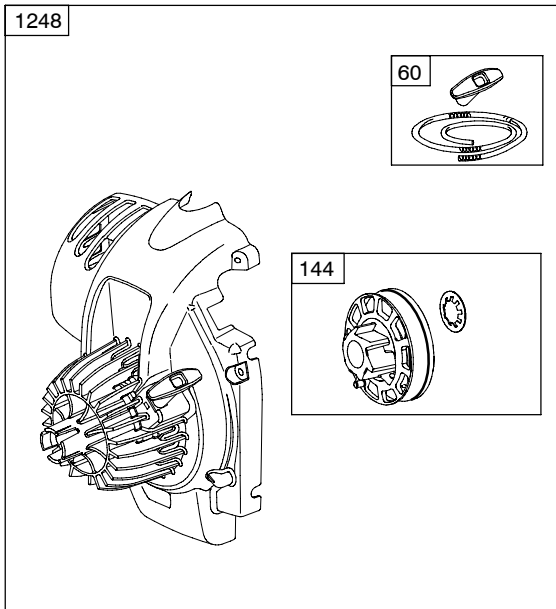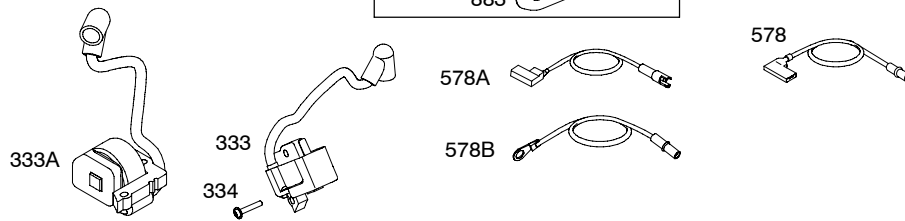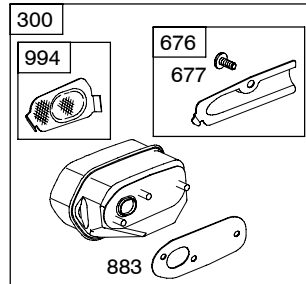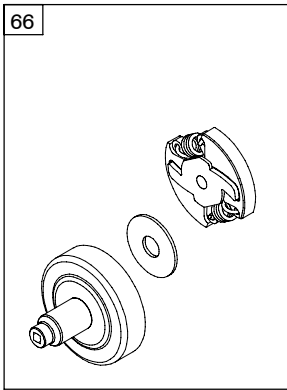

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
<i>Items listed without part numbers are not available.</i>			45		Tappet-Valve	332	696928	Nut (Flywheel)
			46		Camshaft			----- <b>Note</b> -----
			51	★696868	Gasket-Intake			<b>699870</b> Nut (Flywheel)
1		Cylinder Assembly	51A	★696867	Gasket-Intake			Used on Type No(s). 0015, 0112, 0119, 0120, 0126, 0129, 0130, 0134, 0137, 0170, 0171, 0523, 0531, 0681.
3	★696879	Seal-Oil (Magneto Side)	60	699944	Grip-Starter Rope			
5	696848	Head-Cylinder	66	699871	Clutch-Starter			
7	★696865	Gasket-Cylinder Head	104		Pin-Float Hinge			
9	★696931	Gasket-Breather	106		Seat-Inlet			
11	696871	Tube-Breather	117		Jet-Main (Standard)			
12	★696866	Gasket-Crankcase	122	696870	Spacer-Carburetor			
13	696891	Screw (Cylinder Head)	125	696949	Carburetor	333	696877	Armature-Magneto (Blue)
18	696950	Cover-Crankcase	125A		Carburetor (For Service of complete carburetor, see Ref 125)			----- <b>Note</b> -----
22	698031	Screw (Crankcase Cover/Sump)						<b>792479</b> Armature-Magneto (Green)
23	696885	Flywheel	144	791499	Pulley/Spring Assembly			Used on Type No(s). 0170, 0171.
25		Piston Assembly	174		Throttle Valve Assembly	333A	699875	Armature-Magneto (Pink) (Rev Limiting)
27		Lock-Piston Pin	257	696895	Screw (Starter Clutch)	334	696891	Screw (Magneto Armature)
28		Pin-Piston	279	698031	Screw (Valve Cover)	337	696876	Plug-Spark
29		Rod-Connecting	300	696874	Muffler			----- <b>Note</b> -----
33		Valve-Exhaust	306	696936	Shield-Cylinder			<b>790885</b> Plug-Spark
34		Valve-Intake	307	698031	Screw (Cylinder Shield)			Used on Type No(s). 0125, 0126, 0128, 0129, 0130, 0131, 0137, 0138, 0170, 0171, 0523, 0681.
35		Spring-Valve (Intake)	307A	696895	Screw (Cylinder Shield)			
36		Spring-Valve (Exhaust)				358	697010	Gasket Set-Engine
40		Retainer-Valve (Intake)				365	696894	Screw (Carburetor)
40A		Retainer-Valve (Exhaust)				391		Body-Fuel Pump
						393		Screen-Carburetor
						471		Screw (Inlet Seat) (Metering Lever Pin)
						507	696872	Insulator
						523	696930	Dipstick

★ Included in Engine Gasket Set-Ref. No. 358.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

# 021000

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
535	696923	Filter–Air Cleaner Foam	968		Cover–Air Cleaner	1247	698031	Screw (Cam Gear Cover)
536	790567	Cleaner–Air	972	696919	Tank–Fuel (Plastic)	1248	698050	Blower Housing/ Rewind
551	696849	Cover–Valve	976		Primer–Carburetor			----- <b>Note</b> -----
573		Plate–Back	977		Gasket Set– Carburetor			<b>699877</b> Blower Housing/Rewind Used on Type No(s). 0015, 0112, 0119, 0120, 0126, 0129, 0130, 0170, 0171, 0523, 0531, 0681.
578	792474	Wire Assembly	994	697038	Arrestor–Spark			<b>699872</b> Blower Housing/Rewind Used on Type No(s). 0118, 0125, 0128, 0131, 0135, 0138.
578A	699873	Wire Assembly	1019	697060	Kit–Label ----- <b>Note</b> -----			<b>792331</b> Blower Housing/Rewind Used on Type No(s). 0010, 0127, 0139.
578B	699874	Wire Assembly			<b>791497</b> Kit–Label Used on Type No(s). 0137, 0138, 0523, 0681.			<b>793278</b> Blower Housing/Rewind Used on Type No(s). 0134, 0137.
621	698243	Switch–Stop						
654	690800	Nut (Carburetor)	1036		Label–Emissions (Available from an Authorized Briggs and Stratton Service Dealer)			
676	697039	Deflector–Muffler						
677	697040	Screw (Muffler Deflector)						
725	696922	Gasket–Fuel Tank	1058	276183	Operator’s Manual			
868		Seal–Valve	1238	696893	Screw (Carburetor Spacer)			
883	★697035	Gasket–Exhaust	1245	696967	Cover–Cam Gear			
957	696921	Cap–Fuel Tank (Plastic)	1246	696929	Gasket–Cam Gear Cover			
957A	790882	Cap–Fuel Tank Used on Type No(s). 0128, 0129, 0130, 0131, 0170, 0171.				1249	698031	Screw (Blower Housing/ Rewind)
						1255		Screw (Primer Bulb Cover)
						1256		Cover–Primer Bulb
						1257		Backplate–Primer
						1330	275072	Repair Manual
						1348	699888	Cover–Clutch
						1349	699969	Cup–Oil Fill
						1357	699876	Sleeve–Fuel Line

★ Included in Engine Gasket Set–Ref. No. 358.

◆ Included in Carburetor Gasket Set–Ref. No. 977.