



Mi-T-M® CORPORATION

8650 Enterprise Drive, Peosta IA 52068
319-556-7484 / Fax 319-556-1235

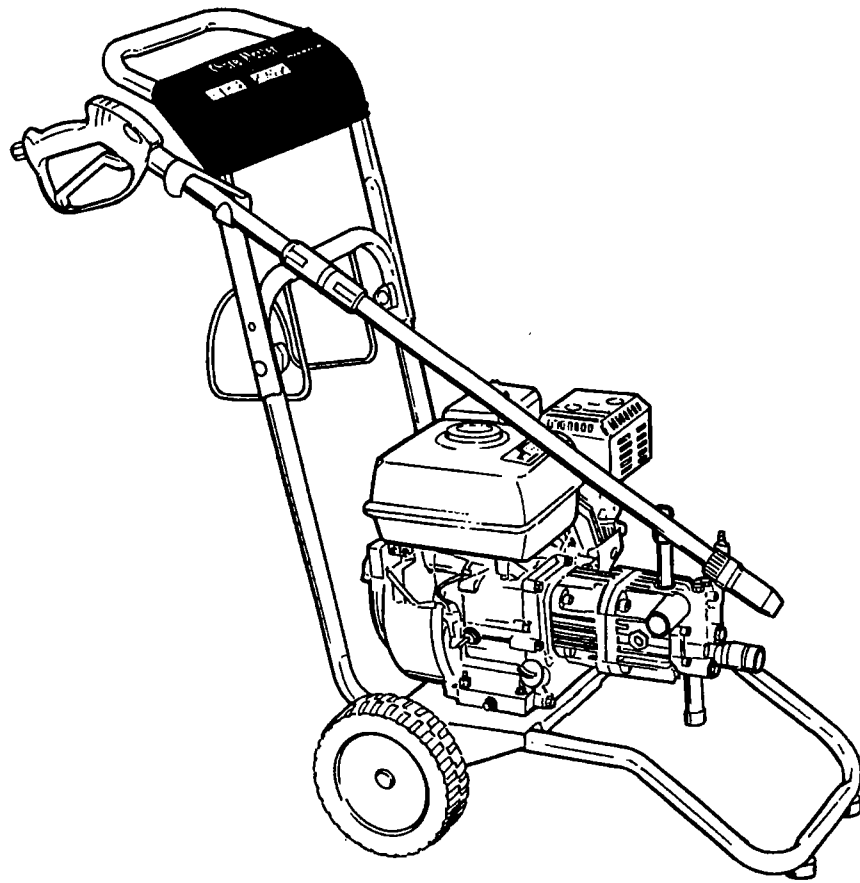


Call for Parts 888-279-9274

CM-1503 / CM-2003 PARTS LISTING

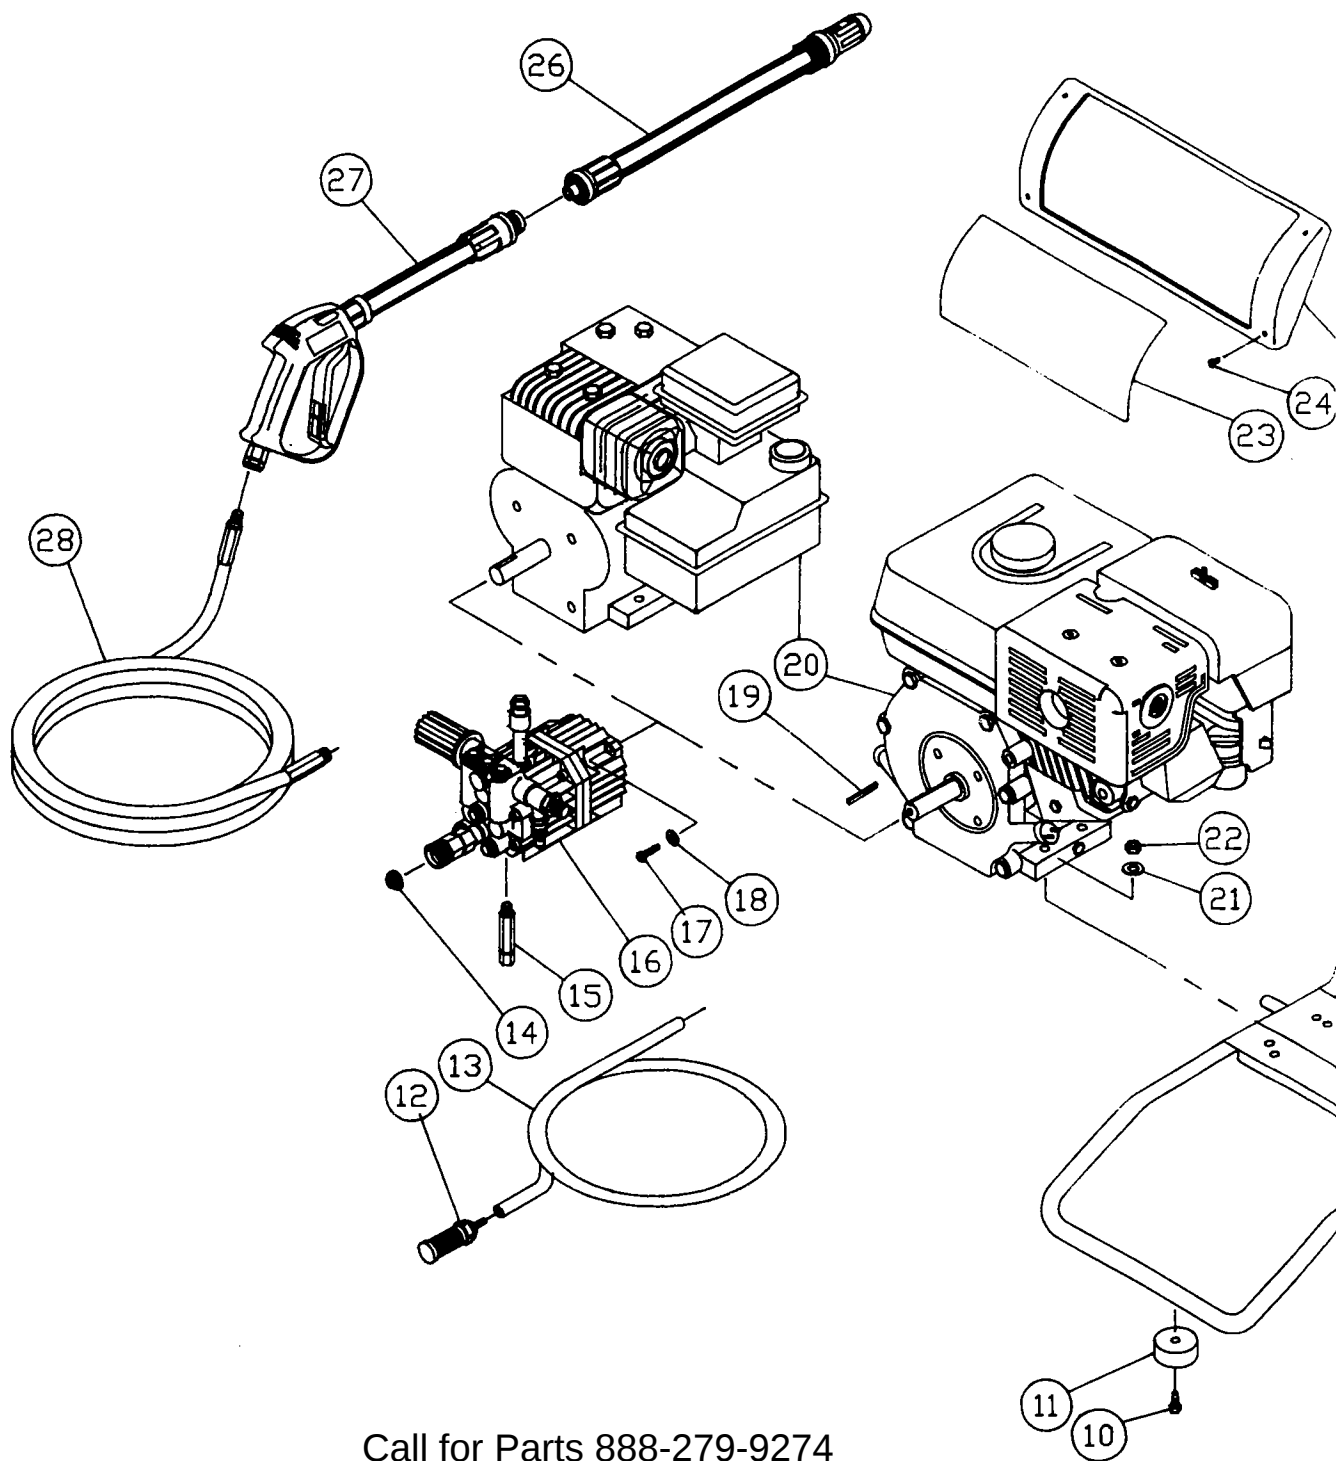


Call for Parts 888-279-9274

CM-1503 & CM-2003 ASSEMBLY PARTS LISTING

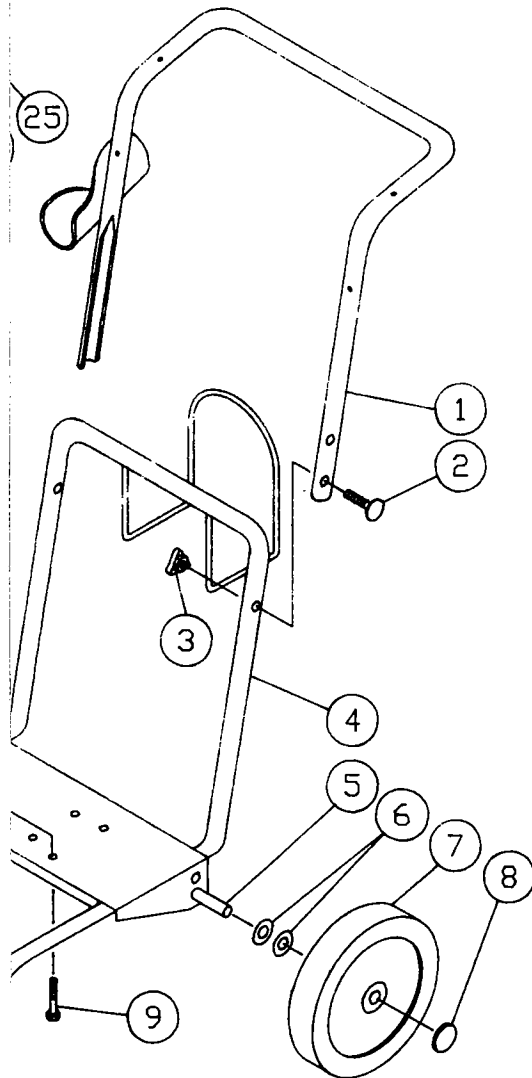

Ref. No.	Description	Part No.
1.	Handle.....	7-0106
2.	Carriage bolt-handle	31-0051
3.	Knob	7-0107
4.	Frame.....	5-0102
5.	Axle	20-0343
6.	Washer.....	28-0006
7.	Wheel.....	14-0052
8.	Hub cap	33-0055
9.	Bolt-engine	27-0070
10.	Bolt-isolator	27-3062
11.	Isolator-rubber foot	14-0007
12.	Strainer-detergent	19-0050
13.	Hose-detergent	15-0021
14.	Filter-water inlet.....	19-0001
15.	Heat dump valve (on CM-2003 only)	22-0148
16.	Pump:	
	For CM-1503	3-0101
	For CM-2003	3-0104
17.	Bolt-pump	27-0847
18.	Washer-pump	29-0007
19.	Key-engine shaft	43-0073
20.	Engine:	
	For CM-1503 (5 HP Briggs)	1-0059
	For CM-2003 (5.5 HP Honda).....	1-0013
21.	Washer-engine	28-0003
22.	Hex nut-engine.....	30-0157
23.	Decal-warning	34-0471
24.	Bolt-name plate.....	27-3049
25.	Name plate-plastic	62-0084
26.	Variable nozzle assembly:	
	For CM-1503	16-0192
	For CM-2003	16-0173
27.	Gun assembly complete	16-0167
28.	High pressure hose assembly	15-0133


HOSE, GUN, WAND ASSEMBLY (CM-1503 & CM-2003) EXPLODED VIEW

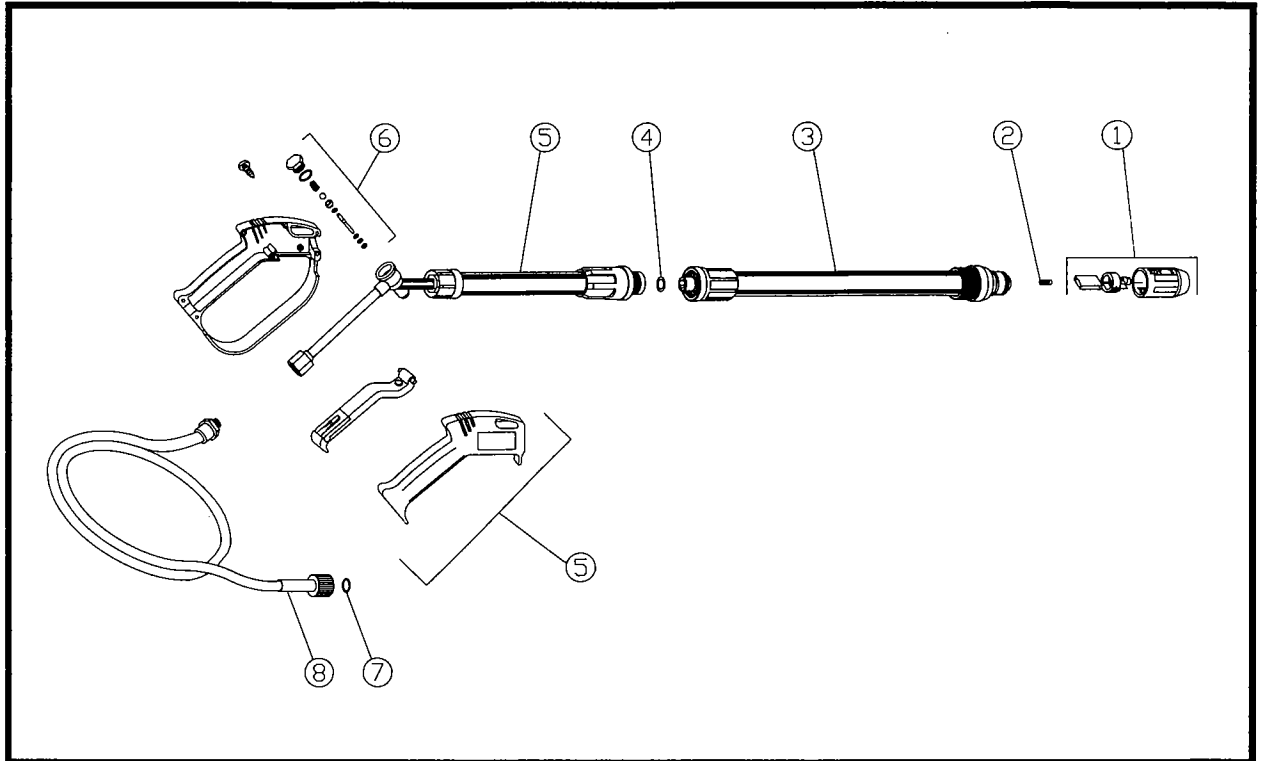

HOSE, GUN, WAND ASSEMBLY (CM-1503 & CM-2003) PARTS LISTING

Ref.		Part
No.	Description	No.
1	Angle regulator kit	16-0203
2	Pressure nozzle	
	(For CM-1503).....	18-0239
	(For CM-2003).....	18-0227
3	Lance with Variable nozzle assembly (Includes items 1, 2 and 4)	
	(For CM-1503).....	16-0192
	(For CM-2003).....	16-0173
4	O-ring	25-0259
5	Gun assembly complete (Includes item 6)	16-0167
6	Gun repair kit	16-0198
7	O-ring	25-0258
8	Hose assembly complete (Includes item 7)	15-0133

PUMP ASSEMBLY (3-0101 & 3-0104) EXPLODED VIEW

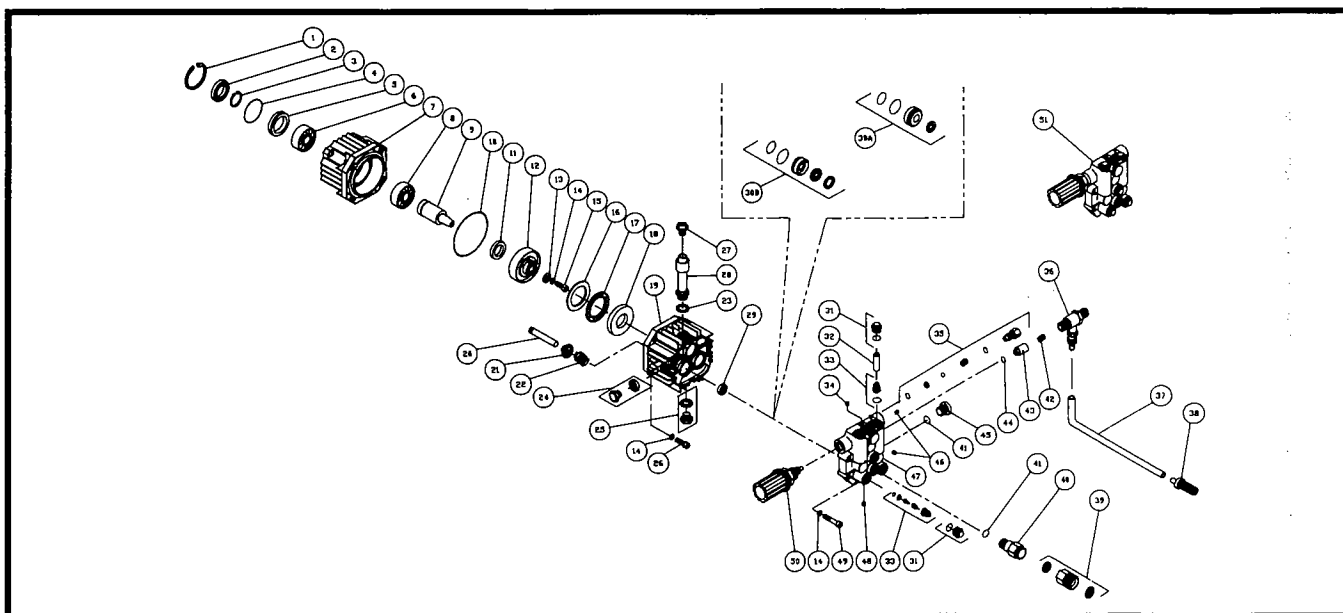

PUMP ASSEMBLY (3-0101 & 3-0104) PARTS LISTING

Ref. No.	Description	Part No.	Ref. No.	Description	Part No.
1	C-clip.....	46-0405	30B	Packing kit for 3-0104 (3 required)	46-0579
2	Spacer.....	46-0407	31	Valve plug kit.....	46-0478
3	C clip.....	46-0406	32	Valve spacer.....	46-0359
4	O-ring	25-0227	33	Valve assembly kit for 3-0101 (Includes 6 valves)	46-0408
5	Oil seal	46-0425	33	Valve assembly kit for 3-0104 (Includes 6 valves)	46-0576
6	Bearing-rear.....	48-0036	34	Screw.....	27-8821
7	Engine flange.....	52-0028	35	Unloader check valve kit.....	46-0479
8	Bearing-front.....	48-0037	36	Detergent injector for 3-0101	46-0553
9	Shaft.....	46-0427	36	Detergent injector for 3-0104.....	46-0476
10	O-ring	25-0243	37	Detergent hose.....	15-0021
11	Washer	46-0468	38	Detergent strainer	19-0050
12	Cam disc for 3-0101	46-0555	39	Garden hose swivel.....	23-0186
12	Cam disc for 3-0104	46-0467	40	Inlet connector	23-0188
13	Washer	28-0133	41	O-ring.....	25-0273
14	Washer	29-0055	42	Spring	49-0086
15	Screw	27-8432	43	No return valve.....	46-0465
16	Bearing disc.....	48-0035	44	O-ring.....	25-0278
17	Needle bearing	48-0030	45	Manifold plug.....	39-0072
18	Bearing disc.....	48-0032	46	Screw.....	27-8822
19	Pump housing	46-0426	47	Manifold head for 3-0101	46-0424
20	Piston for 3-0101	46-0363	47	Manifold head for 3-0104	46-0577
20	Piston for 3-0104	46-0578	48	Screw.....	27-8198
21	Piston spring retainer	46-0362	49	Manifold bolt.....	27-8811
22	Piston spring.....	49-0081	50	Pressure regulator assembly.....	46-0474
23	Gasket.....	26-0168	51	Pump manifold kit for 3-0101 (Includes items 30A-34, 43-45, 47)	46-0554
24	Oil sight glass	46-0419	51	Pump manifold for 3-0104 (Includes items 30B-34, 43-45, 47)	46-0580
25	Oil drain assembly kit	46-0398		Pump assembly complete.....	3-0101, 3-0104
26	Screw	27-8194			
27	Oil port cap.....	39-0066			
28	Oil port extension	46-0351			
29	Oil seal	26-0163			
30A	Packing kit for 3-0101 (3 required)	46-0477			