



PARTS LIST FOR
CWC-3008/5004/5005/6004-3MGH and CWC-5004-3MAH
after serial #10552631

For parts Call 888-279-9274

ENGINE OIL GRADE:	SAE10W-30
ENGINE OIL CAPACITY:	64 oz.
PUMP OIL GRADE:	Mi-T-M #AW-4085-0016
PUMP OIL CAPACITY:	31 oz.
PRESSURE NOZZLE SIZE FOR	
CWC-3008-3MGH	10.0
CWC-5004-3MGH	3.5
CWC-5004-3MAH	3.5
CWC-5005-3MGH	4.5
CWC-6004-3MGH	3.0

This Parts Listing has been compiled for your benefit. You can be assured your Mi-T-M Cold Water Pressure Washer was constructed and designed with quality and performance in mind using over 25 years experience in the pressure washer business. Each component has been rigorously tested to insure the highest level of acceptance.

The contents of this Parts Listing are based on the latest product information available at the time of publication. Mi-T-M reserves the right to make changes in price, color, materials, equipment, specifications or models at any time without notice.

WARNING

THIS IS A PROFESSIONAL HIGH PRESSURE, COLD WATER PRESSURE WASHER. CAUTION SHOULD BE OBSERVED WHEN USING OR REPAIRING THIS UNIT! READ AND FOLLOW THE SAFETY WARNINGS LISTED BELOW BEFORE ATTEMPTING ANY REPAIRS ON THIS PRESSURE WASHER!

SAFETY WARNINGS

- 1. NEVER alter or modify the equipment. Be sure any accessory items and system components being used will withstand the pressure developed. Use only genuine Mi-T-M parts for repair of your pressure washer. Failure to do so can cause hazardous operating conditions and will VOID warranty.
- 2. NEVER make adjustments on machinery while the unit is connected to the power source. Turning over the machinery by hand during adjustment or cleaning might start the machinery, causing serious injury to the operator.
- 3. Know how to stop and bleed pressures quickly. Be thoroughly familiar with controls.
- 4. Before servicing the unit, turn unit off, relieve the water pressure and allow the unit to cool down. Do not make repairs while the unit is running. Service in a clean, dry, flat area.
- 5. After testing the machine, DO NOT leave the pressurized unit unattended. Shut off the unit and release trapped pressure before leaving.

Table of Contents

NOTES3

SPECIFICATIONS.....5

FRAME ASSEMBLY FOR CWC-3008-3MGH (AFTER SERIAL #10552631).....6

FRAME ASSEMBLY FOR CWC-5004-3MAH (AFTER SERIAL #10552631).....8

FRAME ASSEMBLY FOR CWC-5004-3MGH (AFTER SERIAL #10552631).....10

FRAME ASSEMBLY FOR CWC-5005-3MGH (AFTER SERIAL #10552631).....12

FRAME ASSEMBLY FOR CWC-6004-3MGH (AFTER SERIAL #10552631).....14

CWC 5004/5005 PLUMBING ASSEMBLY16

CWC 3008 PLUMBING ASSEMBLY18

CWC 6004 PLUMBING ASSEMBLY20

PUMP ASSEMBLY (3-0213)22

PUMP ASSEMBLY (3-0261)24

PUMP ASSEMBLY (3-0262)26

PUMP ASSEMBLY (3-0279)28

UNLOADER ASSEMBLY (8-0032)30

UNLOADER ASSEMBLY (8-0373)32

UNLOADER ASSEMBLY (8-0522)34

GUN ASSEMBLY (16-0343)36

GUN ASSEMBLY (16-0447)38

HONDA ENGINE ASSEMBLY (851-0385).....40

NOTES

SERIAL # BREAK

10552631

DATE

12/16/10

REASON

PAINT CODE CHANGED. FRAMES CHANGED FROM GRAY TO BLACK.


NOTES

SPECIFICATIONS

MODEL NUMBER	CWC-3008-3MGH	CWC-5004-3MGH	CWC-5005-3MGH	CWC-6004-3MGH	CWC-5004-3MAH
Operating Pressure (PSI/Bar):	3000/210.9	5000/344.7	5000/344.7	6000/413.6	5000/344.7
High Pressure Nozzle:	10.0	3.5	4.5	3.0	3.5
Water Volume (GPM/lpm):	8.0/30.3	4.0/15.1	4.5/17.0	3.7/14	4.0/15.1
Engine:	Honda				
Horsepower	GX630				
Engine Type	4 Stroke, Overhead Valve, V-Twin				
Oil Type	SAE10W-30				
Oil Capacity (oz./liter)	64/1.9				
Low Oil Protection	Oil Alert™				
Fuel Type	Unleaded Gasoline 86 Octane Minimum				
Fuel Capacity (gal./liter)	11.5/43.5				
Starting	Electric Start				
Maximum No Load RPM	3600 (+/- 100) RPM				
Thermal Relief Valve	Relieves heated water during unloader bypass stage				
Pump:	Belt Driven, Oil Bath, Triplex Piston				
Oil Type	Mi-T-M Pump Oil #AW-4085-0016				
Oil Capacity (oz./liters)	31.0/.92				
Plungers	Ceramic				
Manifold	Forged Brass				
Valves	Stainless Steel				
Unloader	Preset				
Unit Net Weight (lbs/Kg)	378/171.5	388/176	401/182	378/171	
Unit Shipping Weight (lbs/Kg)	501/227	511/232	480/218	501/227	
Unit Net Dimension (in/cm)	43Lx27.75Wx36H/109Lx70.5Wx91.5H				
Unit Shipping Dimension (in/cm)	46.5Lx31.5Wx48.5H/118Lx80Wx123H				

FRAME ASSEMBLY FOR CWC-3008-3MGH (AFTER SERIAL #10552631)


CWC-3008-3MGH 033111-AJH

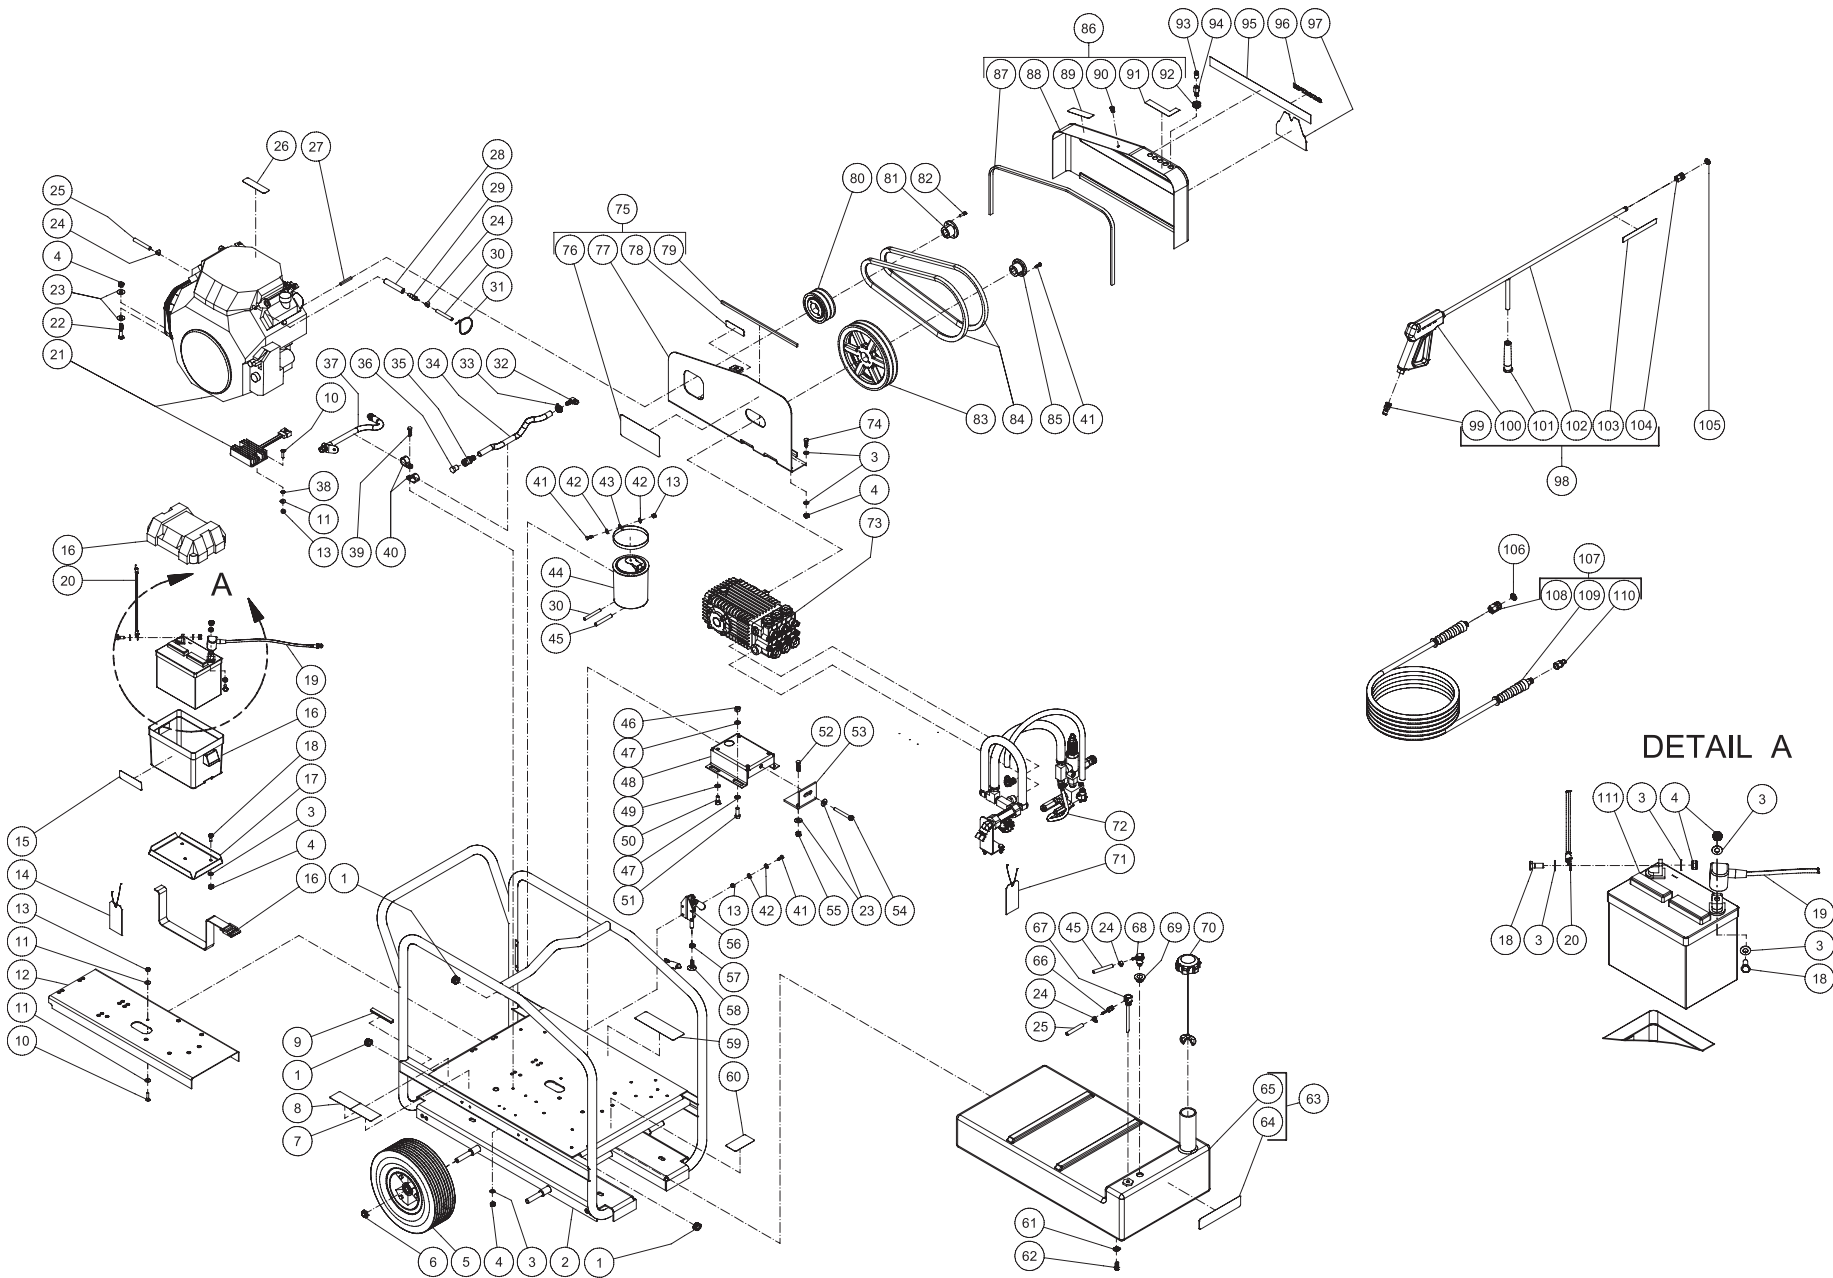

For parts Call 888-279-9274

CWC-3008-3MGH 033111 AJH											
FRAME ASSEMBLY											
ITEM	DESCRIPTION	PART #	QTY	ITEM	DESCRIPTION	PART #	QTY	ITEM	DESCRIPTION	PART #	QTY
1	GROMMET	33-0002	4	40	CLIP	33-0291	2	79	EDGING *(TWO FEET REQUIRED)	33-0020	1
2	FRAME	5-0136A01	1	41	BOLT	27-0015	6	80	SHEAVE	10-0043	1
3	WASHER	28-0003	15	42	WASHER	28-0002	8	81	BUSHING	9-0005	1
4	LOCKNUT	30-0157	9	43	CARB CANISTER STRAP	20-1187A01	2	82	BOLT	27-0771	2
5	WHEEL	14-0092	4	44	CARB CANISTER	62-0212	1	83	SHEAVE	10-0037	1
6	LOCKNUT	30-0117	4	45	FUEL HOSE *(SIX FEET REQUIRED)	15-0008	1	84	COG BELT BX46	11-0054	2
7	DECAL- Mi-T-M EMISSIONS	N/A	1	46	LOCKNUT	30-0161	4	85	BUSHING	9-0017	1
8	DECAL- SILVER STICKER	N/A	1	47	WASHER	28-0030	8	86	ASSEMBLY BELTGUARD COVER (87-92)	851-0348	1
9	EDGING *(ONE FOOT REQUIRED)	33-0020	1	48	PUMP BRACKET	5-0101A01	1	87	EDGING *(FOUR FEET REQUIRED)	33-0020	1
10	BOLT	27-0016	3	49	LOCKWASHER	29-0055	4	88	BELTGUARD COVER	6-0064A01	1
11	WASHER	28-0021	4	50	BOLT	27-8471	4	89	DECAL - WARNING RISK OF BURNS (SEE 34-9017)	N/A	1
12	SUPPORT BRACKET	13-0120A01	1	51	BOLT	27-0167	4	90	FASTENER	33-0197	1
13	LOCKNUT	30-0155	7	52	BOLT	27-0118	2	91	DECAL - NOZZLE	34-0500	1
14	TAG	34-0096	1	53	BRACKET	13-0003A01	1	92	GROMMET	33-0001	5
15	DECAL - RISK OF INJURY (SEE 34-9017)	N/A	1	54	BOLT	27-0576	1	93	NOZZLE 0010 1/4 MEG	18-0050	1
16	BATTERY BOX	33-0092	1	55	LOCKNUT	30-0159	6	-	NOZZLE 1510 1/4 MEG	18-0058	1
17	BATTERY RETAINER	20-0264A01	1	56	PUSH/PULL TOGGLE CLAMP	33-0400	1	-	NOZZLE 2510 1/4 MEG	18-0119	1
18	BOLT	27-0066	4	57	NUT	30-0004	1	-	NOZZLE 4010 1/4 MEG	18-0121	1
19	CABLE	32-9112	1	58	BOLT	27-9550	1	94	QC 1/4F X 1/4 PLUG SS	17-0017	4
20	CABLE	32-9111	1	59	DECAL - OPERATION (SEE 34-9017)	N/A	1	95	DECAL - Mi-T-M STRIPE	34-2189	1
21	ENGINE ASSY	851-0385	1	60	DECAL - WARNING RISK OF INJECTION E/F (SEE 34-9017)	N/A	1	96	DECAL - DIE CUT 3000 PSI	34-2214	1
22	BOLT	27-0121	4	61	WASHER	28-0022	4	97	DECAL - Mi-T-M	34-2169	1
23	WASHER	28-0023	11	62	BOLT	27-9524	4	98	ASSEMBLY GUN W/S.S. LANCE 48" (99-104)	851-0309	1
24	CLAMP WORM	42-0004	4	63	ASSEMBLY - FUEL TANK (64-65)	851-0319	1	99	QUICK CONNECT	17-0005	1
25	FUEL HOSE *(FOUR FEET REQUIRED)	15-0008	1	64	DECAL - RISK OF BURNS (SEE 34-9017)	N/A	1	100	GUN	16-0001	1
26	DECAL - RISK OF BURNS (SEE 34-9017)	N/A	1	65	FUEL TANK	12-0060	1	101	GRIP	7-0002	1
27	KEY	43-0078	1	66	BARB	23-0051	1	102	WAND	16-0418	1
28	HOSE *(ONE FOOT REQUIRED)	15-0020	1	67	FUEL PICK UP	33-0271	1	103	DECAL - RISK OF INJECTION (SEE 34-9017)	N/A	1
29	COUPLING	55-0700	1	68	VENT	62-0216	1	104	QUICK CONNECT	17-0036	1
30	FUEL HOSE *(THREE FEET REQUIRED)	15-0261	1	69	ROLLOVER VALVE GROMMET	62-0214	1	105	O-RING	25-0122	1
31	CABLE TIE	33-0022	2	70	FUEL CAP - SEALED/TETHERED	12-0220	1	106	O-RING	25-0123	1
32	ELBOW	23-0119	1	71	TAG - WATER SUPPLY INLET (E)	34-0097	1	107	PRESSURE HOSE ASSEMBLY (108-110)	851-0317	1
33	HOSE CLAMP	42-0011	1	72	CWC-3008 PLUMBING ASSY	N/A	1	108	QC SOCKET	17-0041	1
34	HOSE *(TWO FEET REQUIRED)	15-0305	1	73	PUMP - TSF2221	3-0279	1	109	HOSE 1/2"IDX50' 4500PSI	15-0056	1
35	HOSE BARB	23-0360	1	74	BOLT	27-0067	4	110	QUICK CONNECT	17-0006	1
36	PLUG	23-0411	1	75	ASSEMBLY - BELTGUARD BACK (76-79)	851-0310	1	111	BATTERY	32-0058	1
37	DRAIN HOSE	70-0555	1	76	DECAL - WARNING (SEE 34-9017)	N/A	1	-	DECAL SET - CWC (E/S)	34-9017	1
38	LOCKWASHER	28-1028	2	77	BELTGUARD BACK	6-0083A01	1	*MUST ORDER IN ONE FOOT LENGTHS			
39	BOLT	27-0068	1	78	DECAL - WARNING (SEE 34-9017)	N/A	1				

FRAME ASSEMBLY FOR CWC-5004-3MAH (AFTER SERIAL #10552631)

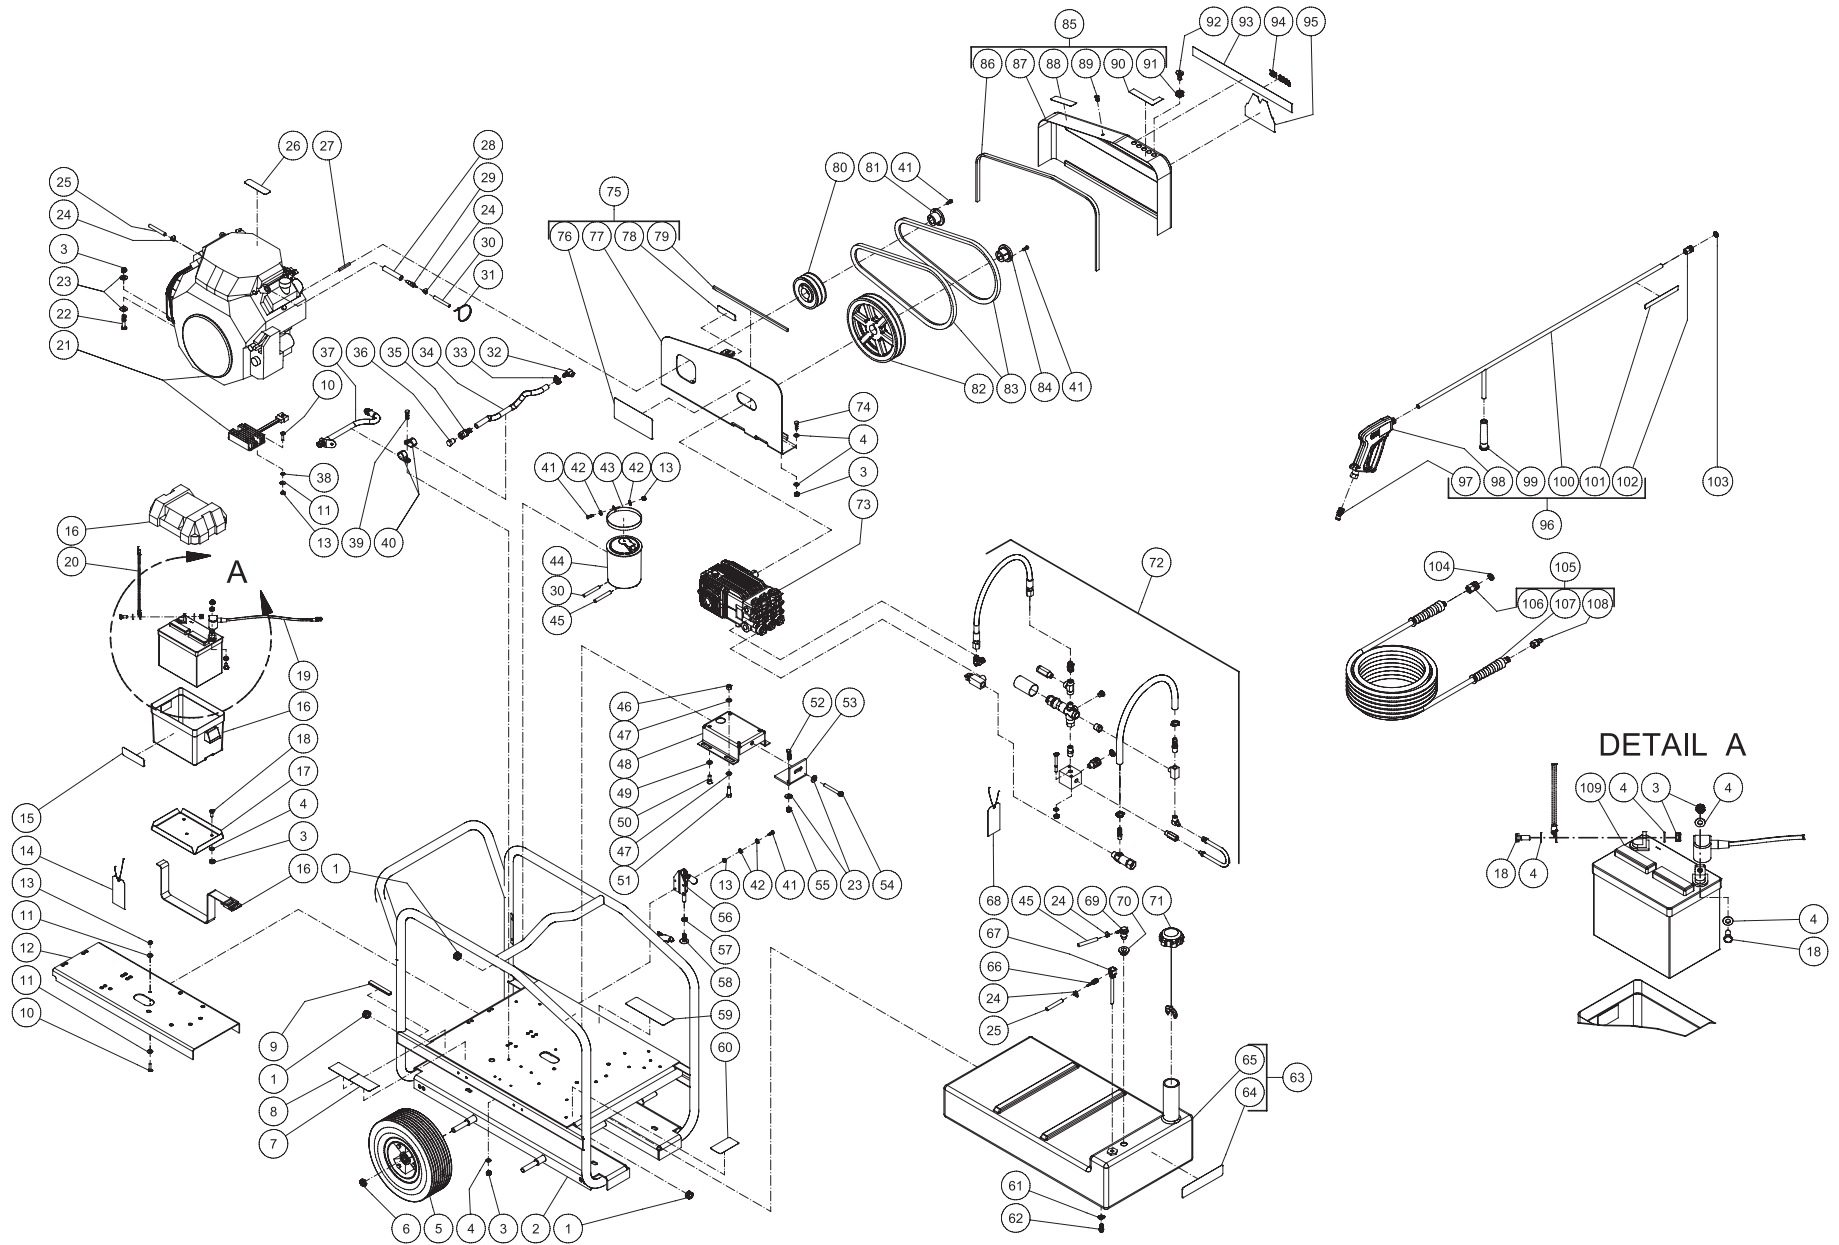


CWC-5004-3MAH 033111 AJH

For parts Call 888-279-9274

CWC-5004-3MAH 033111 AJH											
FRAME ASSEMBLY											
ITEM	DESCRIPTION	PART #	QTY	ITEM	DESCRIPTION	PART #	QTY	ITEM	DESCRIPTION	PART #	QTY
1	GROMMET	33-0002	4	39	BOLT	27-0068	1	77	BELTGUARD BACK	6-0083A01	1
2	FRAME	5-0136A01	1	40	CLIP	33-0291	2	78	DECAL - WARNING (SEE 34-9017)	N/A	1
3	LOCKNUT	30-0157	9	41	BOLT	27-0015	8	79	EDGING *(TWO FEET REQUIRED)	33-0020	1
4	WASHER	28-0003	15	42	WASHER	28-0002	8	80	SHEAVE	10-0118	1
5	WHEEL	14-0092	4	43	CARB CANISTER STRAP	20-1187A01	2	81	BUSHING	9-0005	1
6	LOCKNUT	30-0117	4	44	CARB CANISTER	62-0212	1	82	SHEAVE	10-0037	1
7	DECAL - MI-T-M EMISSIONS	N/A	1	45	FUEL HOSE *(SIX FEET REQUIRED)	15-0008	1	83	COG BELT BX47	11-0055	2
8	DECAL - SILVER STICKER	N/A	1	46	LOCKNUT	30-0161	4	84	BUSHING	9-0017	1
9	EDGING	33-0020	1	47	WASHER	28-0030	8	85	ASSEMBLY BELTGUARD COVER (86-91)	851-0348	1
10	BOLT	27-0016	3	48	PUMP BRACKET	5-0101A01	1	86	EDGING *(FOUR FEET REQUIRED)	33-0020	1
11	WASHER	28-0021	4	49	LOCKWASHER	29-0055	4	87	BELTGUARD COVER	6-0064A01	1
12	SUPPORT BRACKET	13-0120A01	1	50	BOLT	27-8471	4	88	DECAL - WARNING RISK OF BURNS (SEE 34-9017)	N/A	1
13	LOCKNUT	30-0155	7	51	BOLT	27-0167	4	89	FASTENER	33-0197	1
14	TAG	34-0096	1	52	BOLT	27-0118	2	90	DECAL - NOZZLE	34-0500	1
15	DECAL - RISK OF INJURY (SEE 34-9017)	N/A	1	53	BRACKET	13-0003A01	1	91	GROMMET	33-0001	5
16	BATTERY BOX	33-0092	1	54	BOLT	27-0576	1	92	NOZZLE	18-0257	1
17	BATTERY RETAINER	20-0264A01	1	55	LOCKNUT	30-0159	6	-	NOZZLE 40035 SAQ MEG	18-0260	1
18	BOLT	27-0066	4	56	PUSH/PULL TOGGLE CLAMP	33-0400	1	-	NOZZLE 25035 SAQ MEG	18-0259	1
19	CABLE	32-9112	1	57	NUT	30-0004	1	-	NOZZLE 15035 SAQ MEG	18-0258	1
20	CABLE	32-9111	1	58	BOLT	27-9550	1	93	DECAL - MI-T-M STRIPE	34-2189	1
21	ENGINE ASSY	851-0385	1	59	DECAL - OPERATION (SEE 34-9017)	N/A	1	94	DECAL - 5000 PSI	34-2217	1
22	BOLT	27-0121	4	60	DECAL - WARNING RISK OF INJECTION E/F	N/A	1	95	DECAL - MI-T-M	34-2169	1
23	WASHER	28-0023	11	61	WASHER	28-0022	4	96	ASSEMBLY GUN W/S.S. LANCE 48" (97-102)	851-0309	1
24	CLAMP WORM	42-0004	4	62	BOLT	27-9524	4	97	QUICK CONNECT	17-0005	1
25	FUEL HOSE *(FOUR FEET REQUIRED)	15-0008	1	63	ASSEMBLY - FUEL TANK (64-65)	851-0319	1	98	GUN	16-0343	1
26	DECAL - RISK OF BURNS (SEE 34-9017)	N/A	1	64	DECAL - RISK OF BURNS *(SEE 34-9017)	N/A	1	99	GRIP	7-0002	1
27	KEY	43-0078	1	65	FUEL TANK	12-0060	1	100	WAND	16-0342A01	1
28	HOSE *(ONE FOOT REQUIRED)	15-0020	1	66	BARB	23-0051	1	101	DECAL - RISK OF INJECTION (SEE 34-9017)	34-1253	1
29	COUPLING	55-0700	1	67	FUEL PICK UP	33-0271	1	102	QUICK CONNECT	17-0036	1
30	FUEL HOSE *(THREE FEET REQUIRED)	15-0261	1	68	TAG - WATER SUPPLY INLET (E)	34-0097	1	103	O-RING	25-0122	1
31	CABLE TIE	33-0022	2	69	VENT	62-0216	1	104	O-RING	25-0123	1
32	ELBOW	23-0050	1	70	ROLLOVER VALVE GROMMET	62-0214	1	105	PRESSURE HOSE ASSEMBLY (106-108)	851-0317	1
33	HOSE CLAMP	42-0011	1	71	FUEL CAP - SEALED/TETHERED	12-0220	1	106	QC SOCKET	17-0041	1
34	HOSE *(TWO FEET REQUIRED)	15-0305	1	72	PLUMBING ASSEMBLY	N/A	1	107	HOSE	15-0178	1
35	HOSE BARB	23-0360	1	73	PUMP	3-0213	1	108	QUICK CONNECT	17-0006	1
36	PLUG	23-0411	1	74	BOLT	27-0067	4	109	BATTERY	32-0058	1
37	DRAIN HOSE	70-0555	1	75	ASSEMBLY - BELTGUARD BACK (76-79)	851-0310	1	-	DECAL SET - CWC (E/S)	34-9017	1
38	LOCKWASHER	28-1028	2	76	DECAL - WARNING (SEE 34-9017)	N/A	1				

FRAME ASSEMBLY FOR CWC-5004-3MGH (AFTER SERIAL #10552631)

CWC-5004-3MGH 033111 AJH

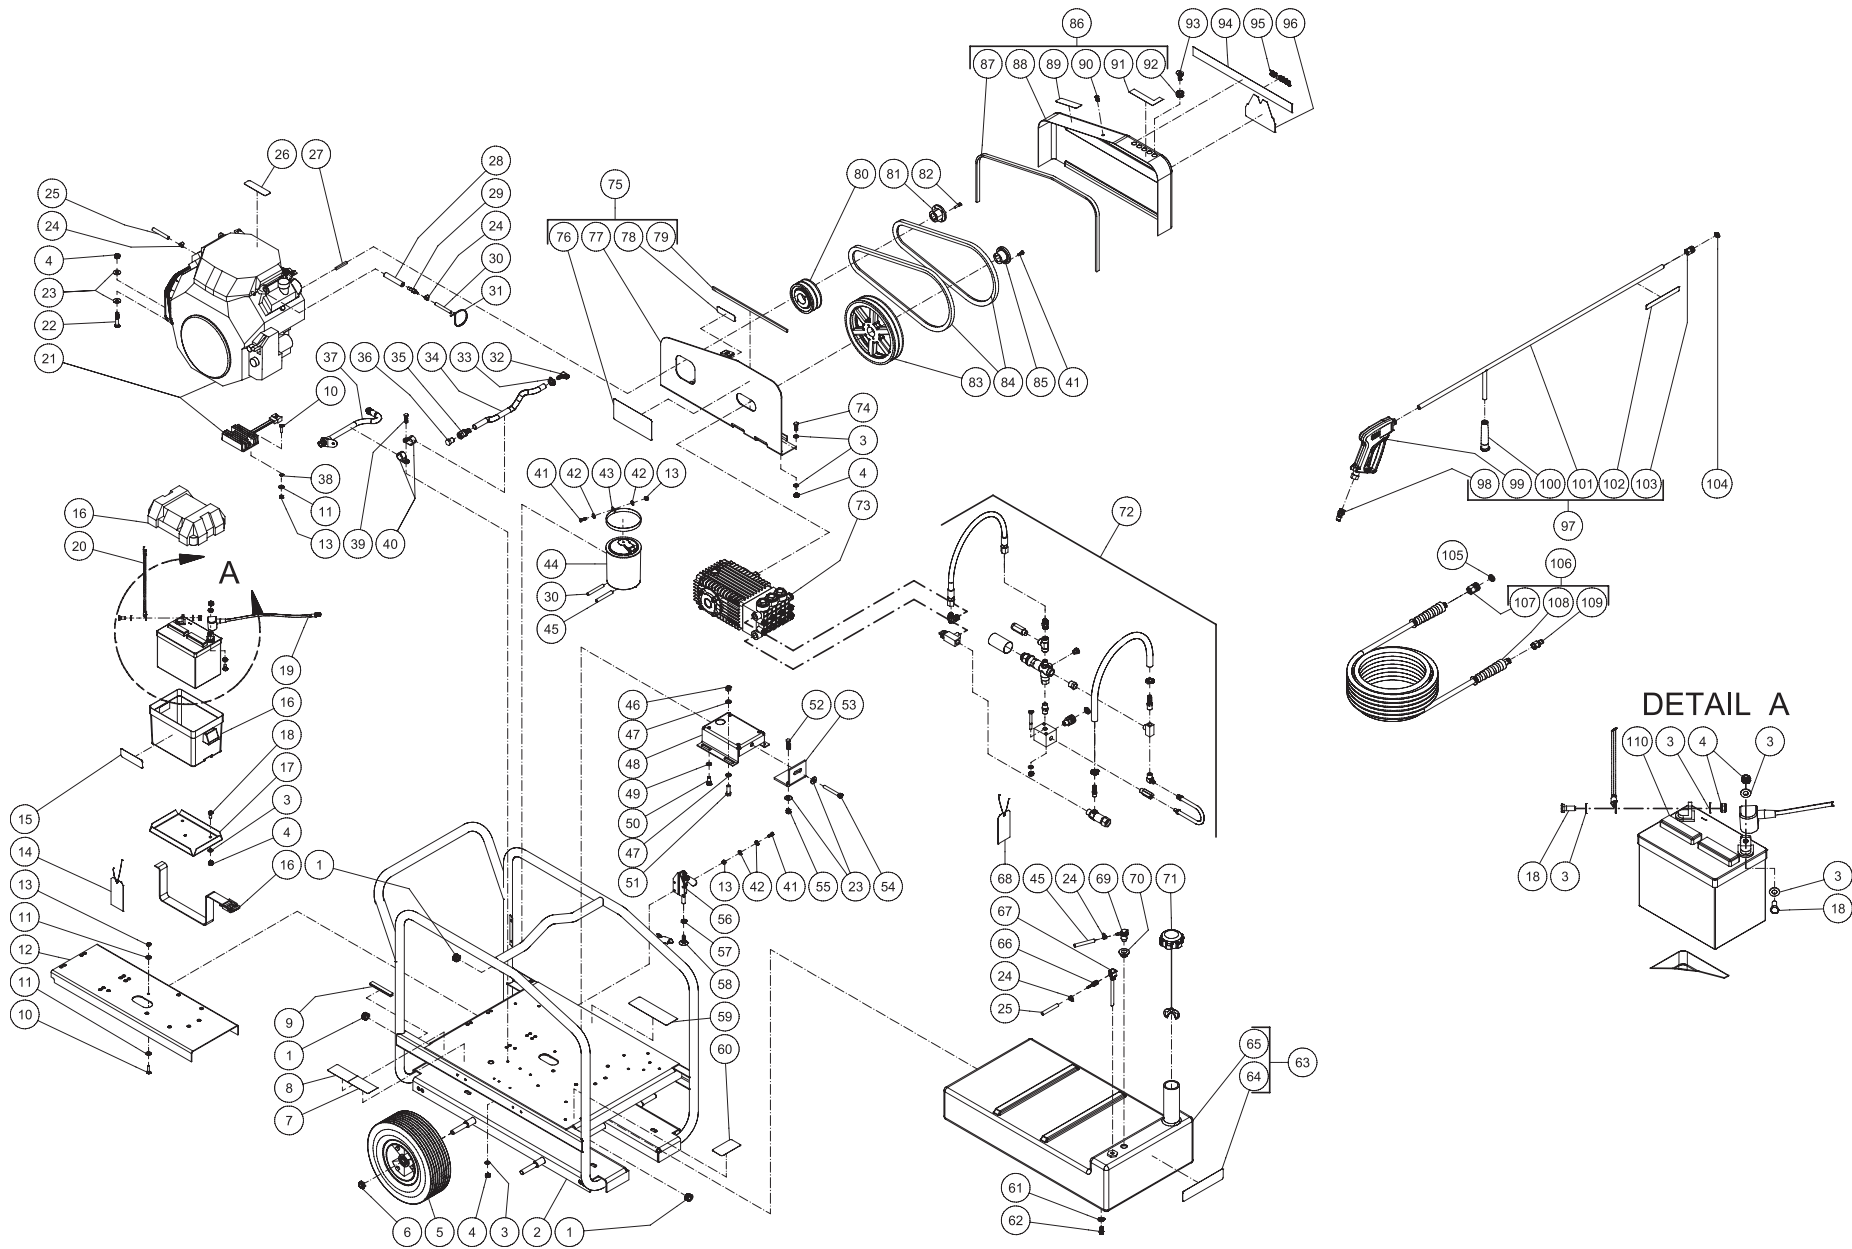


For parts Call 888-279-9274

CWC-5004-3MGH 033111 AJH											
FRAME ASSEMBLY											
ITEM	DESCRIPTION	PART #	QTY	ITEM	DESCRIPTION	PART #	QTY				
1	GROMMET	33-0002	4	39	BOLT	27-0068	1	77	BELTGUARD BACK	6-0083A01	1
2	FRAME	5-0136A01	1	40	CLIP	33-0291	2	78	DECAL - WARNING (SEE 34-9017)	34-0826	1
3	WASHER	28-0003	15	41	BOLT	27-0015	6	79	EDGING *(TWO FEET REQUIRED)	33-0020	1
4	LOCKNUT	30-0157	9	42	WASHER	28-0002	8	80	SHEAVE	10-0043	1
5	WHEEL	14-0092	4	43	CARB CANISTER STRAP	20-1187A01	2	81	BUSHING	9-0005	1
6	LOCKNUT	30-0117	4	44	CARB CANISTER	62-0212	1	82	BOLT	27-0771	2
7	DECAL- MI-T-M EMISSIONS	N/A	1	45	FUEL HOSE *(SIX FEET REQUIRED)	15-0008	1	83	SHEAVE	10-0037	1
8	DECAL- SILVER STICKER	N/A	1	46	LOCKNUT	30-0161	4	84	COG BELT	11-0054	2
9	EDGING *(ONE FOOT REQUIRED)	33-0020	1	47	WASHER	28-0030	8	85	BUSHING	9-0017	1
10	BOLT	27-0016	3	48	PUMP BRACKET	5-0101A01	1	86	ASSEMBLY BELTGUARD COVER (87-92)	851-0348	1
11	WASHER	28-0021	4	49	LOCKWASHER	29-0055	4	87	EDGING *(FOUR FEET REQUIRED)	33-0020	1
12	SUPPORT BRACKET	13-0120A01	1	50	BOLT	27-8471	4	88	BELTGUARD COVER	6-0064A01	1
13	LOCKNUT	30-0155	7	51	BOLT	27-0167	4	89	DECAL - WARNING RISK OF BURNS (SEE 34-9017)	N/A	1
14	TAG	34-0096	1	52	BOLT	27-0118	2	90	FASTENER	33-0197	1
15	DECAL - RISK OF INJURY (SEE 34-9017)	N/A	1	53	BRACKET	13-0003A01	1	91	DECAL - NOZZLE	34-0500	1
16	BATTERY BOX	33-0092	1	54	BOLT	27-0576	1	92	GROMMET	33-0001	5
17	BATTERY RETAINER	20-0264A01	1	55	LOCKNUT	30-0159	6	93	NOZZLE	18-0257	1
18	BOLT	27-0066	4	56	PUSH/PULL TOGGLE CLAMP	33-0400	1	-	NOZZLE 15035 SAQ MEG	18-0258	1
19	CABLE	32-9112	1	57	NUT	30-0004	1	-	NOZZLE 25035 SAQ MEG	18-0259	1
20	CABLE	32-9111	1	58	BOLT	27-9550	1	-	NOZZLE 40035 SAQ MEG	18-0260	1
21	ENGINE ASSY	851-0385	1	59	DECAL - OPERATION (SEE 34-9017)	N/A	1	94	DECAL - MI-T-M STRIPE	34-2189	1
22	BOLT	27-0121	4	60	DECAL - WARNING RISK OF INJECTION E/F	N/A	1	95	DECAL - 5000 PSI	34-2217	1
23	WASHER	28-0023	11	61	WASHER	28-0022	4	96	DECAL - MI-T-M	34-2169	1
24	CLAMP WORM	42-0004	4	62	BOLT	27-9524	4	97	ASSEMBLY GUN W/S.S. LANCE 48" (98-103)	851-0309	1
25	FUEL HOSE *(FOUR FEET REQUIRED)	15-0008	1	63	ASSEMBLY - FUEL TANK (64-65)	851-0319	1	98	QUICK CONNECT	17-0005	1
26	DECAL - RISK OF BURNS (SEE 34-9017)	N/A	1	64	DECAL - RISK OF BURNS *(SEE 34-9017)	N/A	1	99	GUN	16-0343	1
27	KEY	43-0078	1	65	FUEL TANK	12-0060	1	100	GRIP	7-0002	1
28	HOSE *(ONE FOOT REQUIRED)	15-0020	1	66	BARB	23-0051	1	101	WAND	16-0342A01	1
29	COUPLING	55-0700	1	67	FUEL PICK UP	33-0271	1	102	DECAL - RISK OF INJECTION (SEE 34-9017)	N/A	1
30	FUEL HOSE *(THREE FEET REQUIRED)	15-0261	1	68	TAG - WATER SUPPLY INLET (E)	34-0097	1	103	QUICK CONNECT	17-0036	1
31	CABLE TIE	33-0022	2	69	VENT	62-0216	1	104	O-RING	25-0122	1
32	ELBOW	23-0119	1	70	ROLLOVER VALVE GROMMET	62-0214	1	105	O-RING	25-0123	1
33	HOSE CLAMP	42-0011	1	71	FUEL CAP - SEALED/TETHERED	12-0220	1	106	PRESSURE HOSE ASSEMBLY (107-109)	851-0317	1
34	HOSE *(TWO FEET REQUIRED)	15-0305	1	72	PLUMBING ASSEMBLY	N/A	1	107	QC SOCKET	17-0041	1
35	HOSE BARB	23-0360	1	73	PUMP	3-0261	1	108	HOSE	15-0178	1
36	PLUG	23-0411	1	74	BOLT	27-0067	4	109	QUICK CONNECT	17-0006	1
37	DRAIN HOSE	70-0555	1	75	ASSEMBLY - BELTGUARD BACK (76-79)	851-0310	1	110	BATTERY	32-0058	1
38	LOCKWASHER	28-1028	2	76	DECAL - WARNING (SEE 34-9017)	34-0812	1	-	DECAL SET - CWC (E/S)	34-9017	1

*MUST ORDER IN ONE FOOT LENGTHS

FRAME ASSEMBLY FOR CWC-5005-3MGH (AFTER SERIAL #10552631)


CWC-5005-3MGH 033111 AJH

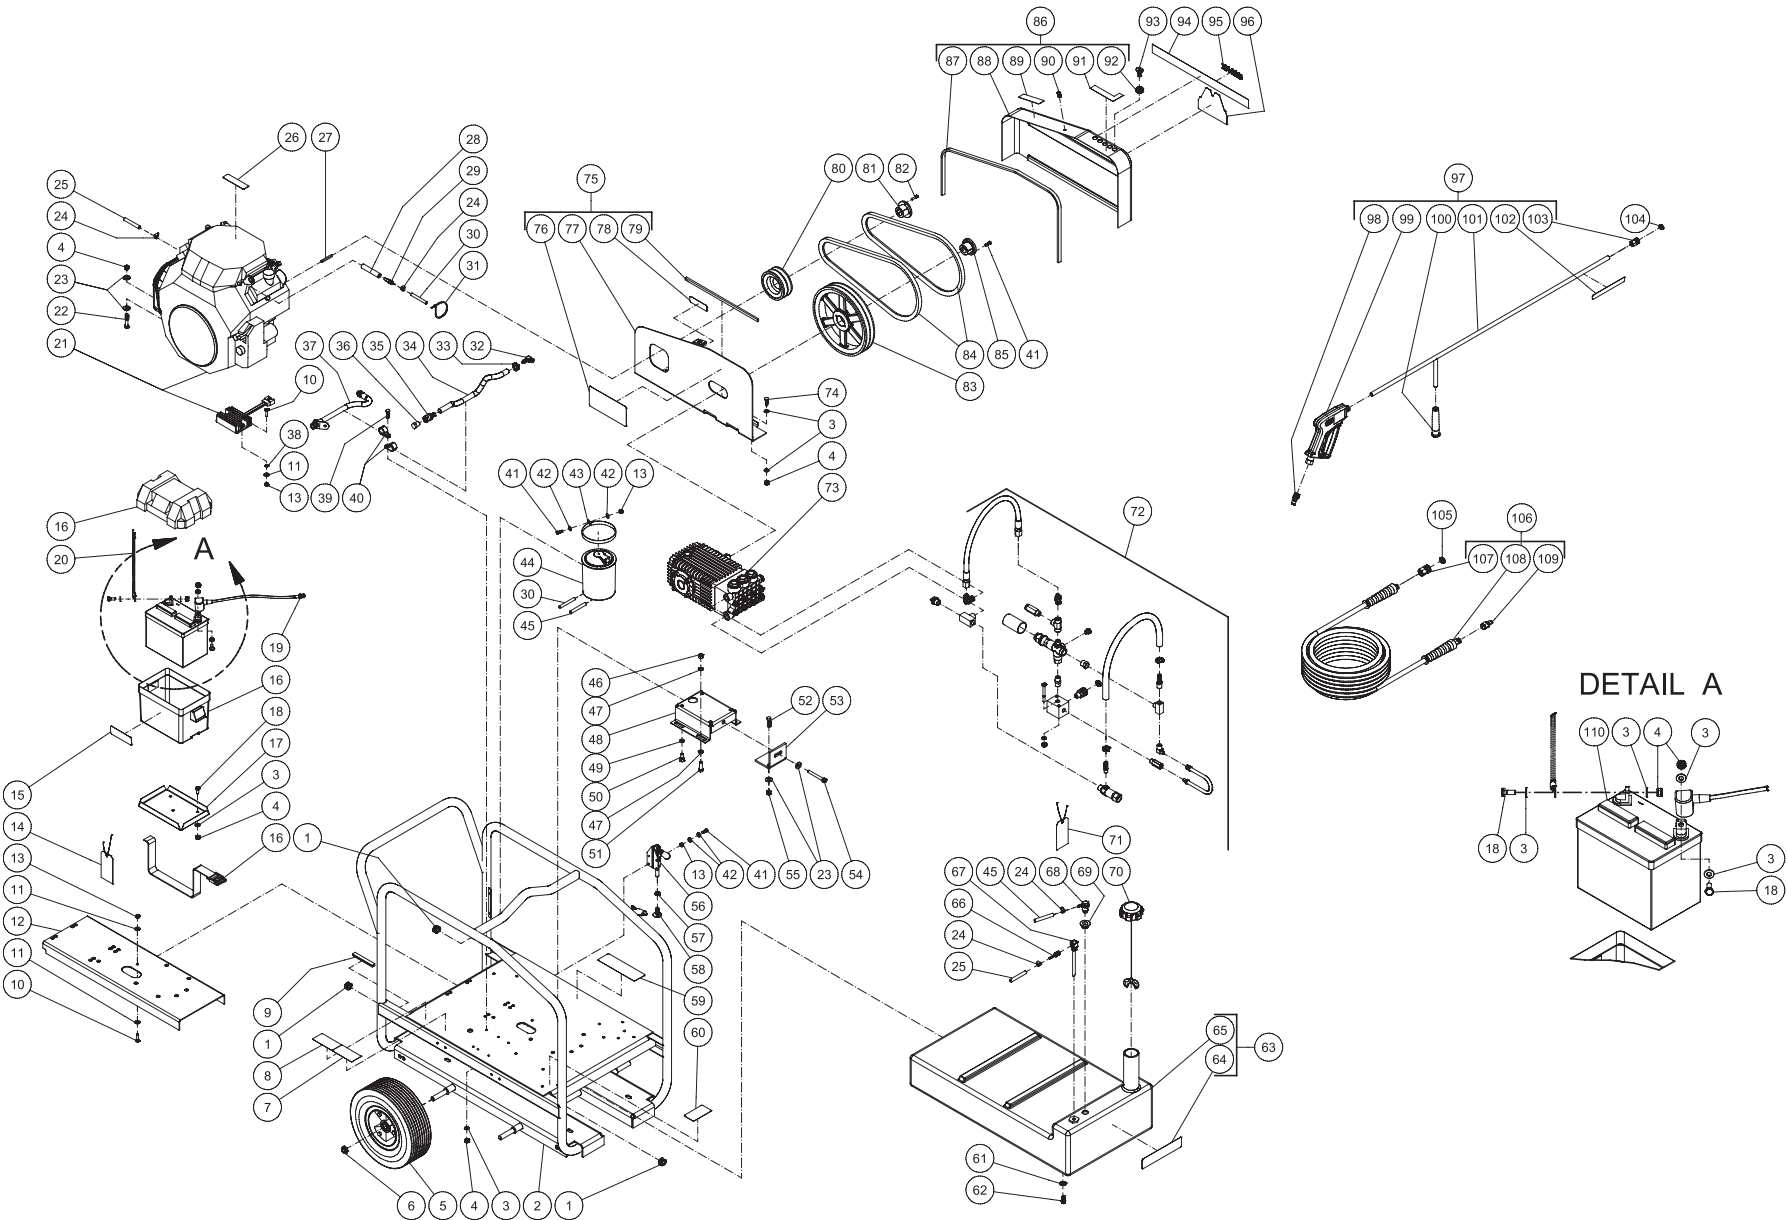

For parts Call 888-279-9274

				FRAME ASSEMBLY							
ITEM	DESCRIPTION	PART #	QTY	ITEM	DESCRIPTION	PART #	QTY	ITEM	DESCRIPTION	PART #	QTY
1	GROMMET	33-0002	4	39	BOLT	27-0068	1	77	BELTGUARD BACK	6-0083A01	1
2	FRAME	5-0136A01	1	40	CLIP	33-0291	2	78	DECAL - WARNING (SEE 34-9017)	N/A	1
3	WASHER	28-0003	15	41	BOLT	27-0015	6	79	EDGING *(TWO FEET REQUIRED)	33-0020	1
4	LOCKNUT	30-0157	9	42	WASHER	28-0002	8	80	SHEAVE	10-0043	1
5	WHEEL	14-0092	4	43	CARB CANISTER STRAP	20-1187A01	2	81	BUSHING	9-0005	1
6	LOCKNUT	30-0117	4	44	CARB CANISTER	62-0212	1	82	BOLT	27-0771	2
7	DECAL- Mi-T-M EMISSIONS	34-0075	1	45	FUEL HOSE *(SIX FEET REQUIRED)	15-0008	1	83	SHEAVE	10-0046	1
8	DECAL- SILVER STICKER	N/A	1	46	LOCKNUT	30-0161	4	84	BELT	11-0068	2
9	EDGING	33-0020	1	47	WASHER	28-0030	8	85	BUSHING	9-0017	1
10	BOLT	27-0016	3	48	PUMP BRACKET	5-0101A01	1	86	ASSEMBLY BELTGUARD COVER (87-92)	851-0348	1
11	WASHER	28-0021	4	49	LOCKWASHER	29-0055	4	87	EDGING *(FOUR FEET REQUIRED)	33-0020	1
12	SUPPORT BRACKET	13-0120A01	1	50	BOLT	27-8471	4	88	BELTGUARD COVER	6-0064A01	1
13	LOCKNUT	30-0155	7	51	BOLT	27-0167	4	89	DECAL - WARNING RISK OF BURNS (SEE 34-9017)	N/A	1
14	TAG	34-0096	1	52	BOLT	27-0118	2	90	FASTENER	33-0197	1
15	DECAL - RISK OF INJURY (SEE 34-9017)	N/A	1	53	BRACKET	13-0003A01	1	91	DECAL - NOZZLE	34-0500	1
16	BATTERY BOX	33-0092	1	54	BOLT	27-0576	1	92	GROMMET	33-0001	5
17	BATTERY RETAINER	20-0264A01	1	55	LOCKNUT	30-0159	6	93	NOZZLE	18-0033	1
18	BOLT	27-0066	4	56	PUSH/PULL TOGGLE CLAMP	33-0400	1	-	NOZZLE 15045 SAQ MEG	18-0039	1
19	CABLE	32-9112	1	57	NUT	30-0004	1	-	NOZZLE 25045 SAQ MEG	18-0060	1
20	CABLE	32-9111	1	58	BOLT	27-9550	1	-	NOZZLE 40045 SAQ MEG	18-0065	1
21	ENGINE ASSY	851-0385	1	59	DECAL - OPERATION (SEE 34-9017)	N/A	1	94	DECAL - Mi-T-M STRIPE	34-2189	1
22	BOLT	27-0121	4	60	DECAL - WARNING RISK OF INJECTION E/F	N/A	1	95	DECAL - 5000 PSI	34-2217	1
23	WASHER	28-0023	11	61	WASHER	28-0022	4	96	DECAL - Mi-T-M	34-2169	1
24	CLAMP WORM	42-0004	4	62	BOLT	27-9524	4	97	ASSEMBLY GUN W/S.S. LANCE 48" (98-103)	851-0309	1
25	FUEL HOSE *(FOUR FEET REQUIRED)	15-0008	1	63	ASSEMBLY - FUEL TANK (64-65)	851-0319	1	98	QUICK CONNECT	17-0005	1
26	DECAL - RISK OF BURNS (SEE 34-9017)	N/A	1	64	DECAL - RISK OF BURNS (SEE 34-9017)	N/A	1	99	GUN-10 GPM @ 5000 PSI 300DEG F	16-0343	1
27	KEY	43-0078	1	65	FUEL TANK	12-0060	1	100	GRIP	7-0002	1
28	HOSE *(ONE FOOT REQUIRED)	15-0020	1	66	BARB	23-0051	1	101	WAND	16-0342A01	1
29	COUPLING	55-0700	1	67	FUEL PICK UP	33-0271	1	102	DECAL - RISK OF INJECTION (SEE 34-9017)	34-1253	1
30	FUEL HOSE *(ONE FOOT REQUIRED)	15-0261	1	68	VENT	62-0216	1	103	QUICK CONNECT	17-0036	1
31	CABLE TIE	33-0022	2	69	ROLLOVER VALVE GROMMET	62-0214	1	104	O-RING	25-0122	1
32	ELBOW	23-0119	1	70	FUEL CAP - SEALED/TETHERED	12-0220	1	105	O-RING	25-0123	1
33	HOSE CLAMP	42-0011	1	71	TAG - WATER SUPPLY INLET (E)	34-0097	1	106	HIGH PRESSURE HOSE ASSEMBLY (107-109)	851-0317	1
34	HOSE *(TWO FEET REQUIRED)	15-0305	1	72	CWC PLUMBING ASSY	N/A	1	107	QC SOCKET	17-0041	1
35	HOSE BARB	23-0360	1	73	PUMP - TSP1821	3-0262	1	108	HOSE	15-0178	1
36	PLUG	23-0411	1	74	BOLT	27-0067	4	109	QUICK CONNECT	17-0006	1
37	DRAIN HOSE	70-0555	1	75	ASSEMBLY - BELTGUARD BACK (76-79)	851-0310	1	110	BATTERY	32-0058	1
38	LOCKWASHER	28-1028	2	76	DECAL - WARNING (SEE 34-9017)	N/A	1	-	DECAL SET - CWC (E/S)	34-9017	1

FRAME ASSEMBLY FOR CWC-6004-3MGH (AFTER SERIAL #10552631)

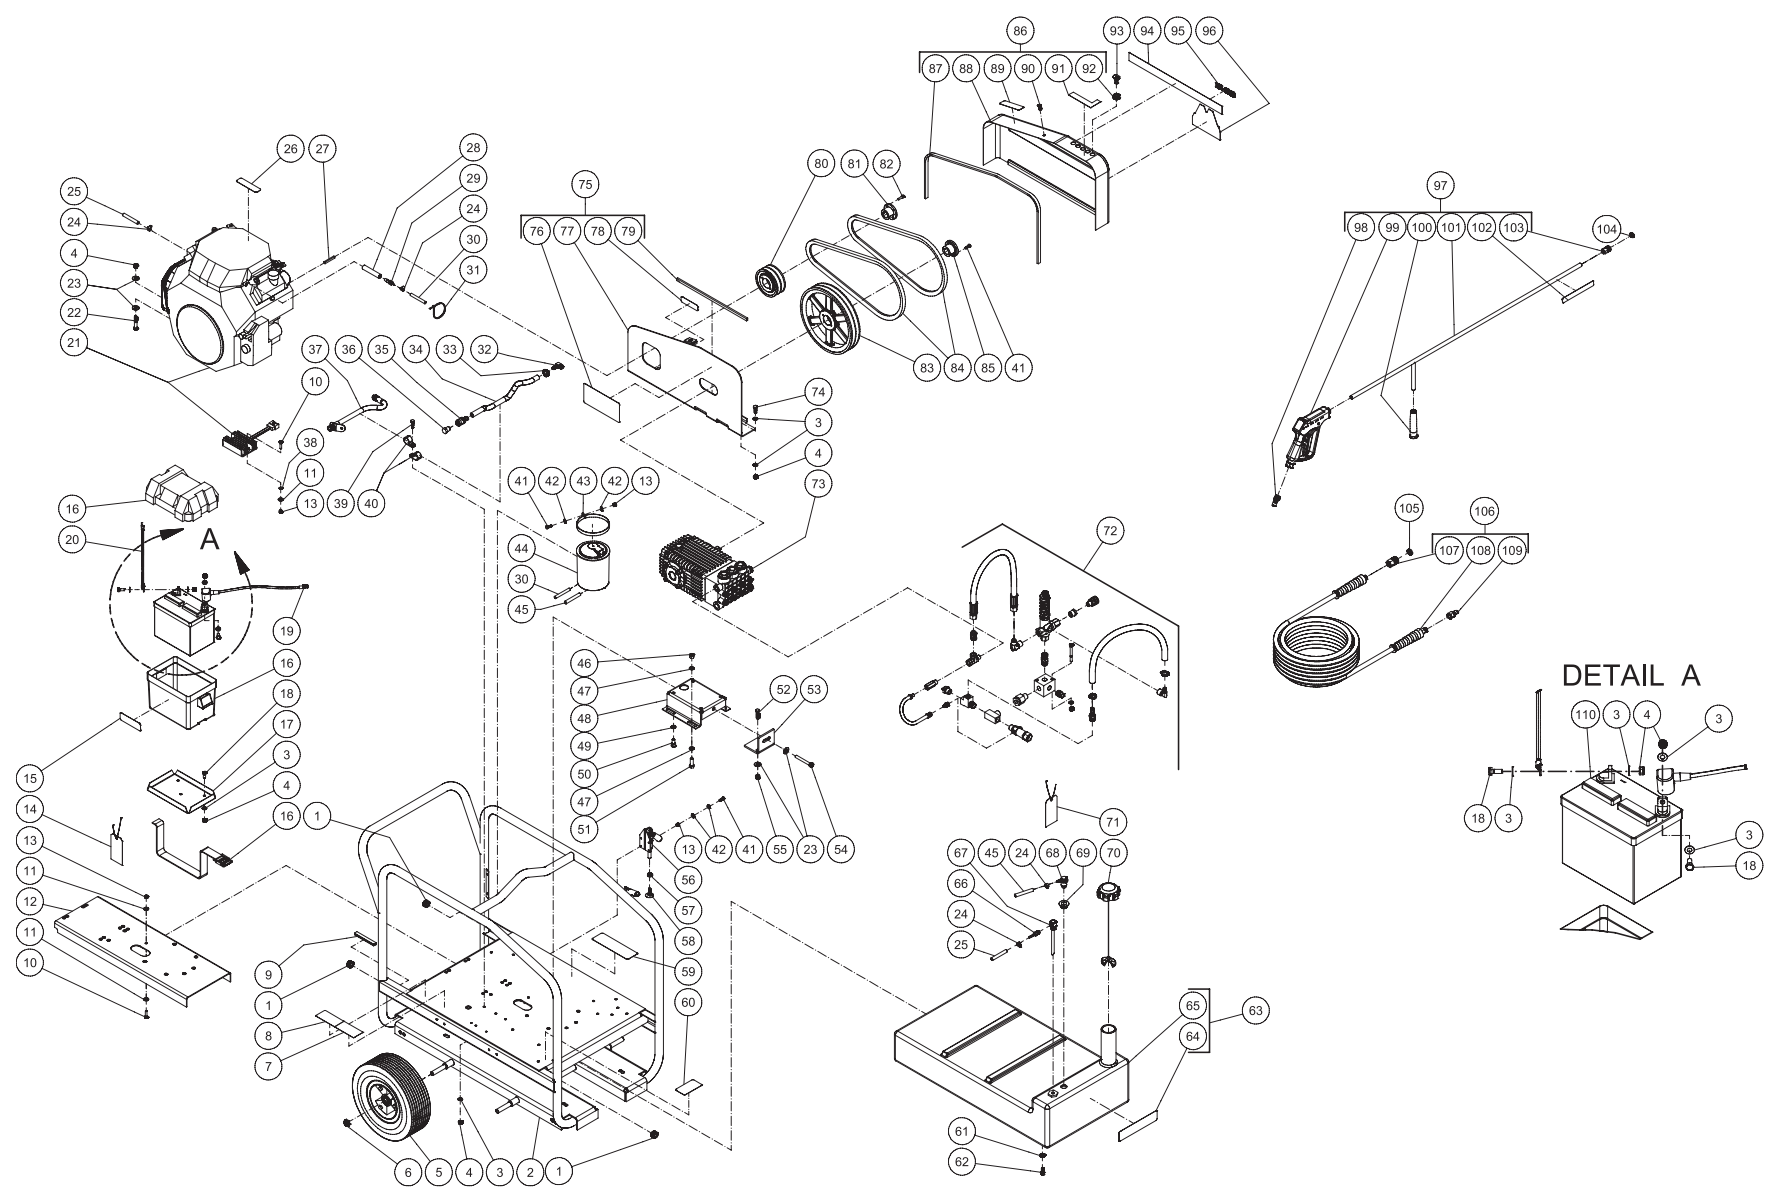


CWC-6004-3MGH 033111 AJH

For parts Call 888-279-9274

CWC-6004-3MCH 033111 AJH											
FRAME ASSEMBLY											
ITEM	DESCRIPTION	PART #	QTY	ITEM	DESCRIPTION	PART #	QTY	ITEM	DESCRIPTION	PART #	QTY
1	GROMMET	33-0002	4	39	BOLT	27-0068	1	77	BELTGUARD BACK	6-0083A01	1
2	FRAME	5-0136A01	1	40	CLIP	33-0291	2	78	DECAL - WARNING (SEE 34-9017)	N/A	1
3	WASHER	28-0003	15	41	BOLT	27-0015	6	79	EDGING *(TWO FEET REQUIRED)	33-0020	1
4	LOCKNUT	30-0157	9	42	WASHER	28-0002	8	80	SHEAVE	10-0043	1
5	WHEEL	14-0092	4	43	CARB CANISTER STRAP	20-1187A01	2	81	BUSHING	9-0005	1
6	LOCKNUT	30-0117	4	44	CARB CANISTER	62-0212	1	82	BOLT	27-0771	2
7	DECAL- Mi-T-M EMISSIONS	N/A	1	45	FUEL HOSE *(SIX FEET REQUIRED)	15-0008	1	83	SHEAVE	10-0046	1
8	DECAL- SILVER STICKER	N/A	1	46	LOCKNUT	30-0161	4	84	BELTS	11-0068	2
9	EDGING	33-0020	1	47	WASHER	28-0030	8	85	BUSHING	9-0017	1
10	BOLT	27-0016	3	48	PUMP BRACKET	5-0101A01	1	86	ASSEMBLY BELTGUARD COVER (87-92)	851-0348	1
11	WASHER	28-0021	4	49	LOCKWASHER	29-0055	4	87	EDGING *(FOUR FEET REQUIRED)	33-0020	1
12	SUPPORT BRACKET	13-0120A01	1	50	BOLT	27-8471	4	88	BELTGUARD COVER	6-0064A01	1
13	LOCKNUT	30-0155	7	51	BOLT	27-0167	4	89	DECAL - WARNING RISK OF BURNS (SEE 34-9017)	N/A	1
14	TAG	34-0096	1	52	BOLT	27-0118	2	90	FASTENER	33-0197	1
15	DECAL - RISK OF INJURY (SEE 34-9017)	N/A	1	53	BRACKET	13-0003A01	1	91	DECAL - NOZZLE	34-0500	1
16	BATTERY BOX	33-0092	1	54	BOLT	27-0576	1	92	GROMMET	33-0001	5
17	BATTERY RETAINER	20-0264A01	1	55	LOCKNUT	30-0159	6	93	NOZZLE	18-0302	1
18	BOLT	27-0066	4	56	PUSH/PULL TOGGLE CLAMP	33-0400	1	-	NOZZLE 1503 SAQ MEG	18-0150	1
19	CABLE	32-9112	1	57	NUT	30-0004	1	-	NOZZLE 2503 SAQ MEG	18-0303	1
20	CABLE	32-9111	1	58	BOLT	27-9550	1	-	NOZZLE 4003 SAQ MEG	18-0304	1
21	ENGINE ASSY	851-0385	1	59	DECAL - OPERATION (SEE 34-9017)	N/A	1	94	DECAL - Mi-T-M STRIPE	34-2189	1
22	BOLT	27-0121	4	60	DECAL - WARNING RISK OF INJECTION E/F	N/A	1	95	DECAL - DIE CUT	34-2218	1
23	WASHER	28-0023	11	61	WASHER	28-0022	4	96	DECAL - Mi-T-M	34-2169	1
24	CLAMP WORM	42-0004	4	62	BOLT	27-9524	4	97	ASSEMBLY GUN W/S.S. LANCE 48" (99-103)	851-0361	1
25	FUEL HOSE *(FOUR FEET REQUIRED)	15-0008	1	63	ASSEMBLY - FUEL TANK (64-65)	851-0319	1	98	QUICK CONNECT	17-0005	1
26	DECAL - RISK OF BURNS (SEE 34-9017)	N/A	1	64	DECAL - RISK OF BURNS (SEE 34-9017)	N/A	1	99	GUN	16-0447	1
27	KEY	43-0078	1	65	FUEL TANK	12-0060	1	100	GRIP	7-0002	1
28	HOSE *(ONE FOOT REQUIRED)	15-0020	1	66	BARB	23-0051	1	101	WAND	16-0342A01	1
29	COUPLING	55-0700	1	67	FUEL PICK UP	33-0271	1	102	DECAL - RISK OF INJECTION (SEE 34-9017)	N/A	1
30	FUEL HOSE *(THREE FEET REQUIRED)	15-0261	1	68	VENT	62-0216	1	103	QUICK CONNECT	17-0036	1
31	CABLE TIE	33-0022	2	69	ROLLOVER VALVE GROMMET	62-0214	1	104	O-RING	25-0122	1
32	ELBOW	23-0119	1	70	FUEL CAP - SEALED/TETHERED	12-0220	1	105	O-RING	25-0123	1
33	HOSE CLAMP	42-0011	1	71	TAG - WATER SUPPLY INLET (E)	34-0097	1	106	HIGH PRESSURE HOSE ASSEMBLY (107-109)	851-0362	1
34	HOSE *(TWO FEET REQUIRED)	15-0305	1	72	PLUMBING	N/A	1	107	QC SOCKET	17-0041	1
35	HOSE BARB	23-0360	1	73	PUMP	3-0261	1	108	HOSE	15-0255	1
36	PLUG	23-0411	1	74	BOLT	27-0067	4	109	QUICK CONNECT	17-0006	1
37	DRAIN HOSE	70-0555	1	75	ASSEMBLY - BELTGUARD BACK (76-79)	851-0310	1	110	BATTERY	32-0058	1
38	LOCKWASHER	28-1028	2	76	DECAL - WARNING (SEE 34-9017)	N/A	1	-	DECAL SET - CWC (E/S)	34-9017	1

*MUST ORDER IN ONE FOOT LENGTHS

CWC 5004/5005 PLUMBING ASSEMBLY

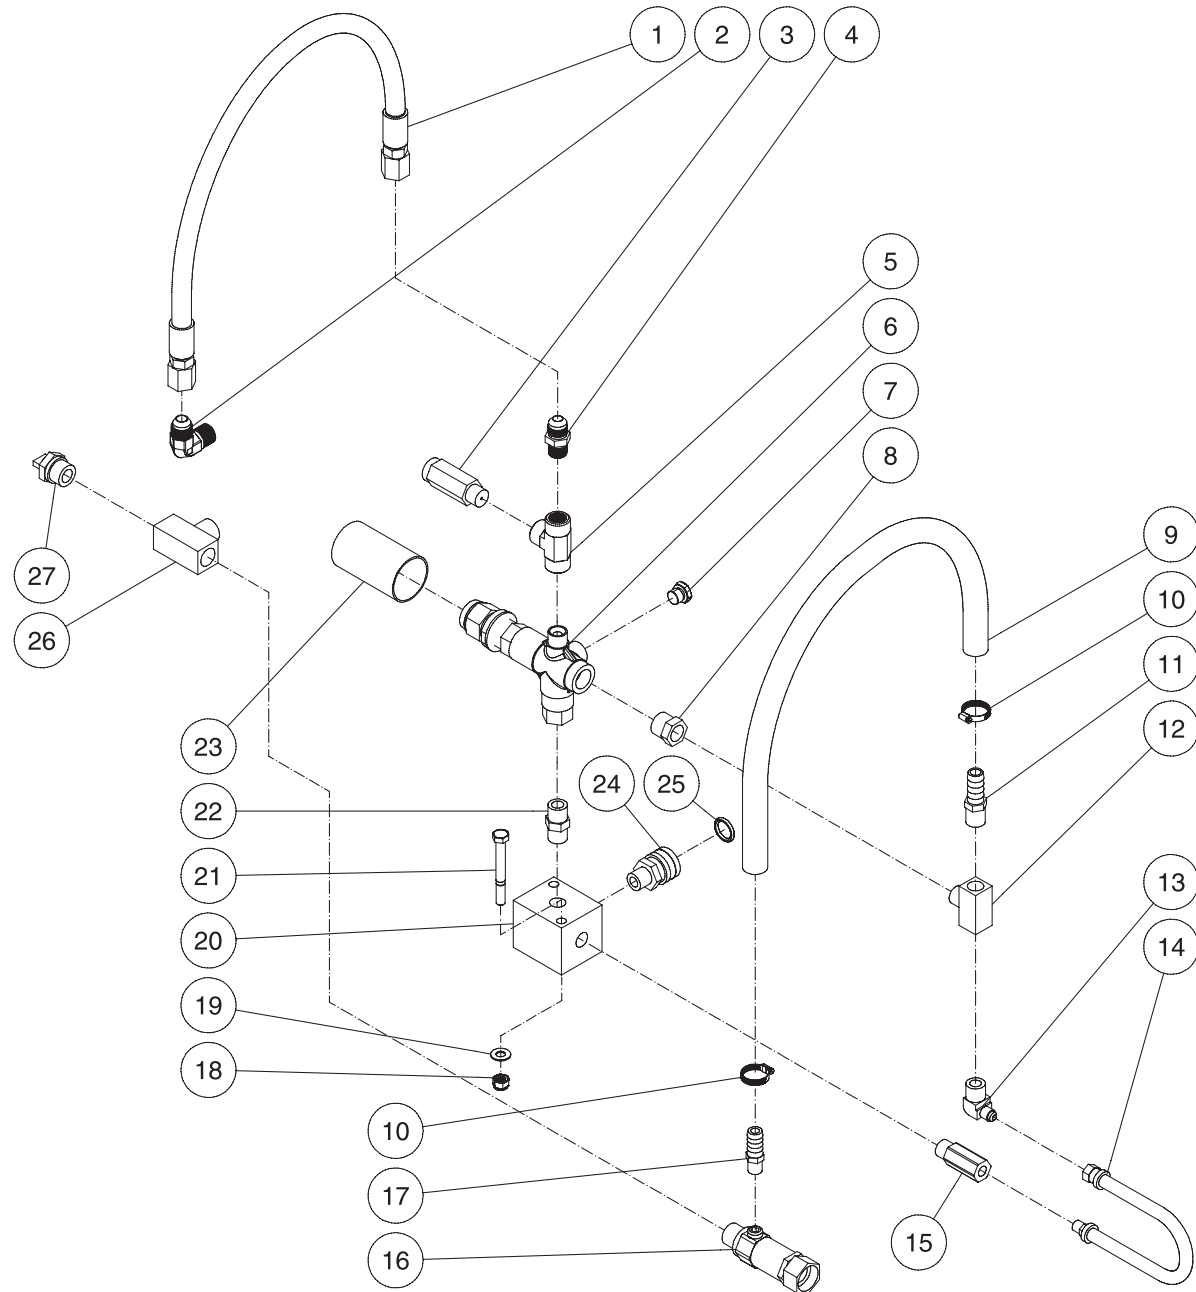

For parts Call 888-279-9274

851-0358-060205-DLG

PLUMBING ASSEMBLY

REF. #	DESCRIPTION	PART #	QTY.	REF. #	DESCRIPTION	PART #	QTY.
1	Hose	15-0177	1	15	Easy Start Valve	22-0242	1
2	Elbow	24-0092	1	16	Filter	19-0207	1
3	Safety Valve	22-0319	1	17	Hose Barb	23-0120	1
4	Nipple	24-0002	1	18	Locknut	30-0157	2
5	Tee	24-0026	1	19	Washer	28-0003	2
6	Unloader	8-0522	1	20	Manifold Block	51-0020	1
7	Plug	39-0017	1	21	Bolt	27-0074	2
8	Bushing	23-0016	1	22	Nipple	24-0010	1
9	Hose *(Three Feet Required)	15-0007	1	23	Heat Shrink Tubing *(One Foot Required)	33-0272	1
10	Hose Clamp	42-0011	2	24	Quick Connect	17-0042	1
11	Hose Barb	23-0105	1	25	O-ring	25-0123	1
12	Tee	23-0117	1	26	Tee	23-0235	1
13	Elbow	23-0324	1	27	Thermal Relief Valve	22-0005	1
14	Hose	15-0140	1	*Must Order in One Foot Lengths			

851-0365-080106-JJT




For parts Call 888-279-9274

851-0365-051806-JJT

PLUMBING ASSEMBLY							
REF. #	DESCRIPTION	PART #	QTY.		REF. #	DESCRIPTION	PART # QTY.
1	Unloader Valve	8-0032	1		16	Tee	23-0235 2
2	Quick Connect Socket	170029	1		17	Bushing	23-0023 2
3	Bolt	27-0074	2		18	Elbow	23-0324 1
4	Washer	28-0003	6		19	Hose	15-0140 1
5	Locknut	30-0157	4		20	Thermal Relief Valve	22-0005 1
6	Elbow	24-0092	2		21	Street Tee	23-0124 1
7	Bushing	23-0016	2		22	Inlet Filter	19-0238 1
8	Elbow	24-0105	1		23	Inlet Bracket	20-0428A01 1
9	Easy Start Valve	22-0242	1		24	Garden Hose Swivel	23-0095 1
10	Safety Valve	22-0376	1		25	Garden Hose Gasket	26-0001 1
11	Street Tee	23-0058	1		26	Bolt	27-0067 2
12	Manifold Block	51-0034	1		27	Elbow	23-0037 2
13	Nipple	24-0010	1		28	Hose Clamp	42-0003 2
14	High Pressure Hose Assembly	15-0221	1		29	Hose	15-0035 2
15	Hose Barb	23-0007	2				

CWC 6004 PLUMBING ASSEMBLY

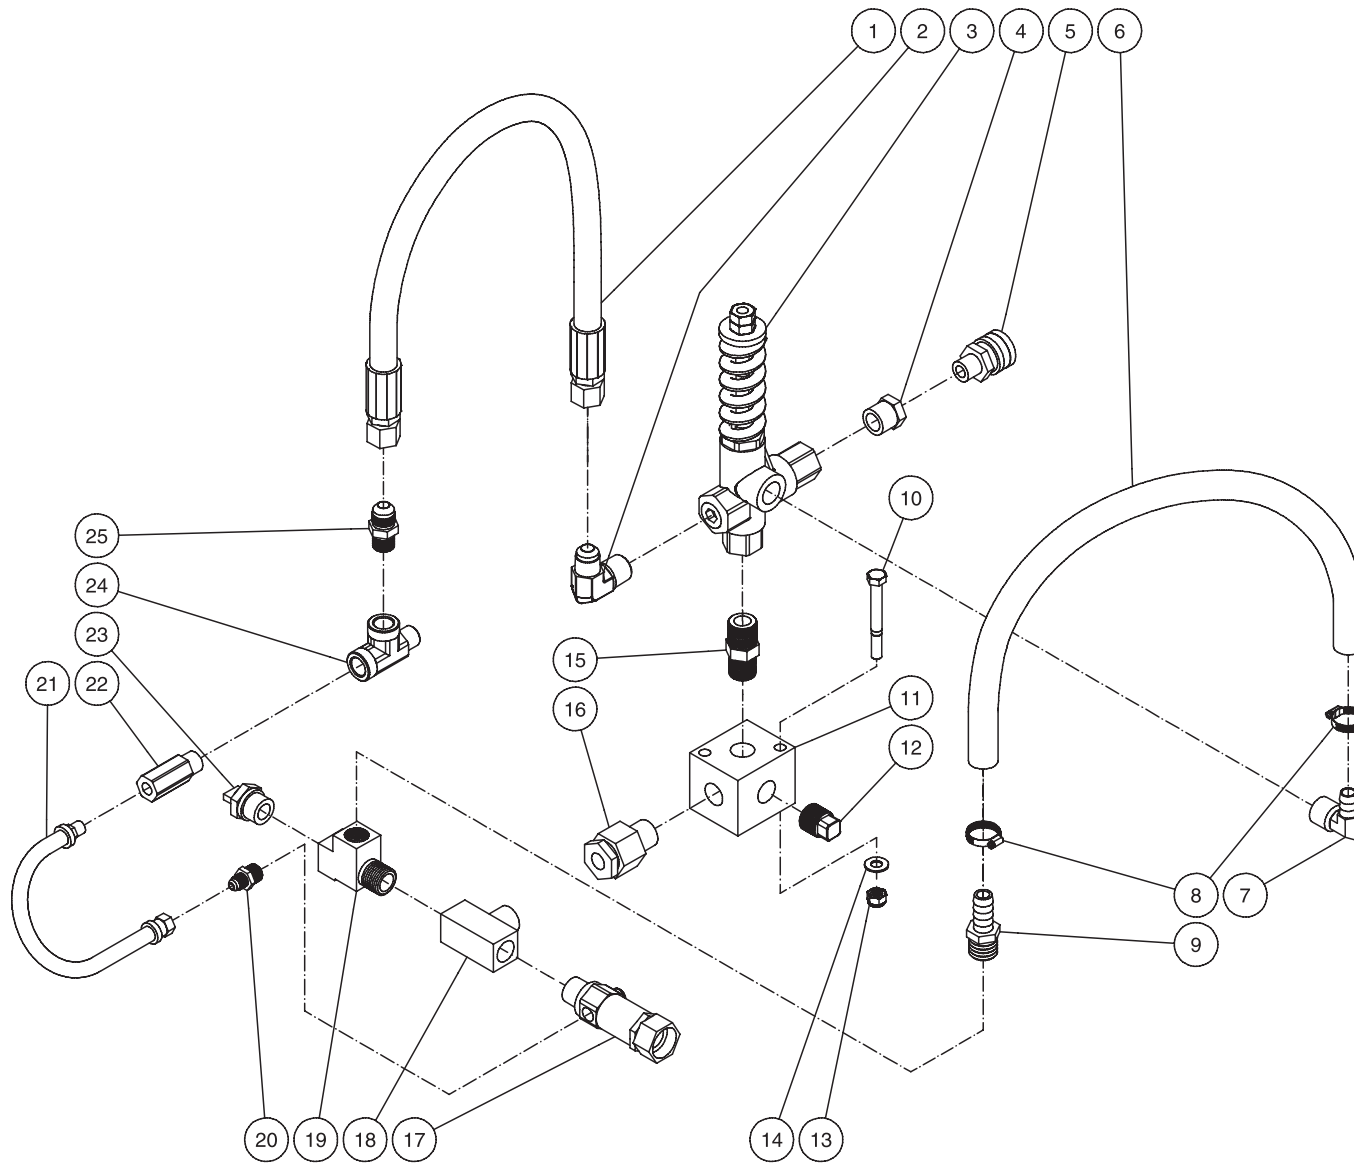


For parts Call 888-279-9274

851-0360-111705-DLG

PLUMBING ASSEMBLY							
REF. #	DESCRIPTION	PART #	QTY.	REF. #	DESCRIPTION	PART #	QTY.
1	Hose	15-0254	1	14	Washer	28-0003	2
2	Elbow	24-0074	1	15	Nipple	24-0031	1
3	Unloader	8-0373	1	16	Burst Disc and Holder	22-0217	1
4	Bushing	24-0282	1	17	Filter	19-0207	1
5	Quick Connect	17-0042	1	18	Branch Tee	23-0235	1
6	Hose *(Two Feet Required)	15-0007	1	19	Street Tee	23-0124	1
7	Elbow	23-0418	1	20	Nipple	23-0247	1
8	Hose Clamp	42-0011	2	21	Hose	15-0140	1
9	Hose Barb	23-0045	1	22	Easy Start Valve	22-0242	1
10	Bolt	27-0074	2	23	Thermal Relief Valve	22-0005	1
11	Manifold Block	51-0034	1	24	Street Tee	23-0058	1
12	Plug	39-0016	1	25	Nipple	24-0002	1
13	Locknut	30-0157	2	*Must Order in One Foot Lengths			

PUMP ASSEMBLY (3-0213)

TORQUE SPECS.	
POSITION	FT-LBS
1	18
10	7.4
16	7.4
24	8.8
32	50
40	37

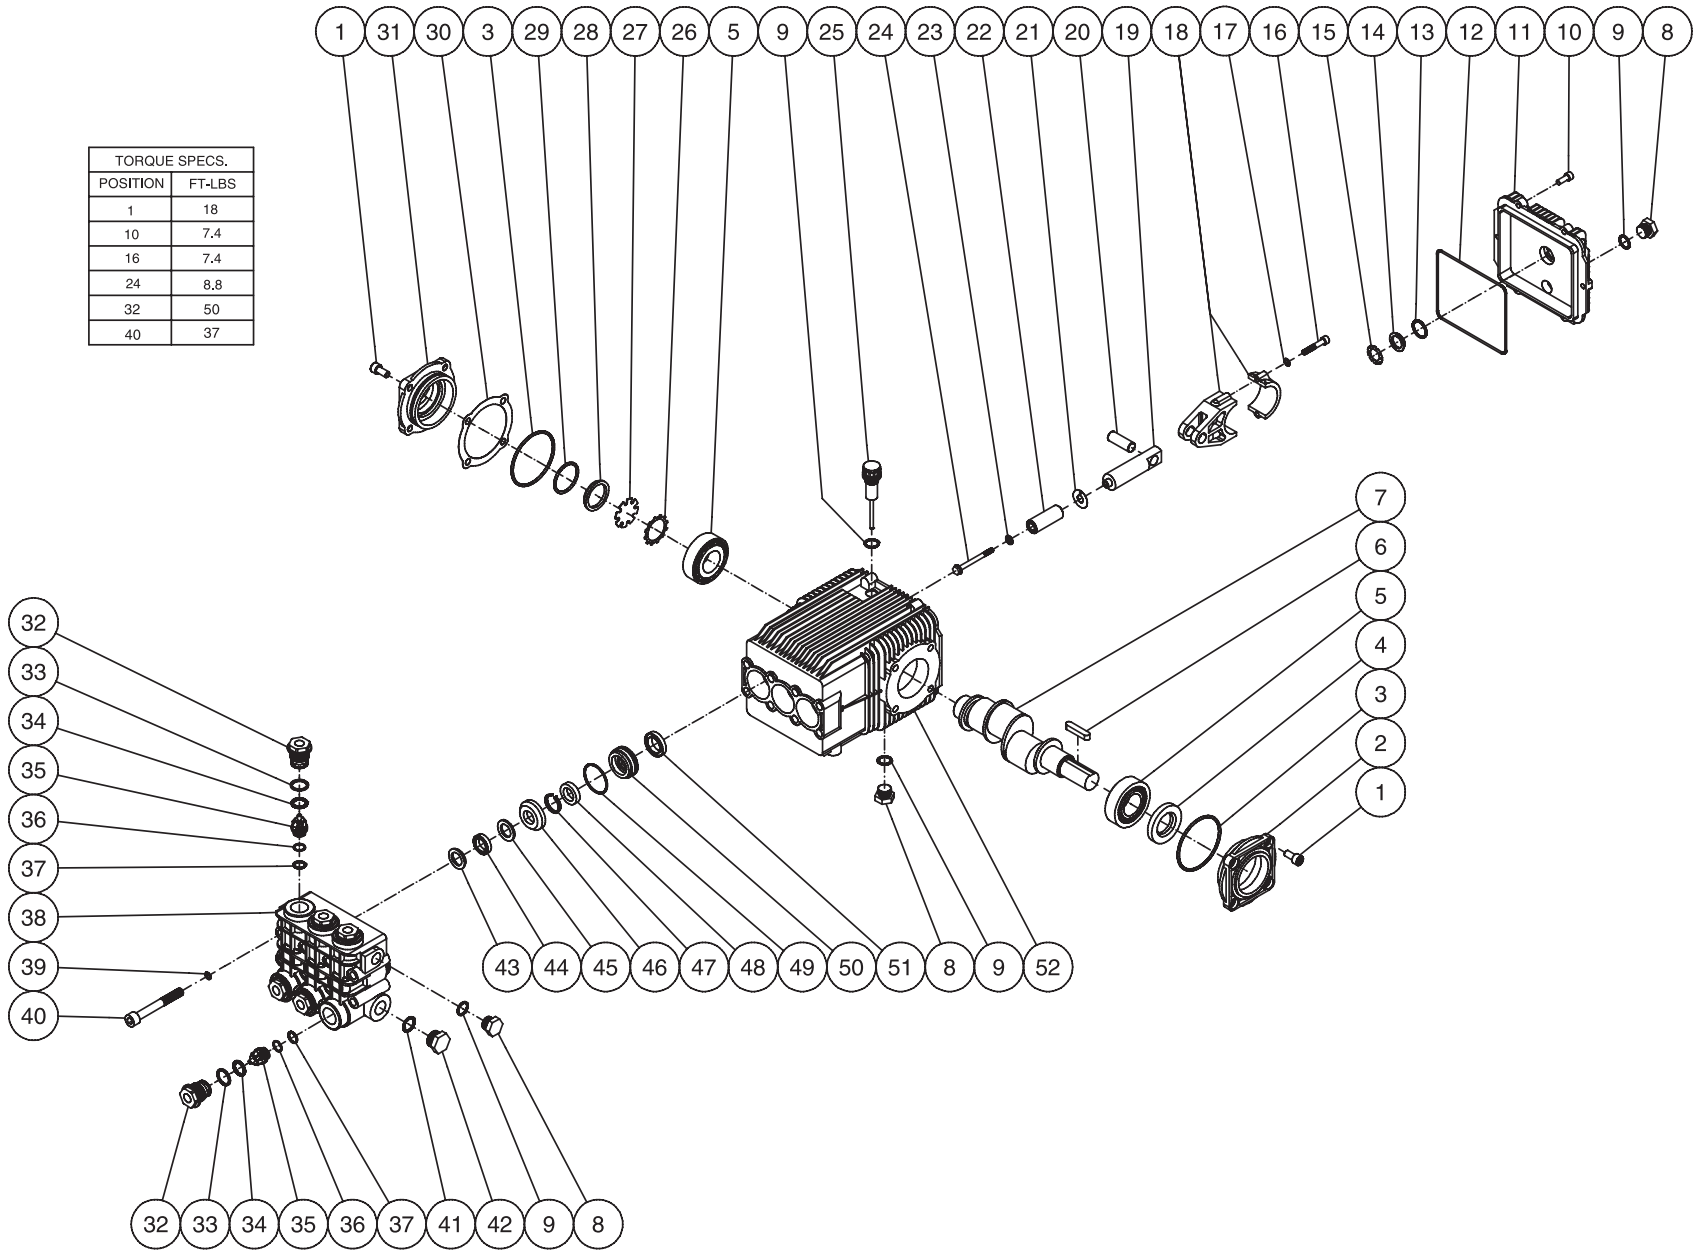


3-0213-040105-JJT

For parts Call 888-279-9274

3-0213 COLD WATER-040105-JJF

PUMP ASSEMBLY (3-0213)											
REF. #	DESCRIPTION	PART #	QTY.	REF. #	DESCRIPTION	PART #	QTY.	REF. #	DESCRIPTION	PART #	QTY.
1	Screw	27-8884	8	20	Connecting Rod Pin	46-0914	3	36	Backup Ring	25-0516	6
2	Shaft Cover	46-0909	1	21	Washer	46-0916	3	37	O-ring	25-0407	6
3	O-ring	25-0512	2	22	Piston	46-0917	3	38	Pump Manifold	46-0900	1
4	Oil Seal	26-0243	1	23	Washer	29-0014	3	39	Lockwasher	29-0153	8
5	Bearing	48-0073	2	24	Screw	27-8965	3	40	Screw	27-8470	8
6	Key w/Pump	43-0091	1	25	Oil Dipstick	39-0204	1	41	O-ring	25-0372	1
7	Crankshaft	N/A	1	26	Oil Sight Glass Spring Retainer	46-0924	1	42	Plug	39-0202	1
8	Plug	39-0203	3	27	Oil Reflector	46-0925	1	43	Support Ring (See 70-0317)	N/A Sep.	3
9	O-ring	25-0510	4	28	Oil Sight Glass	46-0926	1	44	High Pressure Seal (See 70-0317)	N/A Sep.	3
10	Screw	27-8888	6	29	O-ring	25-0514	1	45	Backup Ring (See 70-0317)	N/A Sep.	3
11	Crankcase Cover (Inc. 8, 9, 13-15)	46-0912	1	30	Shim- .05 mm	46-0947	-	46	Guide Front	46-1201	3
12	O-ring	25-0513	1	-	Shim- .10 mm	46-0948	-	47	Backup Ring (See 70-0317)	N/A Sep.	3
13	O-ring	25-0370	1	-	Shim- .19 mm	46-0949	-	48	Low Pressure Seal (See 70-0317)	N/A Sep.	3
14	Oil Sight Glass	46-0670	1	-	Shim- .25 mm	46-0950	-	49	O-ring (See 70-0317)	N/A Sep.	3
15	Oil Sight Glass Spring Retainer	46-0671	1	31	Bearing Cover	46-0918	1	50	Guide Rear	46-1200	3
16	Screw	N/A	6	32	Valve Cap	39-0201	6	51	Oil Seal	26-0242	3
17	Lockwasher	N/A	6	33	Back-up Ring	25-0509	6	52	Crankcase	46-0911	1
18	Connecting Rod (Inc. 16-17)	46-0913	3	34	O-ring	25-0386	6		Valve Kit (Inc. 6 each 35-37)	70-0314	1
19	Plunger Rod	46-0915	3	35	Backup Ring Valve (See 70-0314)	N/A Sep.	6		Water Seals Kit (Inc. 3 each 43-45, 47-49)	70-0317	1

PUMP ASSEMBLY (3-0261)

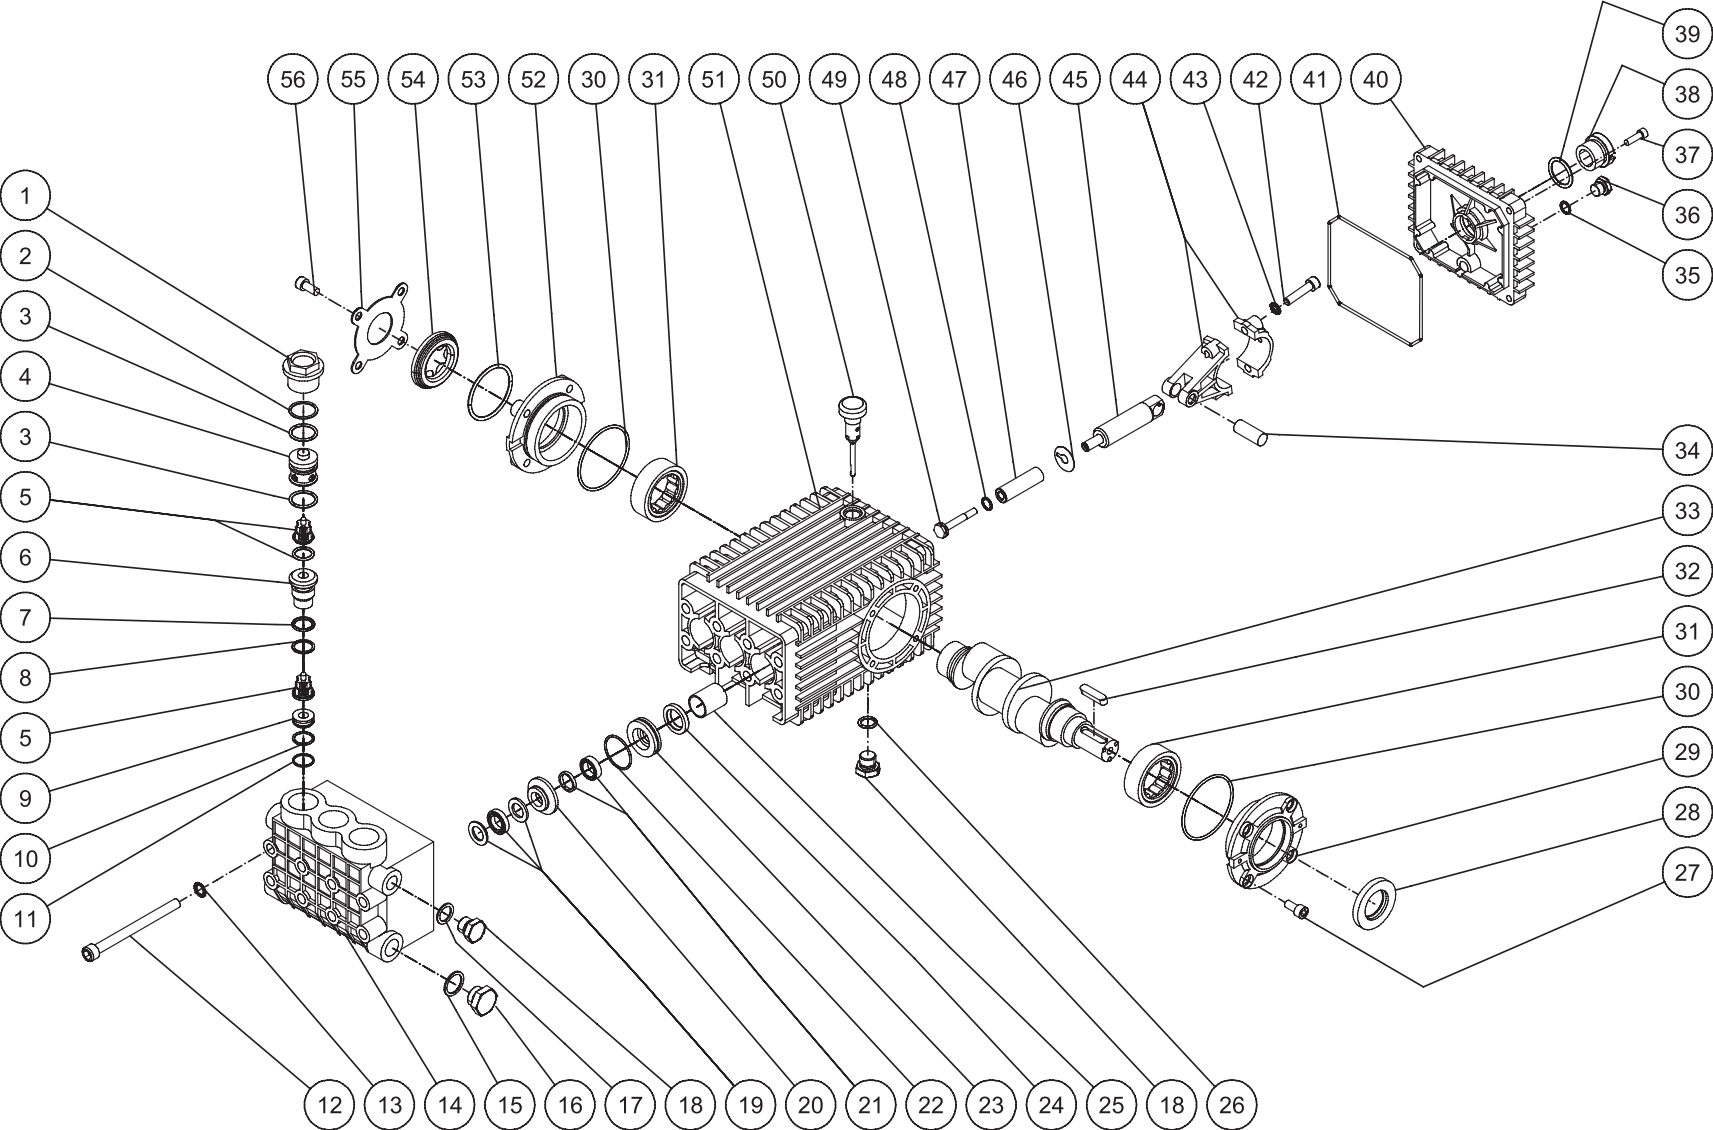


3-0261-122007-JJT

For parts Call 888-279-9274

3-0261-122007-JJT

PUMP ASSEMBLY (3-0261)											
REF. #	DESCRIPTION	PART #	QTY.	REF. #	DESCRIPTION	PART #	QTY.	REF. #	DESCRIPTION	PART #	QTY.
1	Valve Plug	46-1203	3	21	Low Pressure Seal (See 70-0434)	N/A Sep.	3	41	O-ring	25-0339	1
2	Backup Ring	25-0592	3	22	O-ring	25-0015	3	42	Bolt	27-8435	6
3	O-ring	25-0139	6	23	Low Pressure Seal Retainer (See 70-0434)	N/A Sep.	3	43	Lockwasher	29-1014	1
4	Cap	46-1206	3	24	Oil Seal	26-0047	3	44	Connecting Rod	46-1211	3
5	Valve Assembly (See 70-0431)	N/A Sep.	6	25	Bushing	9-0029	3	45	Piston Rod	46-1213	3
6	Guide	46-1205	3	26	O-ring	25-0052	1	46	Slinger Washer	46-1214	3
7	O-ring	25-0160	3	27	Bolt	27-8431	4	47	Plunger	46-1215	3
8	Backup Ring	25-0430	3	28	Oil Seal	26-0049	1	48	O-ring	25-0310	3
9	Spacer	46-1204	3	29	Crankcase Open Cover	46-1217	1	49	Bolt	46-1216	3
10	O-ring	25-0130	3	30	O-ring	25-0590	2	50	Oil Dipstick	46-0144	1
11	Backup Ring	25-0591	3	31	Bearing	46-0085	2	51	Crankcase	46-1209	1
12	Bolt	27-8073	8	32	Key	46-0602	1	52	Crankcase Sightglass Cover	46-1208	1
13	Lockwasher	29-0155	8	33	Crankshaft	46-1210	1	53	O-ring	25-0060	1
14	Manifold	46-1202	1	34	Connecting Rod Pin	43-0118	3	54	Sightglass	46-0574	1
15	Washer	28-1038	1	35	O-ring	25-0014	1	55	Sightglass Cover	46-1207	1
16	Hex Plug	39-0019	1	36	Hex Plug	39-0017	1	56	Bolt	27-8433	4
17	Washer	28-1002	1	37	Bolt	27-8812	4		Oil Seal Kit (Inc. 3 each 24)	70-0432	
18	Hex Plug	39-0018	2	38	Sight Glass	46-1163	1		Valve Kit (Inc. 6 each 5)	70-0431	
19	High Pressure Seal Assembly (See 70-0434)	N/A Sep.	3	39	O-ring	25-0059	1		Low/High Pressure Seals (Inc. 3 each 19, 21)	70-0433	
20	High Pressure Intermediate Seal Retainer (See 70-0434)	N/A Sep.	3	40	Crankcase Cover	46-1212	1		Packing Kit (Inc. 1 each 19-23)	70-0434	

PUMP ASSEMBLY (3-0262)

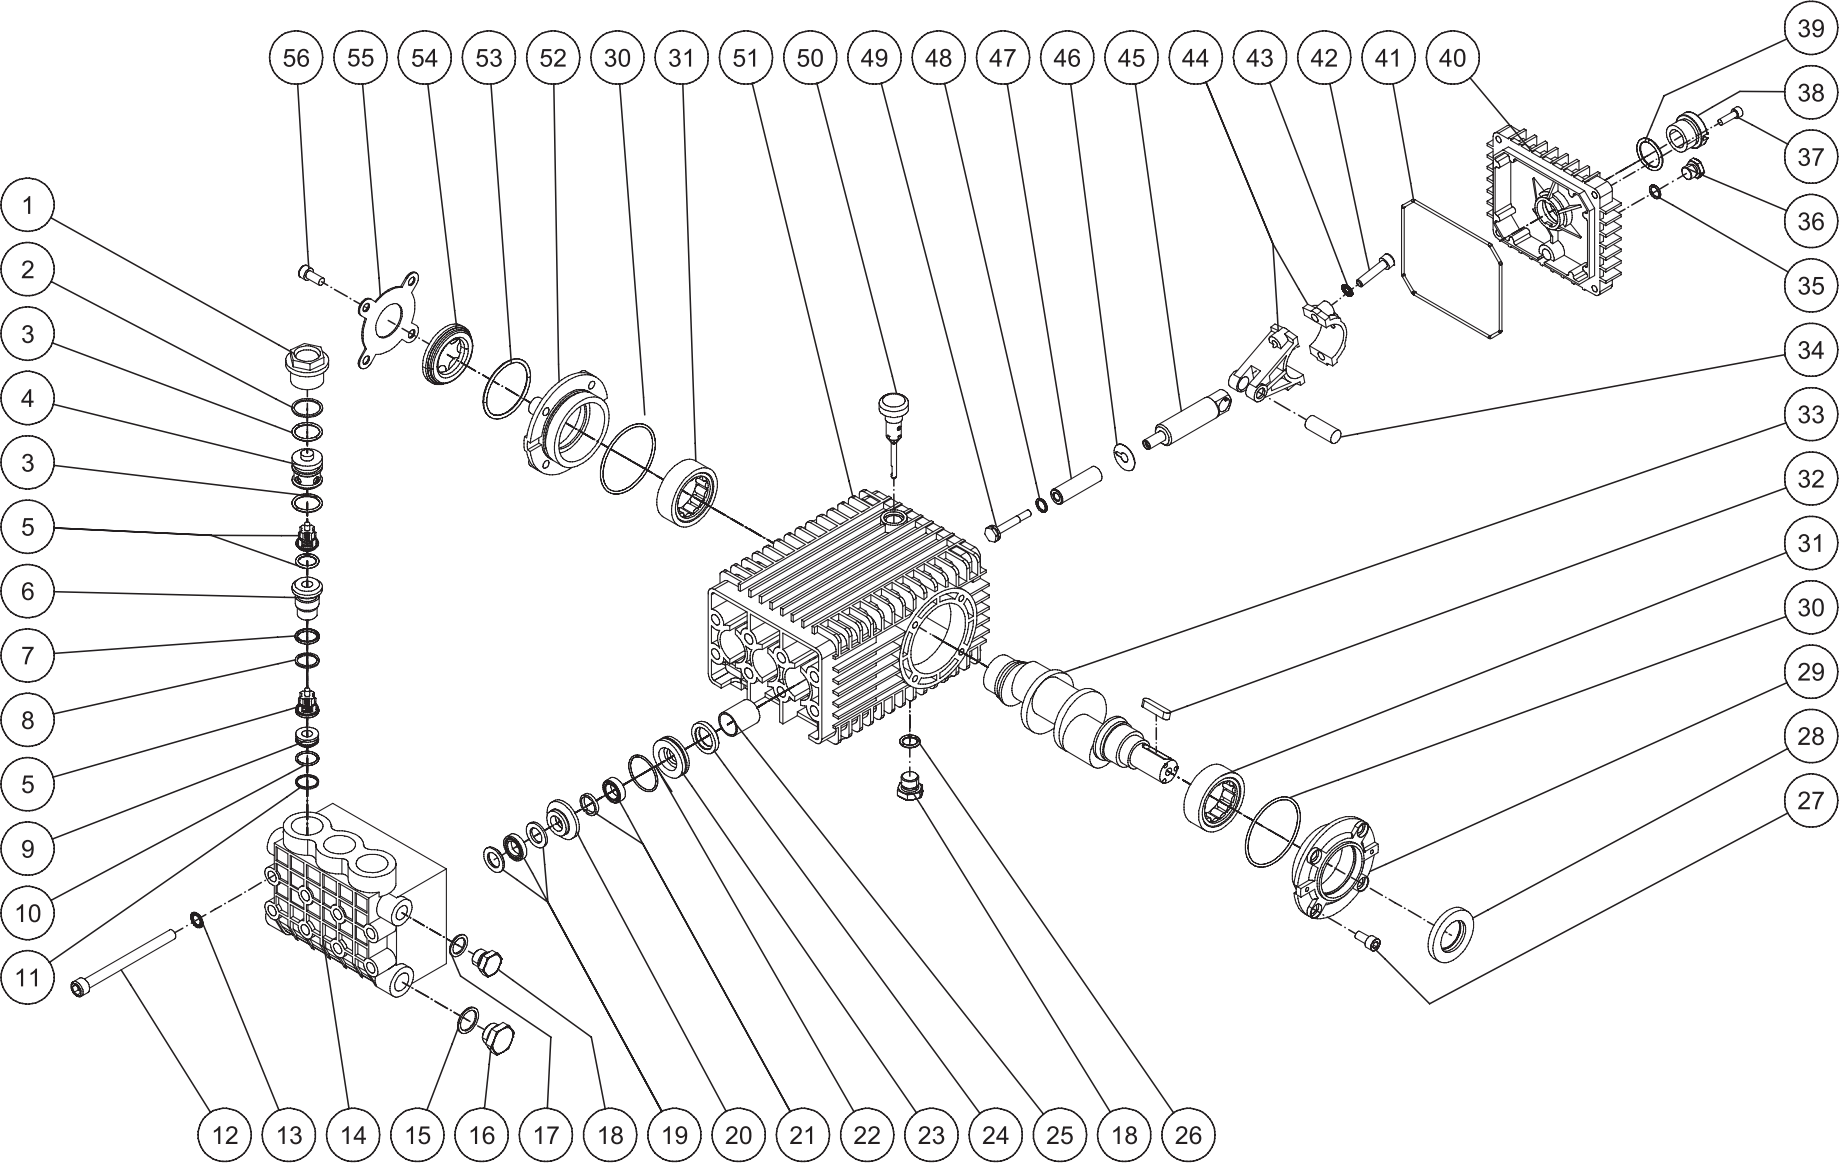

3-0262-122007-JJT


For parts Call 888-279-9274

3-0262-122007-JJT

PUMP ASSEMBLY (3-0262)											
REF. #	DESCRIPTION	PART #	QTY.	REF. #	DESCRIPTION	PART #	QTY.	REF. #	DESCRIPTION	PART #	QTY.
1	Valve Plug	46-1203	3	21	Low Pressure Seal (See 70-0435)	N/A Sep.	3	41	O-ring	25-0339	1
2	Backup Ring	25-0592	3	22	O-ring	25-0015	3	42	Bolt	27-8435	6
3	O-ring	25-0139	6	23	Low Pressure Seal Retainer (See 70-0435)	N/A Sep.	3	43	Lockwasher	29-1014	1
4	Cap	46-1206	3	24	Oil Seal	26-0047	3	44	Connecting Rod	46-1211	3
5	Valve Assembly (See 70-0431)	N/A Sep.	6	25	Bushing	9-0029	3	45	Piston Rod	46-1213	3
6	Guide	46-1205	3	26	O-ring	25-0052	1	46	Slinger Washer	46-1214	3
7	O-ring	25-0160	3	27	Bolt	27-8431	4	47	Plunger	46-1219	3
8	Backup Ring	25-0430	3	28	Oil Seal	26-0049	1	48	O-ring	25-0310	3
9	Spacer	46-1204	3	29	Crankcase Open Cover	46-1217	1	49	Bolt	46-1216	3
10	O-ring	25-0130	3	30	O-ring	25-0590	2	50	Oil Dipstick	46-0144	1
11	Backup Ring	25-0591	3	31	Bearing	46-0085	2	51	Crankcase	46-1209	1
12	Bolt	27-8073	8	32	Key	46-0602	1	52	Crankcase Sightglass Cover	46-1208	1
13	Lockwasher	29-0155	8	33	Crankshaft	46-1210	1	53	O-ring	25-0060	1
14	Manifold	46-1218	1	34	Connecting Rod Pin	43-0118	3	54	Sightglass	46-0574	1
15	Washer	28-1038	1	35	O-ring	25-0014	1	55	Sightglass Cover	46-1207	1
16	Hex Plug	39-0019	1	36	Hex Plug	39-0017	1	56	Bolt	27-8433	4
17	Washer	28-1002	1	37	Bolt	27-8812	4		Oil Seal Kit (Inc. 3 each 24)	70-0432	
18	Hex Plug	39-0018	2	38	Sight Glass	46-1163	1		Valve Kit (Inc. 6 each 5)	70-0431	
19	High Pressure Seal Assembly (See 70-0435)	N/A Sep.	3	39	O-ring	25-0059	1		Low/High Pressure Seals (Inc. 3 each 19, 21)	70-0436	
20	High Pressure Intermediate Seal Retainer (See 70-0435)	N/A Sep.	3	40	Crankcase Cover	46-1212	1		Packing Kit (Inc.1 each 19-23)	70-0435	

PUMP ASSEMBLY (3-0279)

TORQUE SPECS.	
POSITION	FT-LBS
1	95,9
7	29,5
9	33,2
11	51,6
13	29,5
23	14,8
30	14,8
33	7,4
36	14,8
43	14,8
50	14,8
** USE LOC-TITE 542	

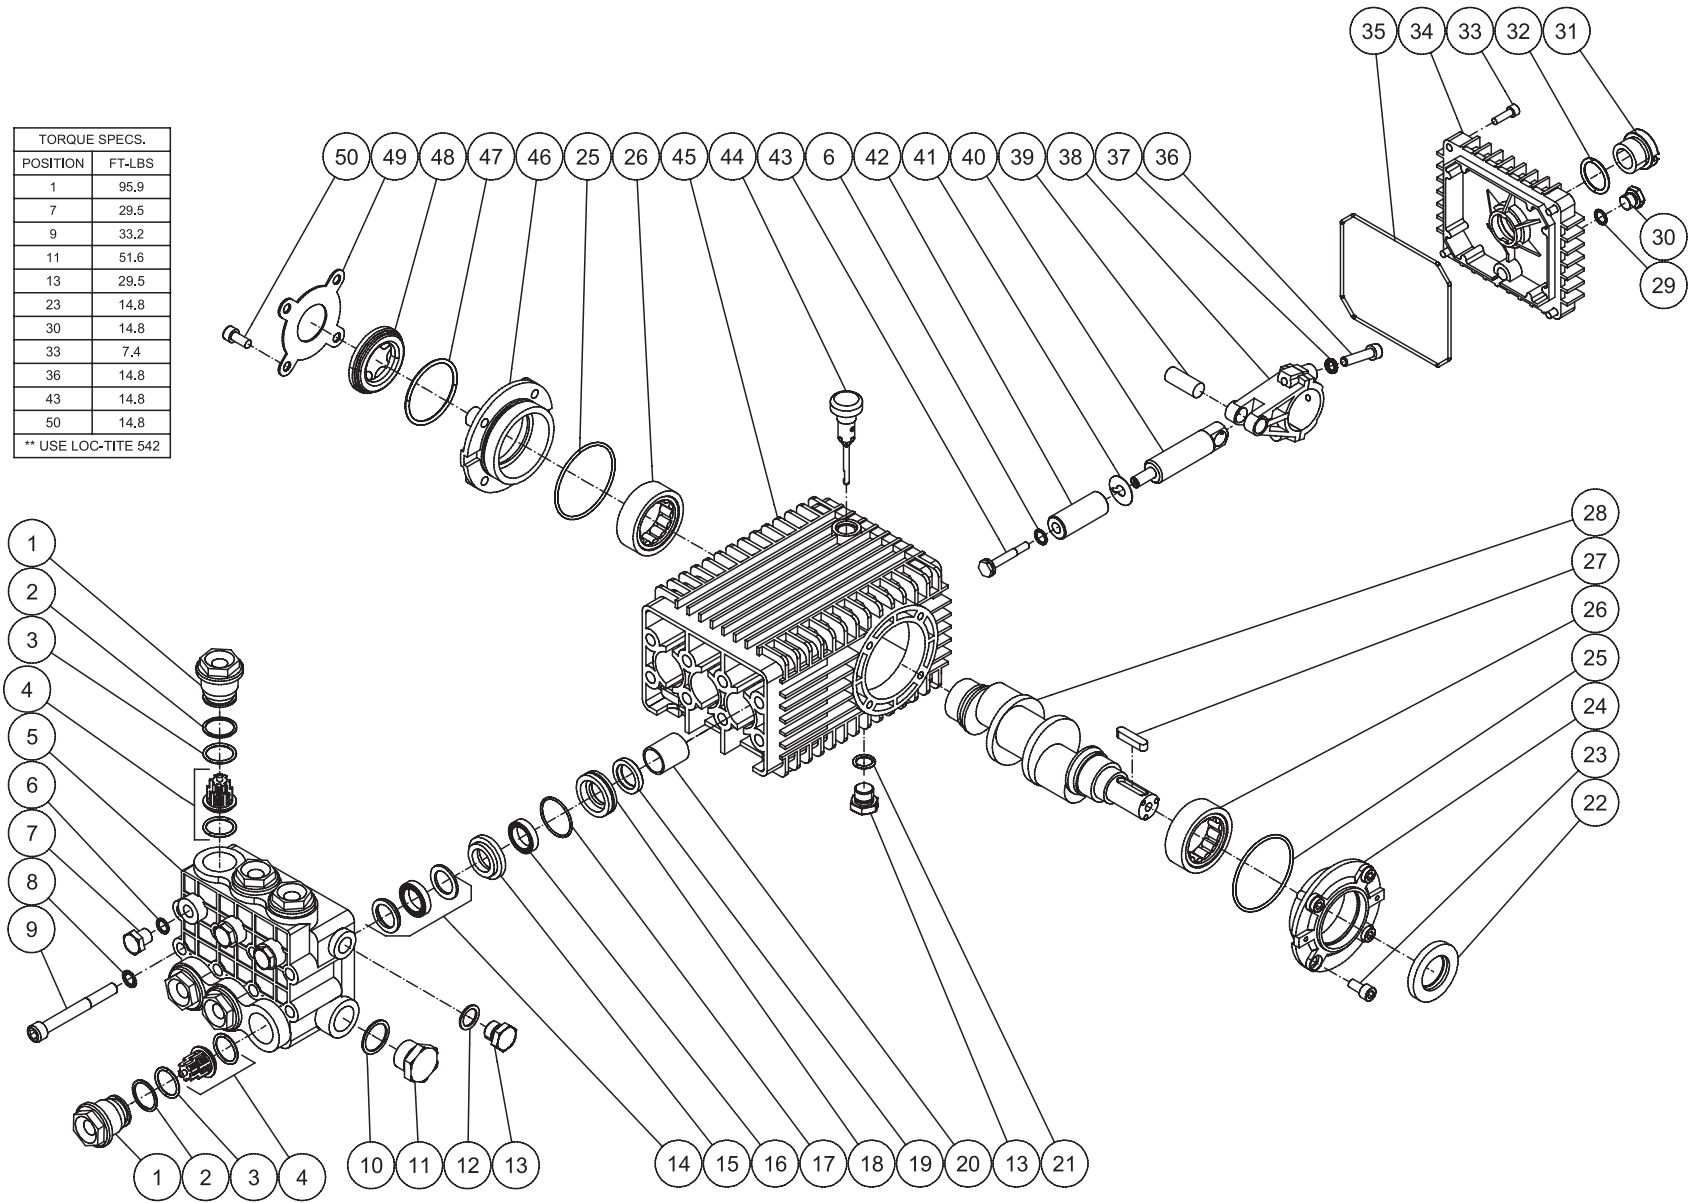


3-0279- 062706-JJT

For parts Call 888-279-9274

3-0279-062706-CAW

PUMP ASSEMBLY (3-0279)							
REF. #	DESCRIPTION	PART #	QTY.		REF. #	DESCRIPTION	PART # QTY.
1	Valve Cap	46-1222	6		28	Crankshaft	46-1210 1
2	Backup Ring	25-0592	6		29	O-ring	25-0014 1
3	O-ring	25-0139	6		30	Plug	39-0017 1
4	Valve Assembly (See 70-0439)	N/A Sep.	6		31	Sight Glass	46-1163 1
5	Manifold	46-1220	1		32	O-ring	25-0059 1
6	O-ring	25-0310	6		33	Bolt	27-8812 4
7	Plug	39-0222	3		34	Crankcase Cover	46-1212 1
8	Lockwasher	29-0155	8		35	O-ring	25-0339 1
9	Bolt	27-9595	8		36	Bolt	27-8435 6
10	Gasket	28-1051	1		37	Lockwasher	29-1014 6
11	Plug	39-0221	1		38	Connecting Rod	46-1211 3
12	Washer	28-1002	1		39	Connecting Rod Pin	43-0118 3
13	Plug	29-0018	2		40	Piston Rod	46-1213 3
14	High Pressure Seal Assembly (See 70-0440 or 70-0441)	N/A Sep.	3		41	Slinger Washer	46-1214 3
15	High Pressure Intermediate Ring (See 70-0441)	N/A Sep.	3		42	Plunger	46-1221 3
16	Low Pressure Seal Assembly (See 70-0440 or 70-0441)	N/A Sep.	3		43	Piston	46-1216 3
17	O-ring	25-0015	3		44	Oil Dipstick	46-0144 1
18	Low Pressure Seal Retainer (See 70-0441)	N/A Sep.	3		45	Crankcase	46-1209 1
19	Oil Seal	26-0047	3		46	Crankcase Sight Glass Cover	46-1208 1
20	Bushing	9-0029	3		47	O-ring	25-0060 1
21	O-ring	25-0052	1		48	Oil Level Indicator	46-0574 1
22	Oil Seal	26-0049	1		49	Sight Glass Cover	46-1207 1
23	Bolt	27-8431	4		50	Bolt	27-8433 4
24	Crankcase Cover	46-1217	1			Oil Seal Kit (Inc. 3 each 19)	70-0432
25	O-ring	25-0590	2			Valve Kit (Inc. 6 each 4)	70-0439
26	Bearing	48-0085	2			Low/High Pressure Seal Kit (Inc. 3 each 14, 16)	70-0440
27	Key	46-0602	1			Packing Kit (Inc. 14-18)	70-0441

UNLOADER ASSEMBLY (8-0032)

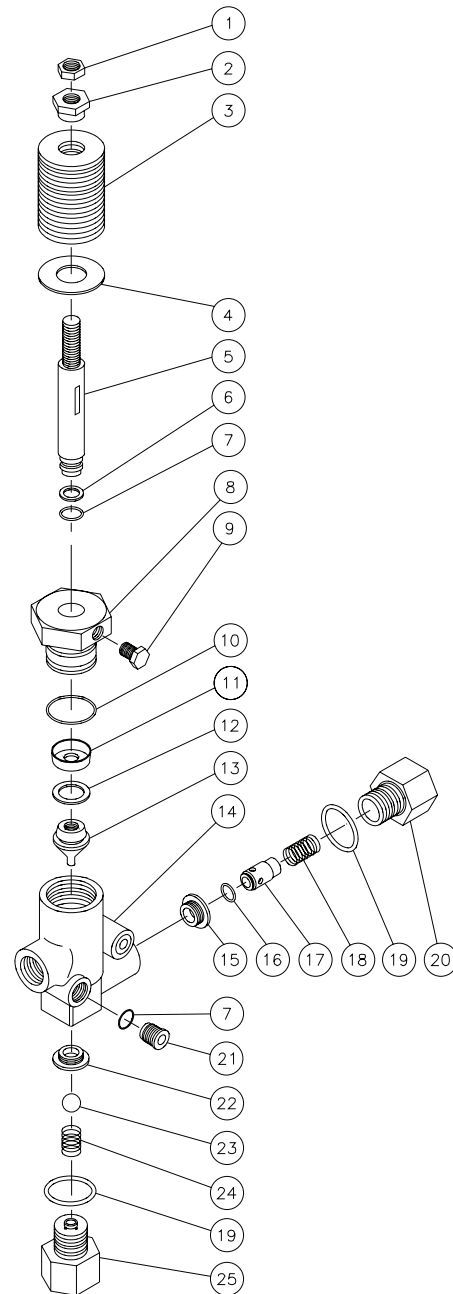


8-0032-080394-JJT

For parts Call 888-279-9274

0MGEN074-083094-BAR

UNLOADER ASSEMBLY (8-0032)			
REF.#	DESCRIPTION	PART #	QTY.
1	Locknut	30-3058	1
2	Adjusting Nut	8-0089	1
3	Spring Washers - Orange	8-0009	15
4	Washer	28-0250	1
5	Valve Stem	8-0037	1
6	Backup Ring	8-0038	1
7	O-ring	25-0009	5
8	Valve Cap	8-0036	1
9	Set Screw	8-0084	1
10	O-ring	25-0008	1
11	Cup	8-0034	1
12	Back-up Ring	8-0040	1
13	Piston	8-0039	1
14	Valve Body	8-0164	1
15	Outlet Seat	8-0006	1
16	O-ring	25-0011	1
17	Outlet Valve	8-0004	1
18	Spring	49-0016	1
19	O-ring	25-0010	2
20	Outlet Retainer	8-0003	1
21	Brass Plug	8-0011	4
22	Valve Seat	8-0005	1
23	Ball	8-0041	1
24	Spring	49-0015	1
25	Inlet Retainer	8-0165	1
	Unloader Repair Kit (Inc. 6, 7, 10-12, 16 and 19)	70-0044	

UNLOADER ASSEMBLY (8-0373)

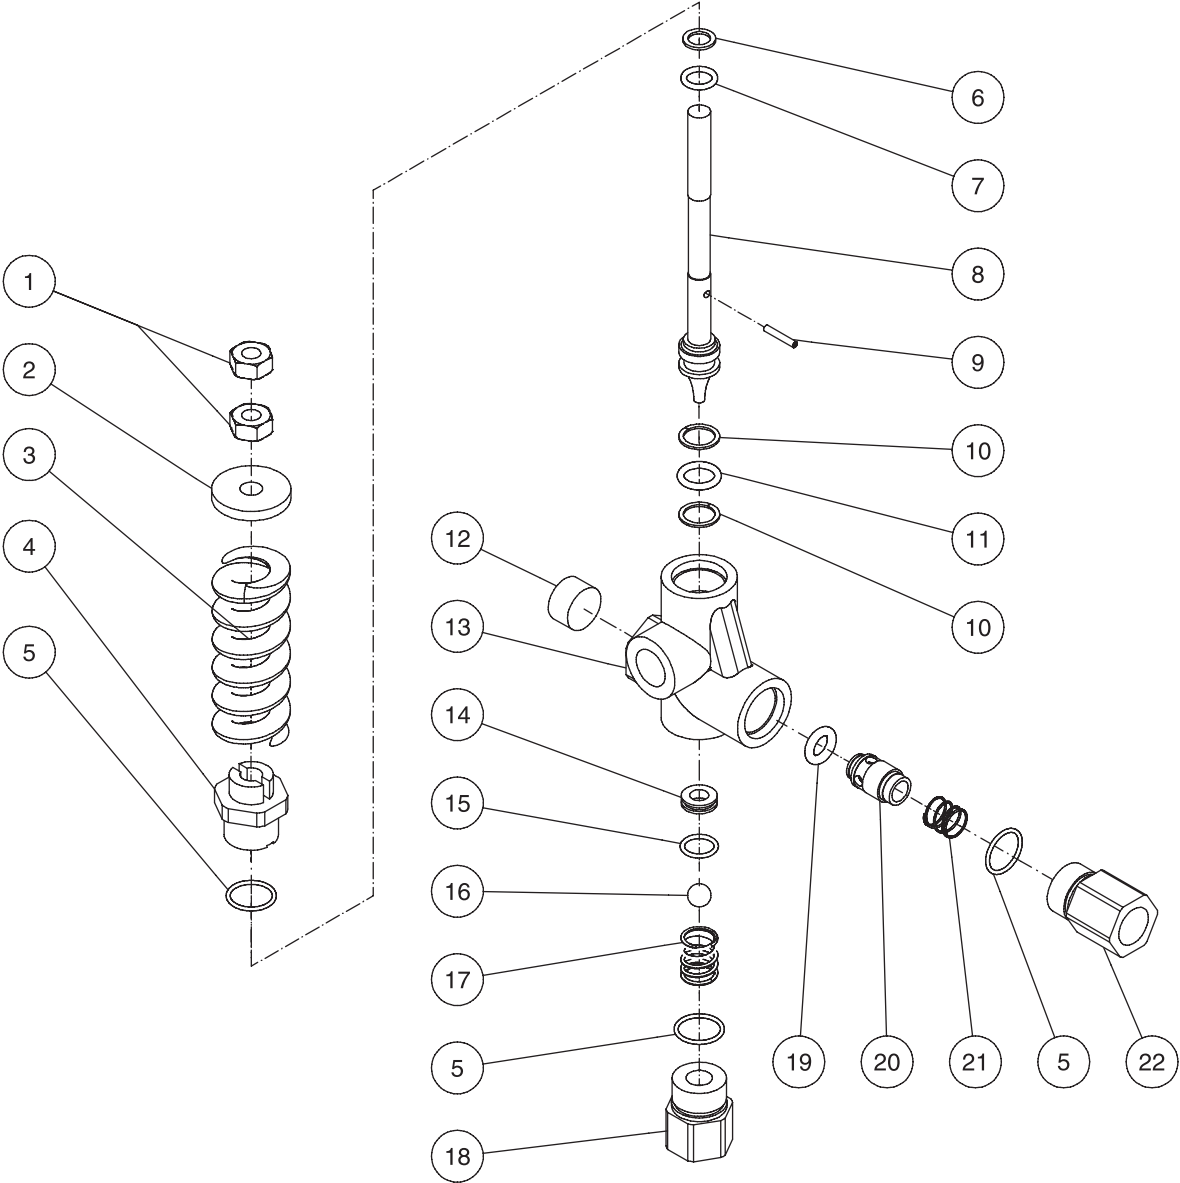


8-0373-090105-IJT

For parts Call 888-279-9274

8-0373-090105-JJT

UNLOADER ASSEMBLY (8-0373)								
REF. #	DESCRIPTION	PART #	QTY.		REF. #	DESCRIPTION	PART #	QTY.
1	Hex Nut	30-7203	2		13	Valve Housing	8-0377	1
2	Spring Guide	8-0278	1		14	Seat	8-0272	1
3	Spring	49-0098	1		15	O-ring	25-0190	1
4	Piston Housing	8-0374	1		16	Ball	8-0273	1
5	O-ring	25-0189	3		17	Ball Spring	49-0059	1
6	Back-up Ring	8-0277	1		18	Inlet Connection	8-0379	1
7	O-ring	25-0313	1		19	O-ring	25-0193	1
8	Piston	8-0375	1		20	Check Valve	22-0202	1
9	Pin	43-0059	1		21	Check Valve Spring	49-0058	1
10	Back-up Ring	8-0276	2		22	Outlet Connection	8-0376	1
11	O-ring	25-0314	1			Unloader Repair Kit (Inc. 5-7, 10, 11, 14, 16, 19)	8-0380	
12	Plug	39-0070	1		Complete Unloader (Inc. 1-22)	8-0373		

UNLOADER ASSEMBLY (8-0522)

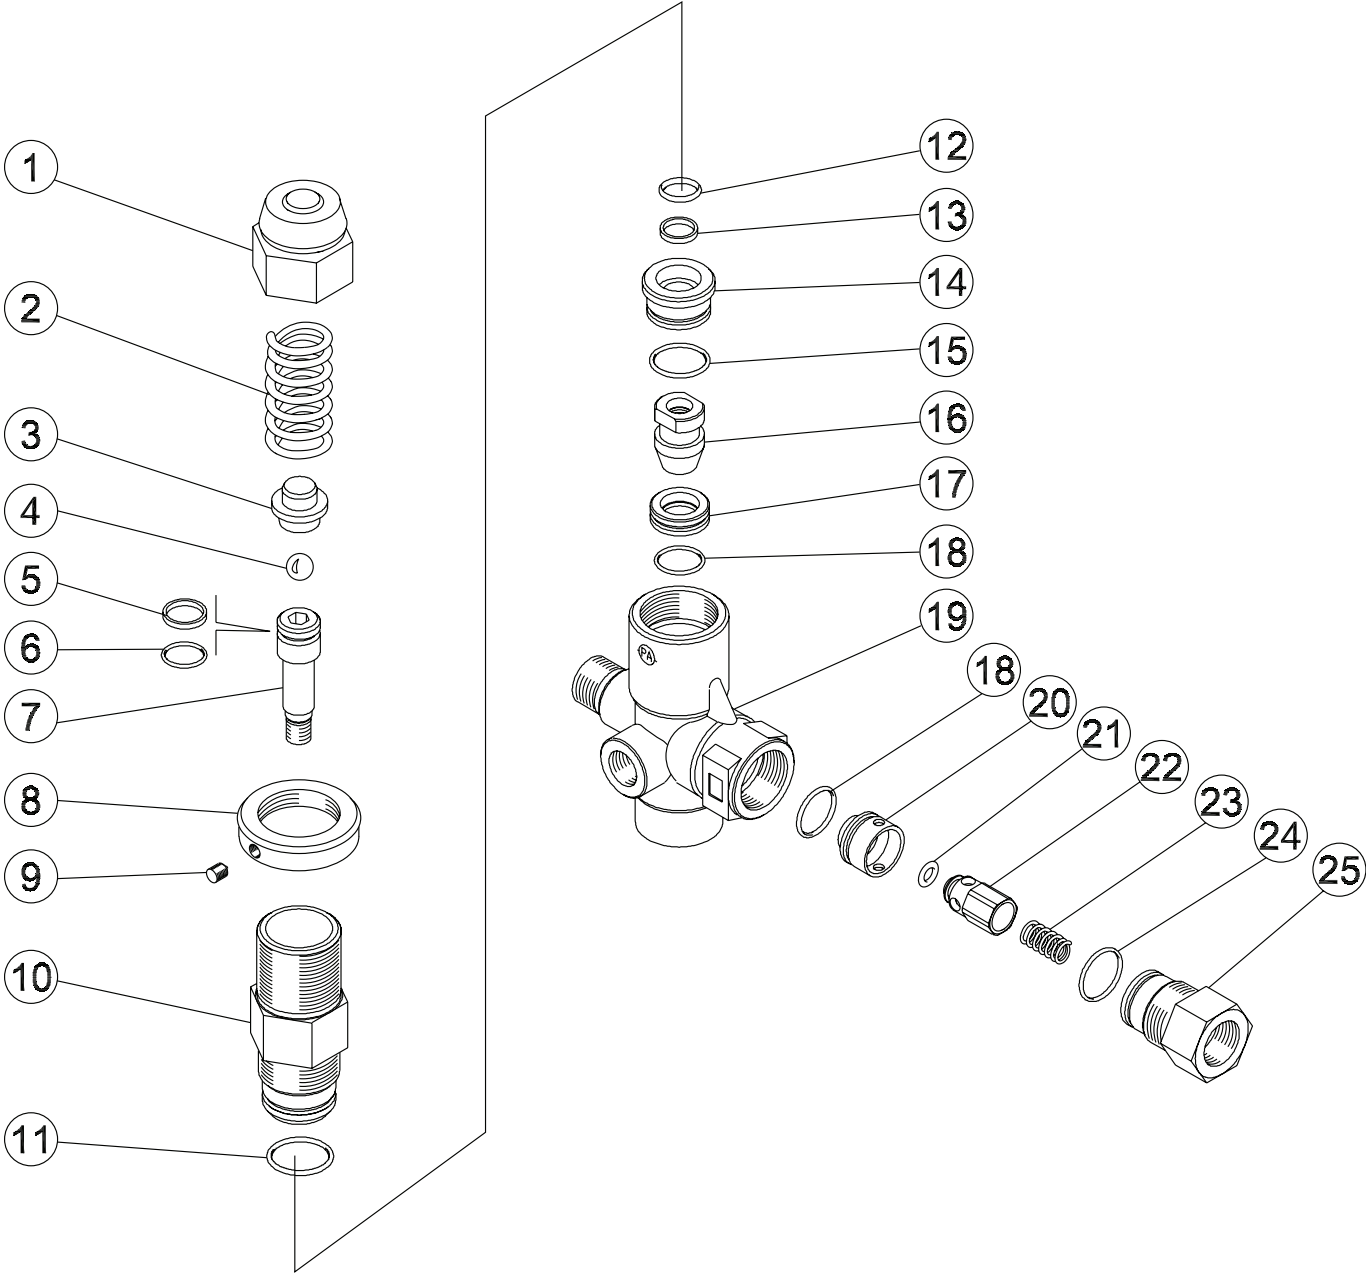


8-0522-120501-RD

For parts Call 888-279-9274

8-0522-120501-RD

UNLOADER ASSEMBLY (8-0522)								
REF. #	DESCRIPTION	PART #	QTY.		REF. #	DESCRIPTION	PART #	QTY.
1	Brass Cap	8-0534	1		15	O-ring	25-0368	1
2	Spring	49-0149	1		16	Shutter	8-0540	1
3	Spring Guide	8-0535	1		17	Seat	8-0541	1
4	Ball	8-0318	1		18	O-ring	25-0220	2
5	Back-up Ring (See 70-0342)	N/A Sep.	1		19	Valve Body	8-0542	1
6	O-ring (See 70-0342)	N/A Sep.	1		20	Check Valve Seat	8-0543	1
7	Piston	8-0536	1		21	O-ring	25-0369	1
8	Lock Ring	8-0537	1		22	Check Valve	8-0486	1
9	Set Screw	8-0408	1		23	Spring	49-0150	1
10	Piston Housing	8-0538	1		24	O-ring	25-0325	1
11	O-ring	25-0189	1		25	Nipple	8-0485	1
12	Back-up Ring (See 70-0343)	N/A Sep.	1			Upper Seal Kit (Inc. 5, 6)	70-0342	1
13	O-ring (See 70-0343)	N/A Sep.	1			Lower Seal Kit (Inc. 12, 13)	70-0343	1
14	Spacer	8-0539	1					

GUN ASSEMBLY (16-0343)

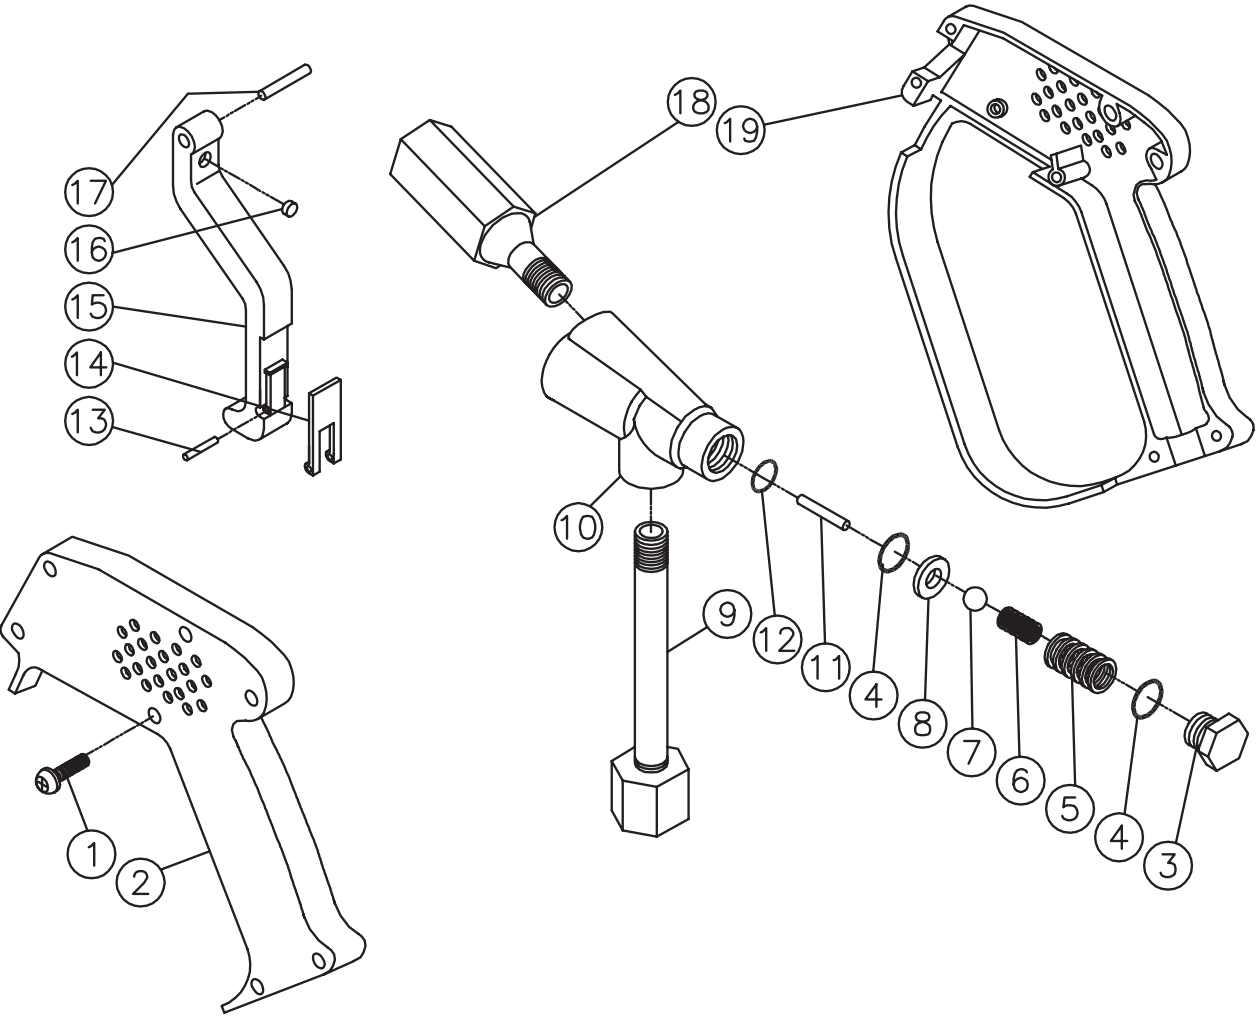


16-0343-0111110-PJH

GUN ASSEMBLY (16-0343)

REF. #	DESCRIPTION	PART #	QTY.		REF. #	DESCRIPTION	PART #	QTY.
1	Screw	27-8851	7		11	O-ring (See 70-0213)	N/A Sep.	1
2	Housing- Left Side	16-0344	1		12	Control Pin (See 70-0213)	N/A Sep.	1
3	Cap	23-0336	1		13	Lock Pin	43-0025	1
4	O-ring (See 70-0213)	N/A Sep.	2		14	Safety Lock	16-0347	1
5	Spring (See 70-0213)	N/A Sep.	1		15	Trigger	16-0348	1
6	Valve Spring (See 70-0213)	N/A Sep.	1		16	Cam Trigger (See 70-0213)	N/A Sep.	1
7	Valve Ball (See 70-0213)	N/A Sep.	1		17	Pin	43-0024	1
8	Valve Seat (See 70-0213)	N/A Sep.	1		18	Discharge Tube Assembly	16-0349	1
9	Inlet Tube Assembly	16-0345	1		19	Housing- Right Side	16-0350	1
10	Valve Body	N/A	1			Repair Kit (Inc. 4-8, 11-12, 16)	70-0213	


GUN ASSEMBLY (16-0447)

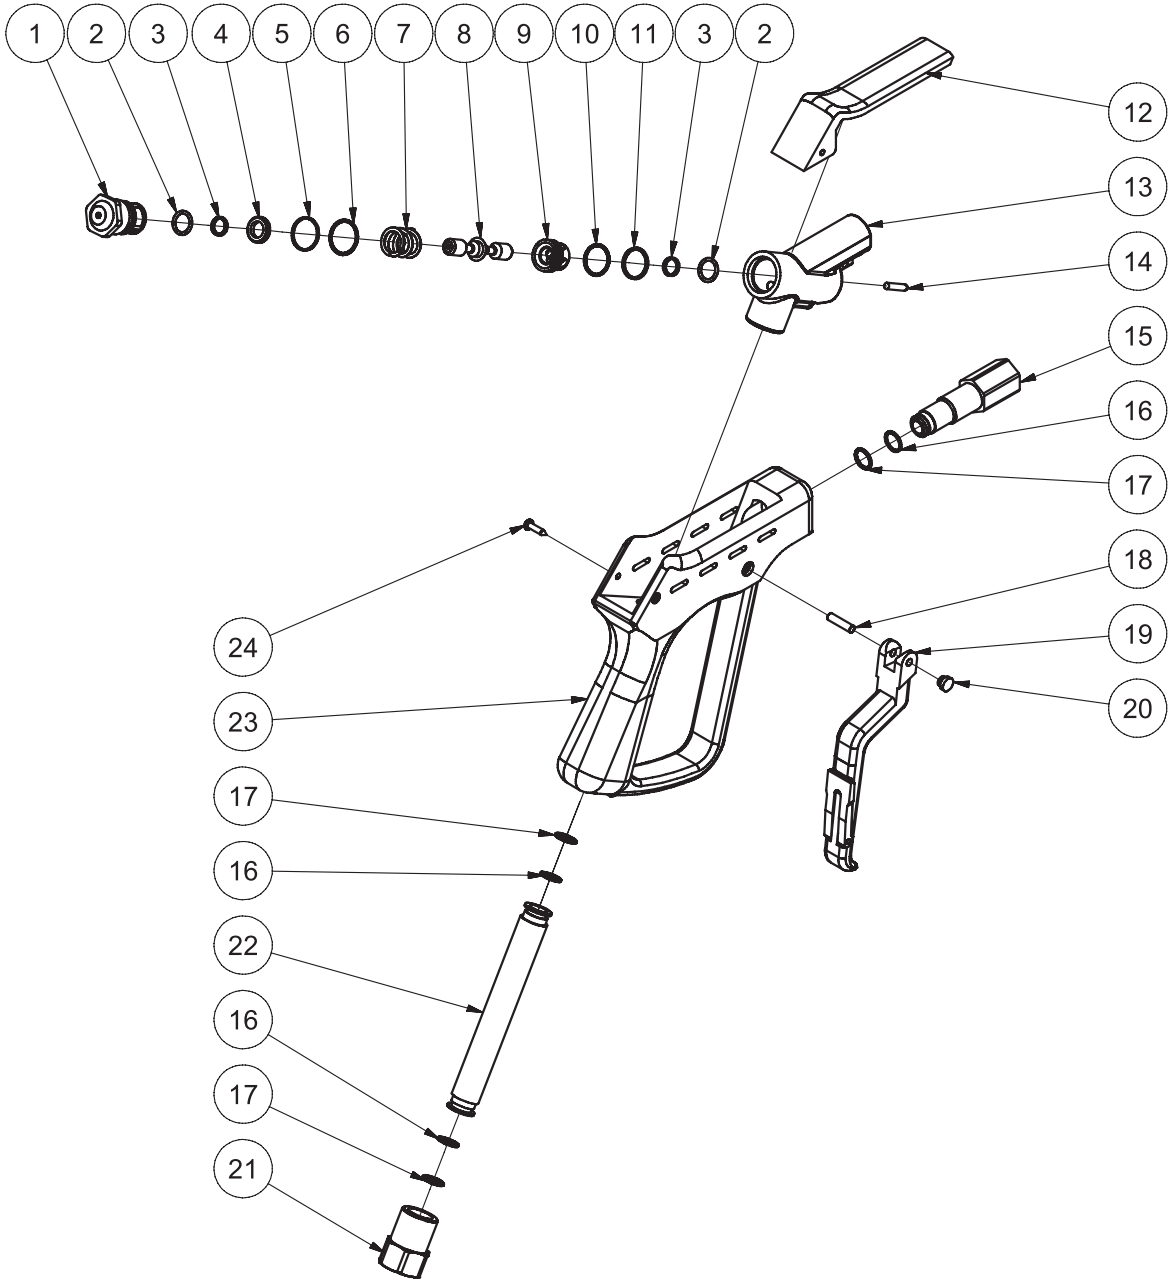

16-0447-091610-AJH

16-0447 091610 AJH_T			
GUN ASSEMBLY (16-0447)			
ITEM	DESCRIPTION	MI-T-M #	QTY
1	SEALING CAP	N/A	1
2	O-RING	N/A	2
3	GASKET RING	N/A	2
4	SEALING PLATE	N/A	1
5	BACK RING	N/A	1
6	O-RING	N/A	1
7	SPRING	N/A	1
8	VALVE CONE	16-0454	1
9	SEAL HUB	N/A	1
10	O-RING	N/A	1
11	BACK RING	N/A	1
12	PLASTIC COVER	16-0426	1
13	HOUSING	N/A	1
14	POSITION PIN	N/A	1
15	OUTLET	16-0453	1
16	SUPPORTING RING	N/A	3
17	O-RING	N/A	3
18	PIN	16-0063	1
19	TRIGGER	16-0422	1
20	PLASTIC PLUG	N/A	2
21	INLET	16-0455	1
22	INLET PIPE	16-0456	1
23	PLASTIC HOUSING	N/A	1
24	BOLT	N/A	2
-	REPAIR KIT - INCLUDES ITEM #'S: 2, 3, 7-11	70-0562	1

HONDA ENGINE ASSEMBLY (851-0385)

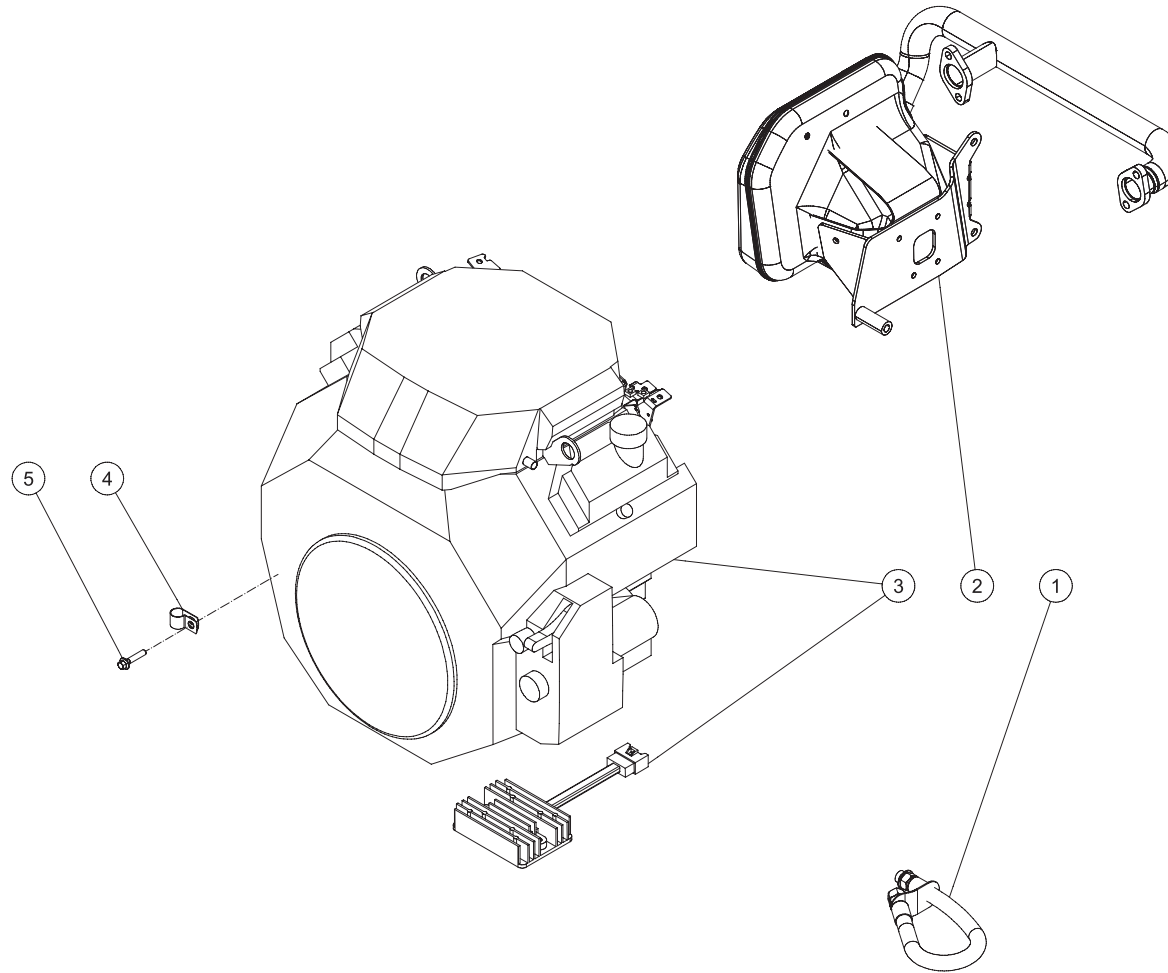

851-0385 053111			
ENGINE ASSEMBLY			
ITEM	DESCRIPTION	Mi-T-M #	QTY
1	DRAIN HOSE	70-0555	1
2	MUFFLER	45-0161	1
3	ENGINE	1-0184	1
4	HOSE CLIP	33-0517	1
5	BOLT	27-8898	1

For parts Call 888-279-9274

Manufactured by Mi-T-M
8650 Enterprise Drive, Peosta IA 52068
563-556-7484/ Fax 563-556-1235