



PARTS LIST FOR

GBA-3800-ODAH (GRAINGER ITEM #822TN2)

GBA-3800-ODAM (GRAINGER ITEM #822TN9)

GBA-4200-ODAH (GRAINGER ITEM #822TN3)

GBA-4200-ODAM (GRAINGER ITEM #822TN8)

COLD WATER PRESSURE WASHER

MANUFACTURED FOR W.W. GRAINGER INC.

FOR REPLACEMENT PARTS CALL 888-279-9274

Engine Oil Grade:	SAE10W-30 (Grainger Item #4F743)
Engine Oil Capacity:	37 oz.
Pump Oil Grade:	SAE30W Non-Detergent (Grainger Item #4ZF21)
Pump Oil Capacity:	15 oz.
Nozzle Size:	
GBA-3800	4.0
GBA-4200	3.0

This Parts Listing has been compiled for your benefit. You can be assured your Cold Water Pressure Washer was constructed and designed with quality and performance in mind. Each component has been rigorously tested to insure the highest level of acceptance.

The contents of this Parts Listing are based on the latest product information available at the time of publication. Manufacturer reserves the right to make changes in price, color, materials, equipment, specifications or models at any time without notice.

WARNING

THIS IS A PROFESSIONAL HIGH PRESSURE, COLD WATER PRESSURE WASHER. CAUTION SHOULD BE OBSERVED WHEN USING OR REPAIRING THIS UNIT! READ AND FOLLOW THE SAFETY WARNINGS LISTED BELOW BEFORE ATTEMPTING ANY REPAIRS ON THIS PRESSURE WASHER!

SAFETY WARNINGS

- 1. NEVER alter or modify the equipment. Be sure any accessory items and system components being used will withstand the pressure developed. Use only genuine manufacturer parts for repair of your pressure washer. Failure to do so can cause hazardous operating conditions and will VOID warranty.
- 2. NEVER make adjustments on machinery while the unit is connected to the engine without first removing the ignition cable from the spark plug. Turning over the machinery by hand during adjustment or cleaning might start the engine and machinery with it, causing serious injury to the operator.
- 3. Know how to stop and bleed pressures quickly. Be thoroughly familiar with controls.
- 4. Before servicing the unit, turn unit off, relieve the water pressure and allow the unit to cool down. Do not make repairs while the unit is running. Service in a clean, dry, flat area. Block the wheels to prevent the unit from moving. Be especially careful to properly dispose of any flammable materials.
- 5. After testing the machine, DO NOT leave the pressurized unit unattended. Shut off the unit and release trapped pressure before leaving.

Table of Contents

SPECIFICATIONS.....3

NOTES4

FRAME ASSEMBLY6

PUMP ASSEMBLY8

UNLOADER ASSEMBLY10


SPECIFICATIONS

	GBA-3800-0DAH	GBA-3800-0DAM	GBA-4200-0DAH	GBA-4200-0DAM
Operating Pressure (PSI/Bar):	3800 / 262		4200 / 290	
High Pressure Nozzle:	4.0		3.5	
Water Volume (GPM/lpm):	3.7 / 14		3.4 / 13	
Engine:	Honda	Mi-T-M	Honda	Mi-T-M
Model	GX390	420cc	GX390	420cc
Engine Type	4 Stroke, Overhead Valve, Single Cylinder			
Oil Type	SAE10W-30 (Grainger Item #4F743)			
Oil Capacity (oz./liters)	37 / 1.1			
Low Oil Protection	Yes			
Fuel Type	Unleaded Gasoline 86 Octane Minimum			
Fuel Capacity (gallon/liters)	1.61 / 6.1	1.8 / 6.8	1.61 / 6.1	1.8 / 6.8
Starting	Recoil			
Maximum No Load RPM	3600			
Pump:	Belt Driven, Oil Bath, Triplex Piston			
Model	AR			
Oil Type	SAE30W Non-Detergent (Grainger Item #4ZF21)			
Oil Capacity (oz./liters)	15 / 0.44			
Plungers	Ceramic			
Manifold	Forged Brass			
Valves	Stainless Steel			
Unloader	Adjustable			
Thermal Relief Valve	Relieves heated water during unloader bypass stage			
Unit Net Weight (lbs/Kg)	165 / 74.8			
Unit Shipping Weight (lbs/Kg)	215 / 98			
Unit Net Dimension (in/cm)	46.5Lx28Wx27.5H / 118Lx71Wx70H			
Unit Shipping Dimension (in/cm)	48Lx30Wx34H / 122Lx76Wx86H			

NOTES

NOTES

FRAME ASSEMBLY

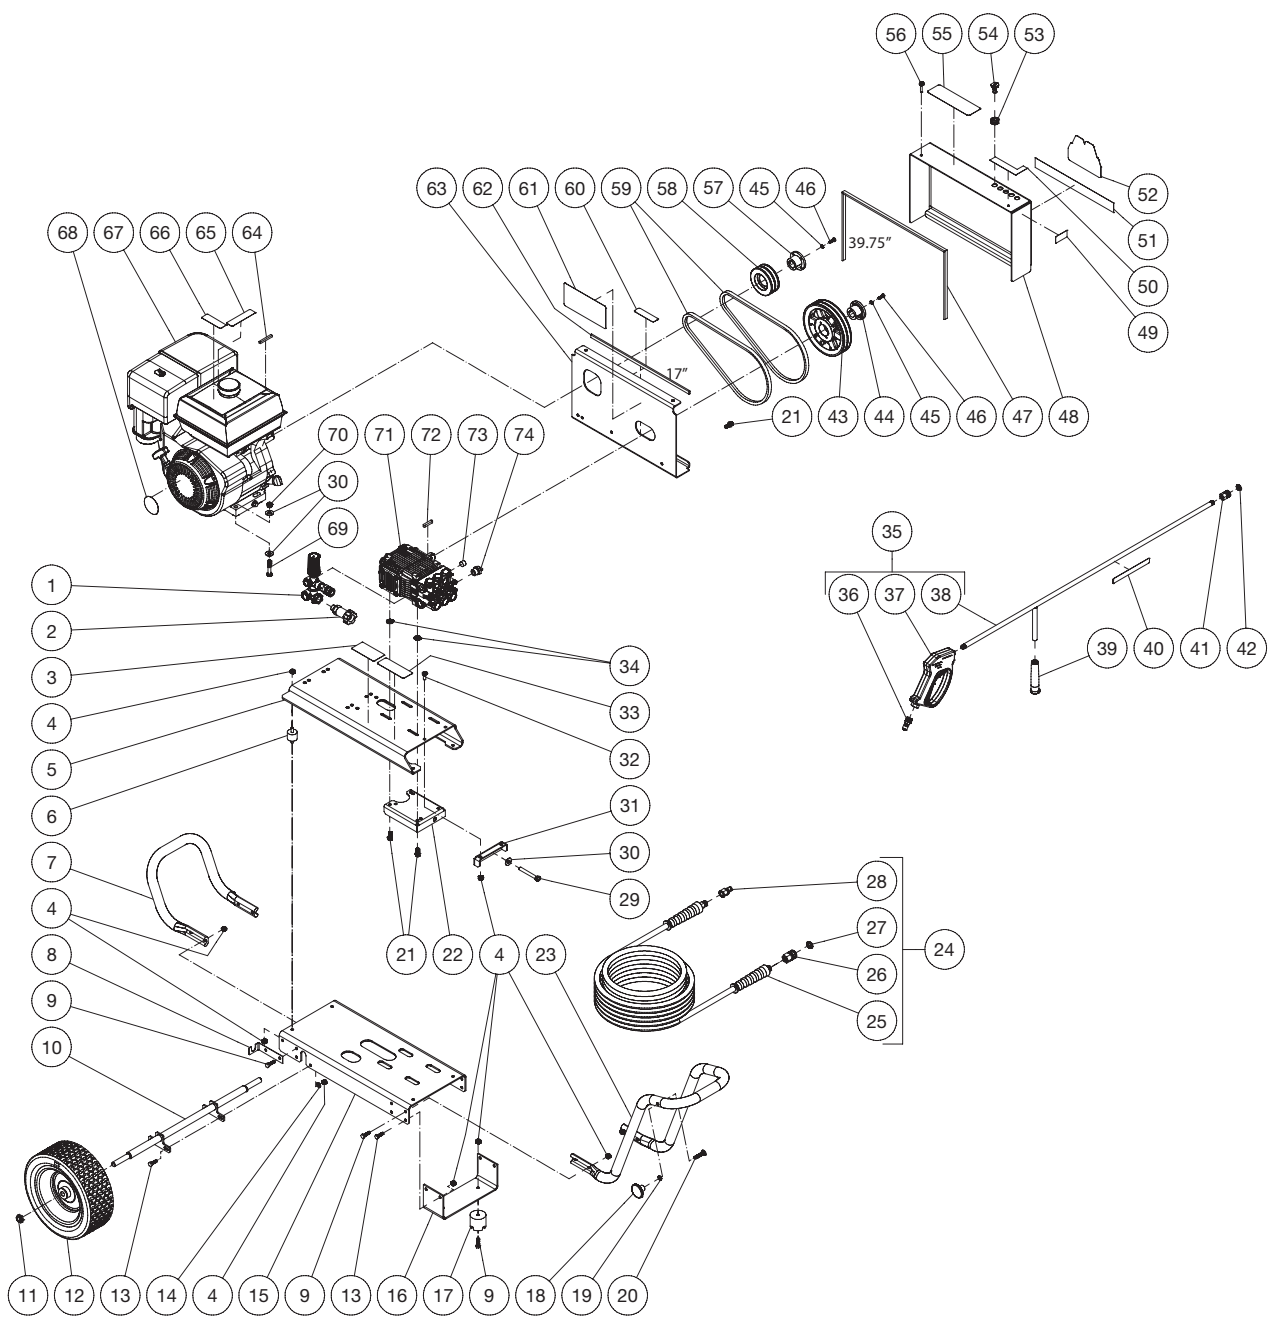

GBA-3800_4200-0DAH_ODAM 051225


For parts Call 888-279-9274

GBA-3800_4200-0DAH_0DAM 051225

FRAME ASSEMBLY

ITEM	TITLE	PART #	QTY		ITEM	TITLE	PART #	QTY
1	UNLOADER ASSEMBLY WITHOUT CHEM INJ	8-0631	1		43	SHEAVE	10-0035	1
2	FILTER	19-0206	1		44	BUSHING	9-0017	1
3	DECAL - SILVER STICKER	N/A	1		45	LOCKWASHER	29-0006	4
4	LOCKNUT	30-0157	28		46	BOLT	27-0015	4
5	ISOLATION PLATE	5-0223	1		47	EDGING *(FOUR FEET REQUIRED)	33-0020	1
6	ISOLATOR	14-0177	4		48	BELTGUARD FRONT	6-0107	1
7	HANDLE	7-0183	1		49	DECAL - MADE IN USA	34-3553	1
8	BRACKET	20-1516A53	1		50	DECAL - NOZZLE (SEE 71-1037)	N/A	1
9	BOLT	27-0068	10		-	DECAL	N/A	1
10	AXLE	20-0864A18	1		51	DECAL - STRIPE (SEE 71-1037) (4200)	34-4256	1
11	LOCKNUT	30-0117	2		52	DECAL - Mi-T-M (3800)	34-2169	1
12	WHEEL	14-0150	2		53	GROMMET	33-0001	5
13	BOLT	27-0067	8		54	NOZZLE (3800)	18-0397	1
14	WASHER	28-0003	4		-	NOZZLE (3800)	18-0399	1
15	BASEPLATE	5-0222	1		-	NOZZLE (3800)	18-0400	1
16	BRACKET	56-0054	1		-	NOZZLE (3800)	18-0401	1
17	ISOLATOR	14-0008	2		-	NOZZLE (4200)	18-0392	1
18	KNOB	7-0269	1		-	NOZZLE (4200)	18-0393	1
19	LOCKWASHER	29-0110	1		-	NOZZLE (4200)	18-0395	1
20	BOLT	31-0048	1		-	NOZZLE (4200)	18-0396	1
21	BOLT	27-9524	7		55	DECAL - OPERATION (SEE 71-1037)	N/A	1
22	TIGHTENER BRACKET	21-0220	1		56	BOLT	27-8898	2
23	HANDLE	7-027501	1		57	BUSHING	9-0005	1
24	HOSSE ASSY	851-0338	1		58	SHEAVE	10-0074	1
25	HOSE	15-0209	1		59	BELT	11-0031	2
26	QUICK CONNECT SOCKET	17-0004	1		60	DECAL - BELTGUARD IN PLACE (SEE 71-1037)	N/A	1
27	O-RING	25-0123	1		61	DECAL - WARNING (SEE 71-1037)	N/A	1
28	QUICK CONNECT	17-0006	1		62	EDGING *(TWO FEET REQUIRED)	33-0020	1
29	BOLT	27-0576	1		63	BELTGUARD BACK	6-0106	1
30	WASHER	28-0023	9		64	KEY	43-0078	1
31	TIGHTENER BRACKET	21-0218	1		65	DECAL - RISK OF BURNS (SEE 71-1037)	N/A	1
32	BOLT	27-0066	2		66	DECAL - RISK OF FIRE (SEE 71-1037)	N/A	1
33	DECAL - GRAINGER 800# LARGE (SEE 71-1037)	N/A	1		67	ENGINE - HONDA	1-0086	1
34	WASHER	28-0022	4		-	ENGINE - MITM	1-0199	1
35	GUN ASSY	851-0371	1		68	DECAL - REWIND 420CC (MITM)	N/A	1
36	QUICK CONNECT	17-0074	1		69	BOLT	27-0121	4
37	GUN	16-0446	1		70	LOCKNUT	30-0159	4
38	WAND (INC GRIP & QC)	16-0439	1		71	PUMP	3-0308	1
39	GRIP	7-0002	1		72	PUMP KEY	43-0091	1
40	DECAL - RISK OF INJECTION (SEE 71-1037)	N/A	1		73	PLUG	23-0244	1
41	QUICK CONNECT	17-0001	1		74	RELIEF VALVE	22-0005	1
42	O-RING	25-0122	1		-	DECAL SET	71-1037	1

PUMP ASSEMBLY

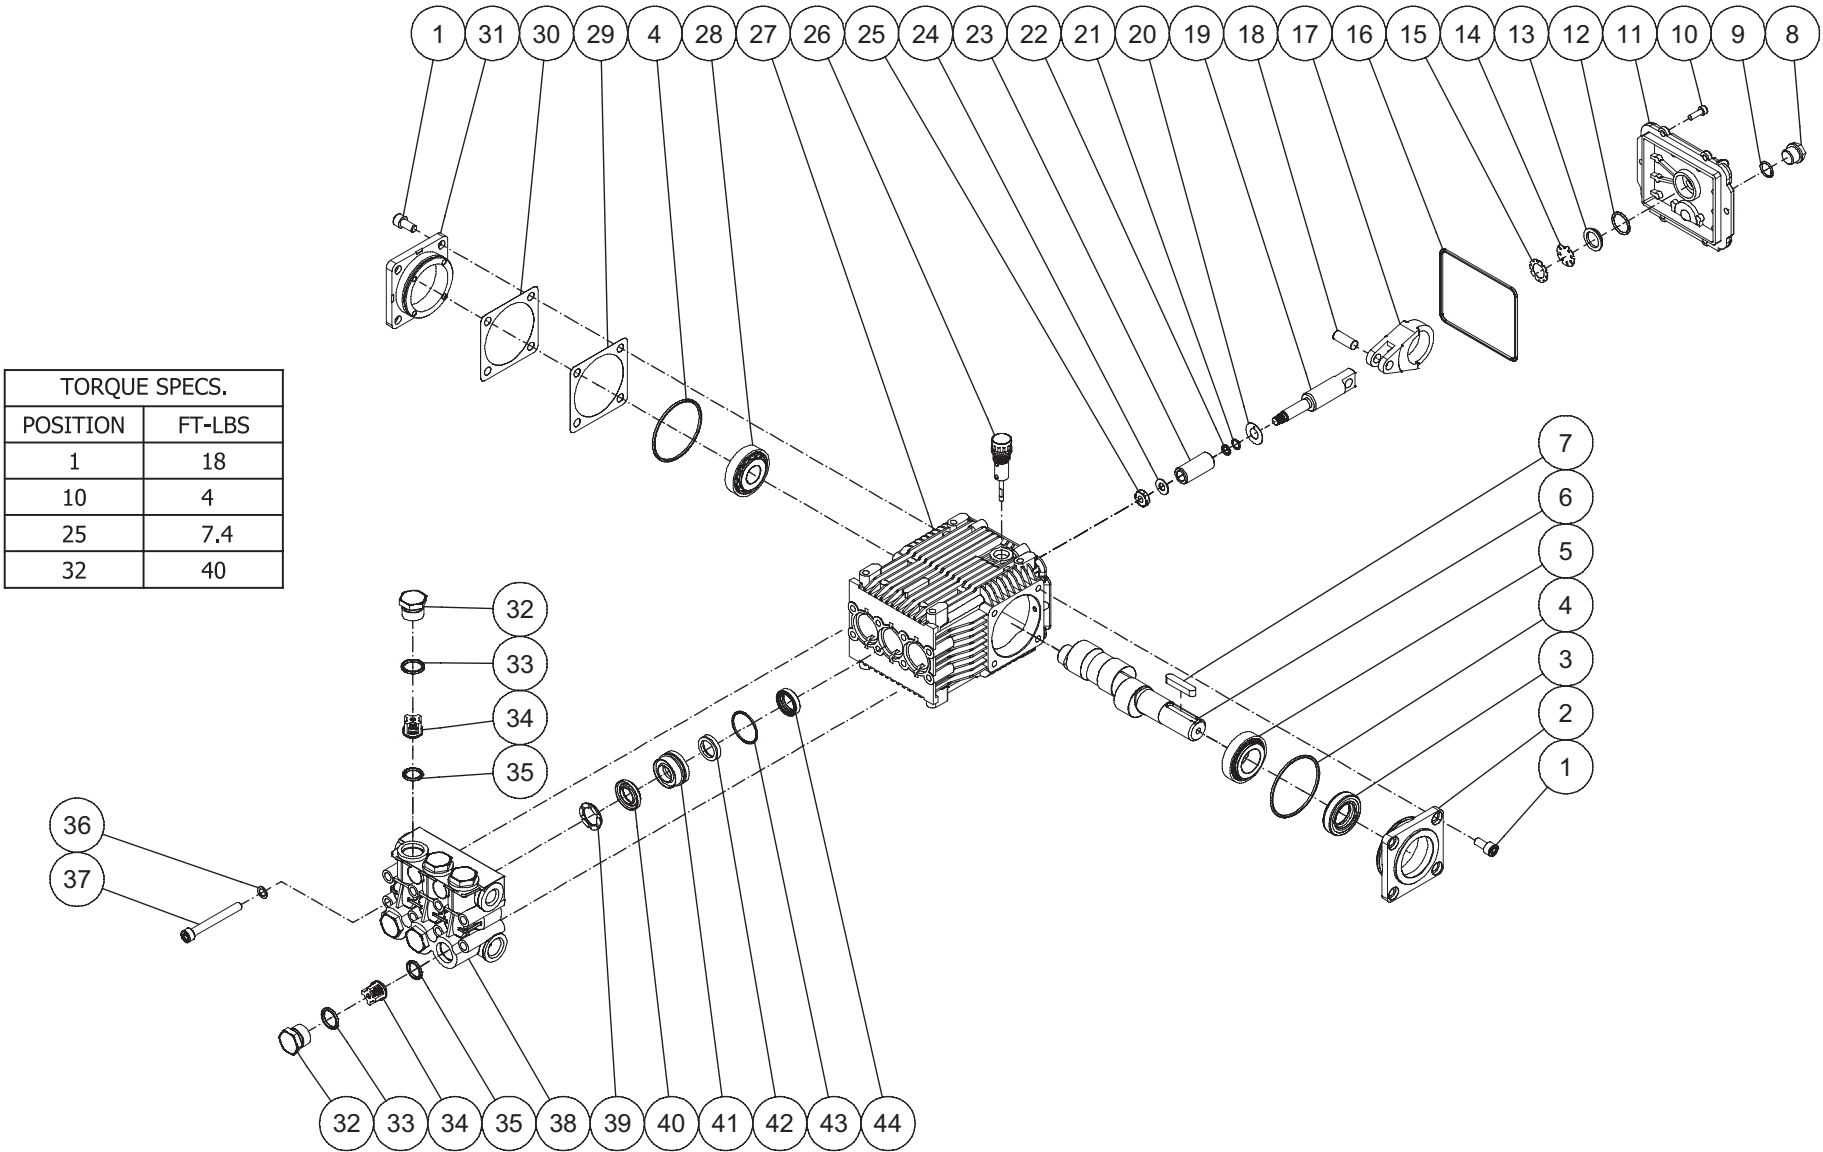


3-0308 061913

For parts Call 888-279-9274

3-0308 061913 JPS							
PUMP ASSEMBLY							
ITEM	DESCRIPTION	PART #	QTY		ITEM	DESCRIPTION	PART # QTY
1	BOLT	27-8884	8		24	WASHER/GASKET (SEE KIT 70-0352)	26-0191 3
2	SHAFT COVER	46-0691	1		25	NUT (SEE KIT 70-0352)	30-6020 3
3	OIL SEAL (SEE KIT 70-0321)	26-0188	1		26	OIL DIPSTICK	39-0090 1
4	O-RING (SEE KIT 70-0321)	25-0380	2		27	CRANKCASE	46-1198 1
5	ROLLER BEARING	48-0061	1		28	BEARING	48-0072 1
6	CRANKSHAFT	46-1103	1		29	SHIM	46-0705 1
7	PUMP KEY	43-0091	1		30	SHIM	46-0704 1
8	PLUG	39-0086	1		31	BEARING CAP/SUPPORT	46-0703 1
9	O-RING	25-0325	1		32	VALVE CAP	39-0095 6
10	BOLT	27-8885	6		33	O-RING	25-0160 6
11	CRANKCASE COVER	46-0719	1		34	VALVE ASSEMBLY (SEE KIT 70-0319)	46-0937 6
12	O-RING	25-0370	1		35	O-RING (SEE KIT 70-0319)	25-0386 6
13	OIL SIGHT GLASS	46-0670	1		35	O-RING	25-0386 6
14	OIL REFLECTOR	46-0824	1		36	LOCKWASHER	29-0154 8
15	SPRING RETAINER	46-0671	1		37	BOLT	27-8440 8
16	O-RING (SEE KIT 70-0321)	25-0398	1		38	MANIFOLD	46-1186 1
17	CONNECTING ROD	46-0896	3		39	SUPPROT RING (SEE KIT 70-0178)	46-0710 3
18	PISTON PIN	46-0698	3		40	V PACKING (SEE KIT 70-0177)	46-0709 3
19	PLUNGER ROD	46-0699	3		41	PACKING RETAINER	46-0708 3
20	SLINGER WASHER (SEE KIT 70-0352)	46-0700	3		42	LOW PRESSURE SEAL (SEE KIT 70-0177)	46-0707 3
21	O-RING (SEE KIT 70-0352)	25-0404	3		43	O-RING (SEE KIT 70-0177)	25-0384 3
22	O-RING (SEE KIT 70-0352)	25-0415	3		44	OIL SEAL (SEE KIT 70-0321)	46-0931 3
23	PISTON (SEE KIT 70-0352)	46-0701	3				

REPLACEMENT KITS				
KIT #	DESCRIPTION	ITEMS	# OF ASSEMBLIES	# OF CYLINDERS
70-0321	KIT - OIL SEALS	3, 4, 16, 44	1, 1, 1, 3	3
70-0352	KIT - PISTONS	20-25	3	3
70-0177	KIT - HIGH PRESSURE SEALS	40, 42, 43	3	3
70-0178	KIT - SUPPORT RINGS	39	3	3
70-0319	KIT - VALVES	34, 35	6	3

UNLOADER ASSEMBLY

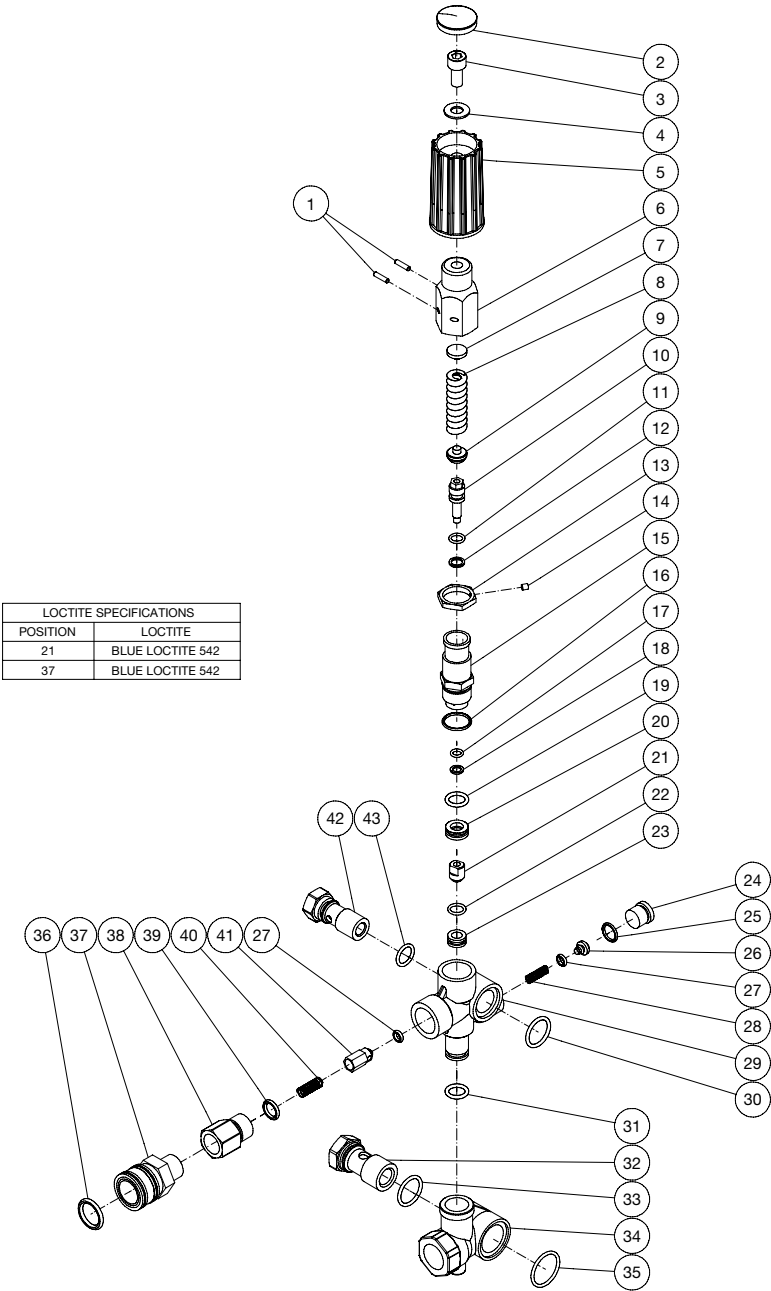

8-0631 080520

8-0631 080520 CH			
UNLOADER ASSEMBLY			
ITEM	DESCRIPTION	PART #	QTY
1	SECURING PIN (SEE 70-0659)	46-1602	2
2	KNOB (SEE 70-0659)	7-0260	1
3	BOLT (SEE 70-0659)	27-8431	1
4	WASHER (SEE 70-0659)	28-0003	1
5	CAP (SEE 70-0659)	7-0259	1
6	KNOB (SEE 70-0659)	SEE KIT	1
7	SPRING SEAT (SEE 70-0659)	SEE KIT	1
8	SPRING (SEE 70-0659)	SEE KIT	1
9	SPRING SEAT (SEE 70-0659)	SEE KIT	1
10	VALVE ROD (SEE 70-0659)	SEE KIT	1
11	O-RING (SEE 70-0659)	25-0651	1
12	SUPPORT RING (SEE 70-0659)	SEE KIT	1
13	JAM NUT (SEE 70-0659)	SEE KIT	1
14	SET SCREW (SEE 70-0659)	8-0479	1
15	UNLOADER VALVE BODY (SEE 70-0659)	SEE KIT	1
16	O-RING (SEE 70-0659)	25-0652	1
17	O-RING (SEE 70-0659)	25-0163	1
18	SUPPORT RING (SEE 70-0659)	SEE KIT	1
19	O-RING (SEE 70-0659)	25-0655	1
20	BY PASS JET UNLOADER (SEE 70-0659)	SEE KIT	1
21	BULLET (SEE 70-0659)	SEE KIT	1
22	O-RING (SEE 70-0659)	25-0656	1
23	VALVE SEAT (SEE 70-0659)	SEE KIT	1
24	PLUG (SEE 70-0658)	39-0379	1
25	O-RING (SEE 70-0658)	25-0691	1
26	SPRING BASE (SEE 70-0658)	46-1603	1
27	O-RING (SEE 70-0658 AND SEE 70-0500)	25-0690	2
28	SPRING (SEE 70-0658)	46-1604	1
29	VALVE HOUSING	46-1619	1
30	O-RING	25-0664	1
31	O-RING	25-0684	1
32	INLET BANJO BOLT	8-0595	1
33	O-RING	25-0602	1
34	BY PASS HOUSING	46-1620	1
35	O-RING	25-0654	1
36	O-RING	25-0123	1
37	QUICK CONNECT SOCKET	17-0007	1
38	OUTLET CONNECTOR	46-1389	1
39	O-RING	25-0663	1
40	SPRING (SEE 70-0500)	SEE KIT	1
41	CHECKING VALVE (SEE 70-0500)	SEE KIT	1
42	OUTLET BANJO BOLT	8-0594	1
43	O-RING	25-0169	1

KIT #	DESCRIPTION	ITEMS	# OF ASSEMBLIES
70-0500	KIT - NON-RETURN VALVES	40-41, 27	1
70-0658	KIT - EZ START	24-28	1
70-0659	KIT - UNLOADER REBUILD	1-23	1

For parts Call 888-279-9274

Manufactured by Mi-T-M
50 MI-T-M Drive, Peosta IA 52068
563-556-7484/ Fax 563-556-1235