



For parts Call 888-279-9274

EX-9377-102312

This Parts Listing has been compiled for your benefit. You can be assured your Cold Water Pressure Washer was constructed and designed with quality and performance in mind. Each component has been rigorously tested to insure the highest level of acceptance.

The contents of this Parts Listing are based on the latest product information available at the time of publication. Manufacturer reserves the right to make changes in price, color, materials, equipment, specifications or models at any time without notice.

WARNING

THIS IS A PROFESSIONAL HIGH PRESSURE, COLD WATER PRESSURE WASHER. CAUTION SHOULD BE OBSERVED WHEN USING OR REPAIRING THIS UNIT! READ AND FOLLOW THE SAFETY WARNINGS LISTED BELOW BEFORE ATTEMPTING ANY REPAIRS ON THIS PRESSURE WASHER!

SAFETY WARNINGS

- 1. NEVER alter or modify the equipment. Be sure any accessory items and system components being used will withstand the pressure developed. Use only genuine manufacturer parts for repair of your pressure washer. Failure to do so can cause hazardous operating conditions and will VOID warranty.
- 2. NEVER make adjustments on machinery while the unit is connected to the engine without first removing the ignition cable from the spark plug. Turning over the machinery by hand during adjustment or cleaning might start the engine and machinery with it, causing serious injury to the operator.
- 3. Know how to stop and bleed pressures quickly. Be thoroughly familiar with controls.
- 4. Before servicing the unit, turn unit off, relieve the water pressure and allow the unit to cool down. Do not make repairs while the unit is running. Service in a clean, dry, flat area. Block the wheels to prevent the unit from moving. Be especially careful to properly dispose of any flammable materials.
- 5. After testing the machine, DO NOT leave the pressurized unit unattended. Shut off the unit and release trapped pressure before leaving.

Table of Contents

SPECIFICATIONS3

FRAME ASSEMBLY FOR GC-3003-0MRB / 0MHB.....4


PUMP ASSEMBLY (3-0147).....6

UNLOADER ASSEMBLY (8-0456)8

SPECIFICATIONS

MODEL NUMBER	GC-3003-0MRB	GC-3003-0MHB
Operating Pressure (PSI/Bar):	3000/206.8	
High Pressure Nozzle:	3.5	
Water Volume (GPM/lpm):	3.0/11	
Engine:	Subaru	Honda
Horsepower	270 cc	
Engine Type	4 Stroke, Overhead Valve, Single Cylinder	
Oil Type	SAE 10W-30 (Grainger Item #4F743)	
Oil Capacity (oz./liters)	37/1.1	40.6/1.2
Low Oil Protection	Oil Sensor	
Fuel Type	Unleaded Gasoline 86 Octane Minimum	
Fuel Capacity (gallon/ liters)	1.6/6.0	
Starting	Recoil	
Maximum No Load RPM	3600 (+/- 100) RPM	
Pump:	Direct Driven, Oil Bath, Triplex Piston	
Oil Type	SAE30W Non-Detergent (Grainger Item #4ZF21)	
Oil Capacity (oz./liters)	14/.4	
Plungers	Ceramic	
Manifold	Forged Brass	
Valves	Stainless Steel	
Unloader	Adjustable	
Thermal Relief Valve	Relieves heated water during unloader bypass stage	
Detergent Injector	Adjustable low pressure down stream from pump	
Unit Net Weight (lbs/Kg)	129/58.5	
Unit Shipping Weight (lbs/Kg)	169/76.7	
Unit Net Dimension (in/cm)	34Lx23.5Wx25.5H/86Lx59.5Wx64.5H	
Unit Shipping Dimension (in/cm)	41Hx26Wx33H/104Lx66Wx84H	


FRAME ASSEMBLY FOR GC-3003-0MRB / 0MHB

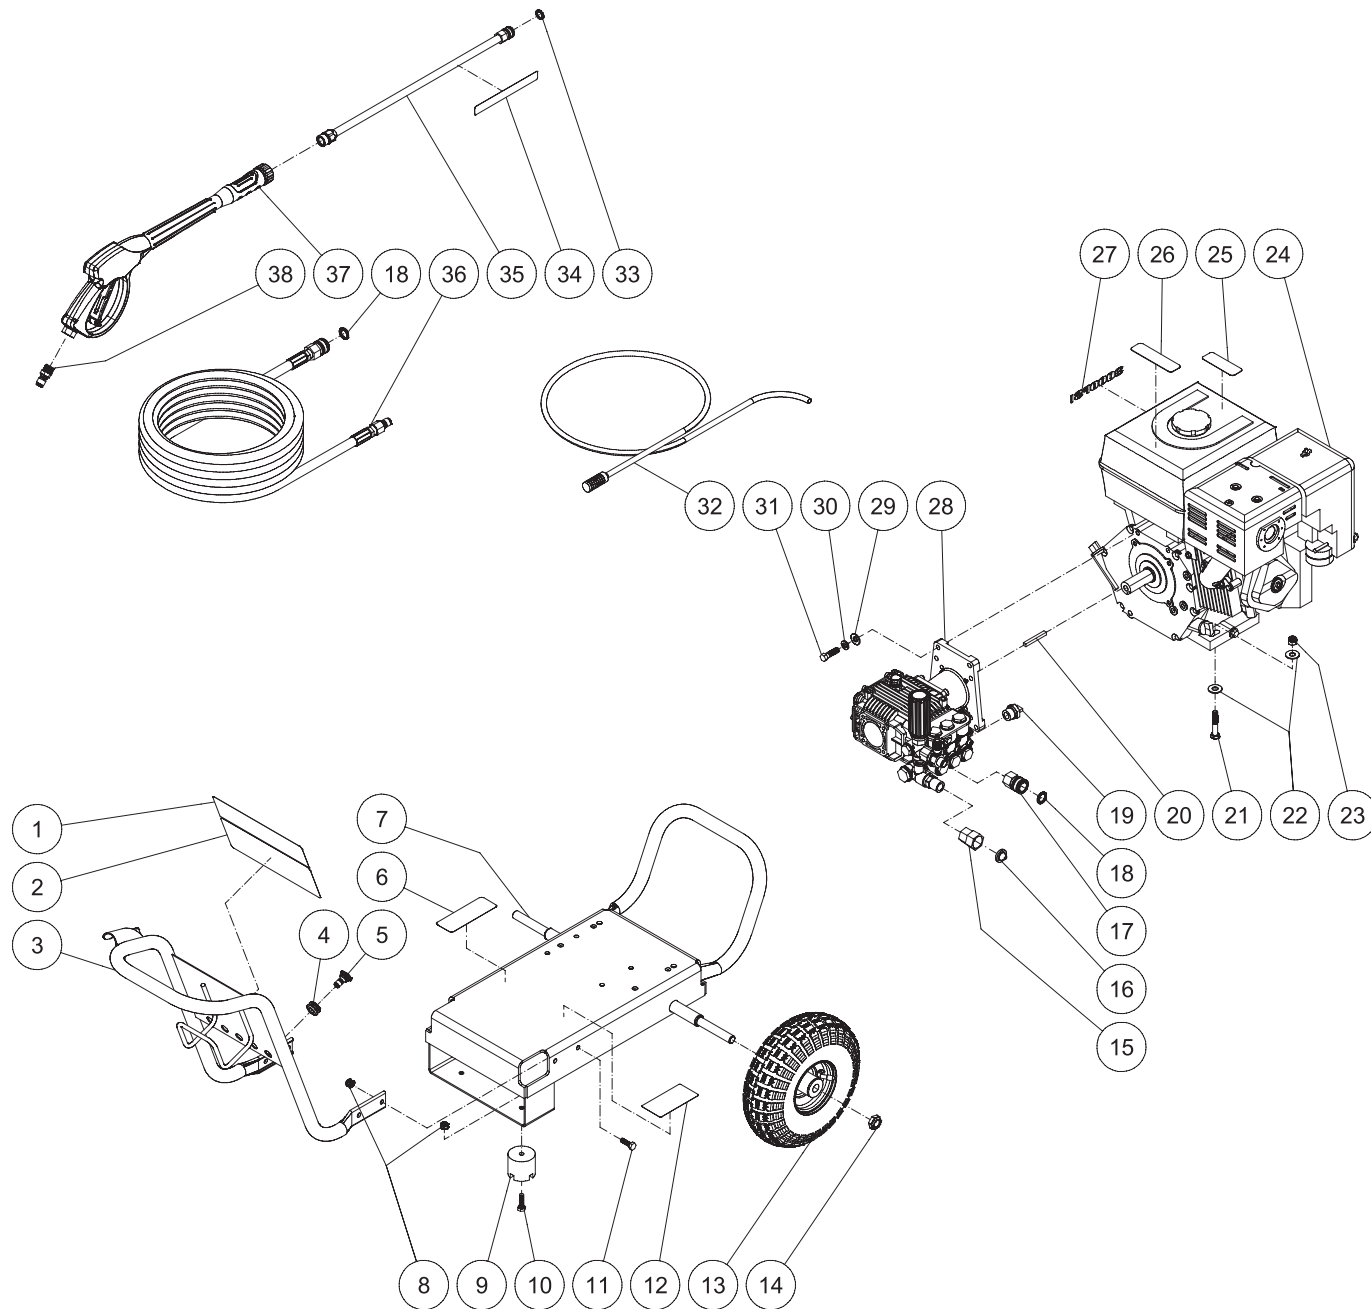

For parts Call 888-279-9274

GC-3003-0MHB_RB							
FRAME ASSEMBLY							
ITEM	DESCRIPTION	Mi-T-M #	QTY		ITEM	DESCRIPTION	Mi-T-M # QTY
1	DECAL - MI-T-M PLACARD	34-2150	1		20	KEY	43-0078 1
2	DECAL - WARNING/CAUTION/OPERATION (SEE 71-0065)	N/A	1		21	BOLT	27-0121 4
3	HANDLE	7-0194A01	1		22	WASHER	28-0023 8
4	GROMMET	33-0001	5		23	LOCKNUT	30-0159 4
5	NOZZLE	18-0392	1		24	ENGINE - HONDA (0MHB)	1-0162 1
-	NOZZLE	18-0386	1		-	ENGINE - SUBARU (0MRB)	1-0134 1
-	NOZZLE	18-0393	1		25	DECAL - RISK OF FIRE (SEE 71-0065)	N/A 1
-	NOZZLE	18-0395	1		26	DECAL - RISK OF BURNS (SEE 71-0065)	N/A 1
6	DECAL - GRAINGER 800# LARGE (SEE 71-0065)	N/A	1		27	DECAL- DIE CUT 3000 PSI	34-2214 1
7	FRAME	5-0254A01	1		28	PUMP	3-0147 1
8	LOCKNUT	30-0157	6		29	WASHER	28-0022 4
9	ISOLATOR	14-0008	2		30	LOCKWASHER	29-0008 4
10	BOLT	27-0068	2		31	BOLT	27-0118 4
11	BOLT	27-0067	4		32	DETERGENT HOSE	19-0233 1
12	DECAL- SILVER STICKER	N/A	1		33	O-RING	25-0122 1
13	WHEEL	14-0113	2		34	DECAL - RISK OF INJECTION (SEE 71-0065)	N/A 1
14	LOCKNUT	30-0117	2		35	LANCE ASSEMBLY	16-0366 1
15	SWIVEL	23-0001	1		36	HOSE ASSEMBLY	15-0270 1
16	FILTER	19-0001	1		37	GUN & WAND - 4000 PSI	16-0441 1
17	QC SOCKET	17-0004	1		38	QUICK CONNECT	17-0074 1
18	O-RING	25-0123	2		-	DECAL SET	71-0065 1
19	RELIEF VALVE	22-0005	1				

PUMP ASSEMBLY (3-0147)

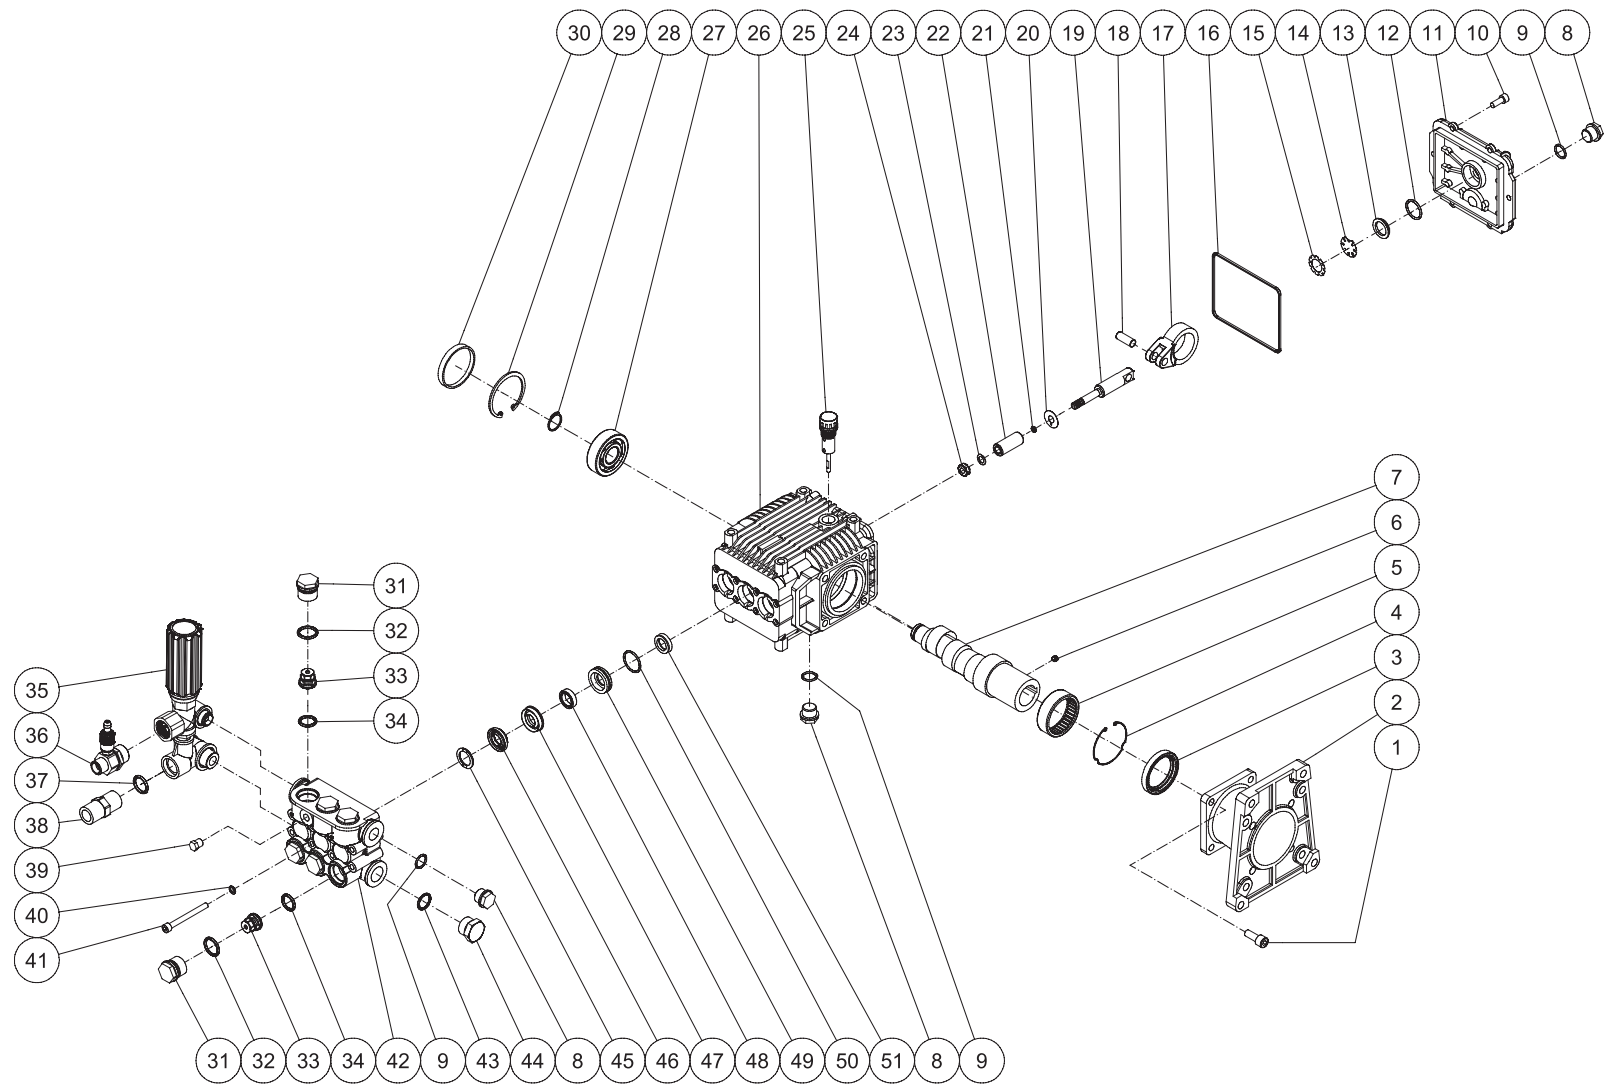


3-0147-042612-MLK

For parts Call 888-279-9274

3-0147 042612 MLK							
PUMP ASSEMBLY							
ITEM	DESCRIPTION	Mi-T-M #	QTY		ITEM	DESCRIPTION	Mi-T-M # QTY
1	SCREW	27-8432	4		29	SNAP RING	46-0676 1
2	PUMP FLANGE	46-0714	1		30	BEARING CAP	46-0725 1
3	OIL SEAL	26-0192	1		31	VALVE CAP	39-0087 6
4	RETAINING RING	46-0667	1		32	O-RING	25-0160 6
5	BEARING - NEEDLE	48-0059	1		33	SINGLE VALVE ASSEMBLY - BLACK	- 6
6	BOLT	27-8886	1		34	O-RING	25-0386 6
7	CRANKSHAFT	46-0717	1		35	UNLOADER	8-0456 1
8	PLUG	39-0086	3		36	KIT - DETERGENT INJECTOR	70-0196 1
9	O-RING	25-0325	3		37	O-RING	25-0602 1
10	BOLT	27-8888	6		38	NIPPLE	23-0012 1
11	CRANKCASE COVER	46-0719	1		39	PLUG	39-0097 1
12	O-RING	25-0370	1		40	LOCKWASHER	29-0153 8
13	OIL SIGHT GLASS	46-0670	1		41	BOLT	27-8875 8
14	OIL REFLECTOR	46-0824	1		42	MANIFOLD	46-0730 1
15	SPRING RETAINER	46-0671	1		43	O-RING	25-0372 1
16	O-RING	25-0398	1		44	PLUG	39-0088 1
17	CONNECTING ROD	46-0720	3		45	SUPPORT RING	- 3
18	PISTON PIN	46-0721	3		46	V PACKING	46-0729 3
19	PLUNGER ROD	46-0722	3		47	PACKING RETAINER	46-0728 3
20	SLINGER WASHER	28-1027	3		48	LOW PRESSURE SEAL	46-0727 3
21	O-RING	25-0371	3		49	RETAINER	46-0726 3
22	PISTON - CERAMIC	46-0723	3		50	O-RING	25-0399 3
23	WASHER/GASKET - O.D.	26-0187	3		51	OIL SEAL	26-0193 3
24	NUT	30-6016	3			OIL SEAL KIT -INC. 3, 16, 30, 51 (3)	-
25	OIL DIPSTICK	39-0090	1			PISTONS KIT -INC. 20-24 (3)	-
26	PUMP CRANKCASE	46-0724	1			HIGH PRESSURE SEALS KIT -INC. 46 (3), 48 (3), 50 (3)	70-0181
27	BALL BEARING	48-0063	1			SUPPORT RINGS KIT -INC. 45 (3)	70-0182
28	SNAP RING	46-0732	1			VALVES KIT -INC. 33 (6), 34 (6)	70-0161
KITS CONTAINS QTY (1) UNLESS OTHERWISIE NOTED							

UNLOADER ASSEMBLY (8-0456)

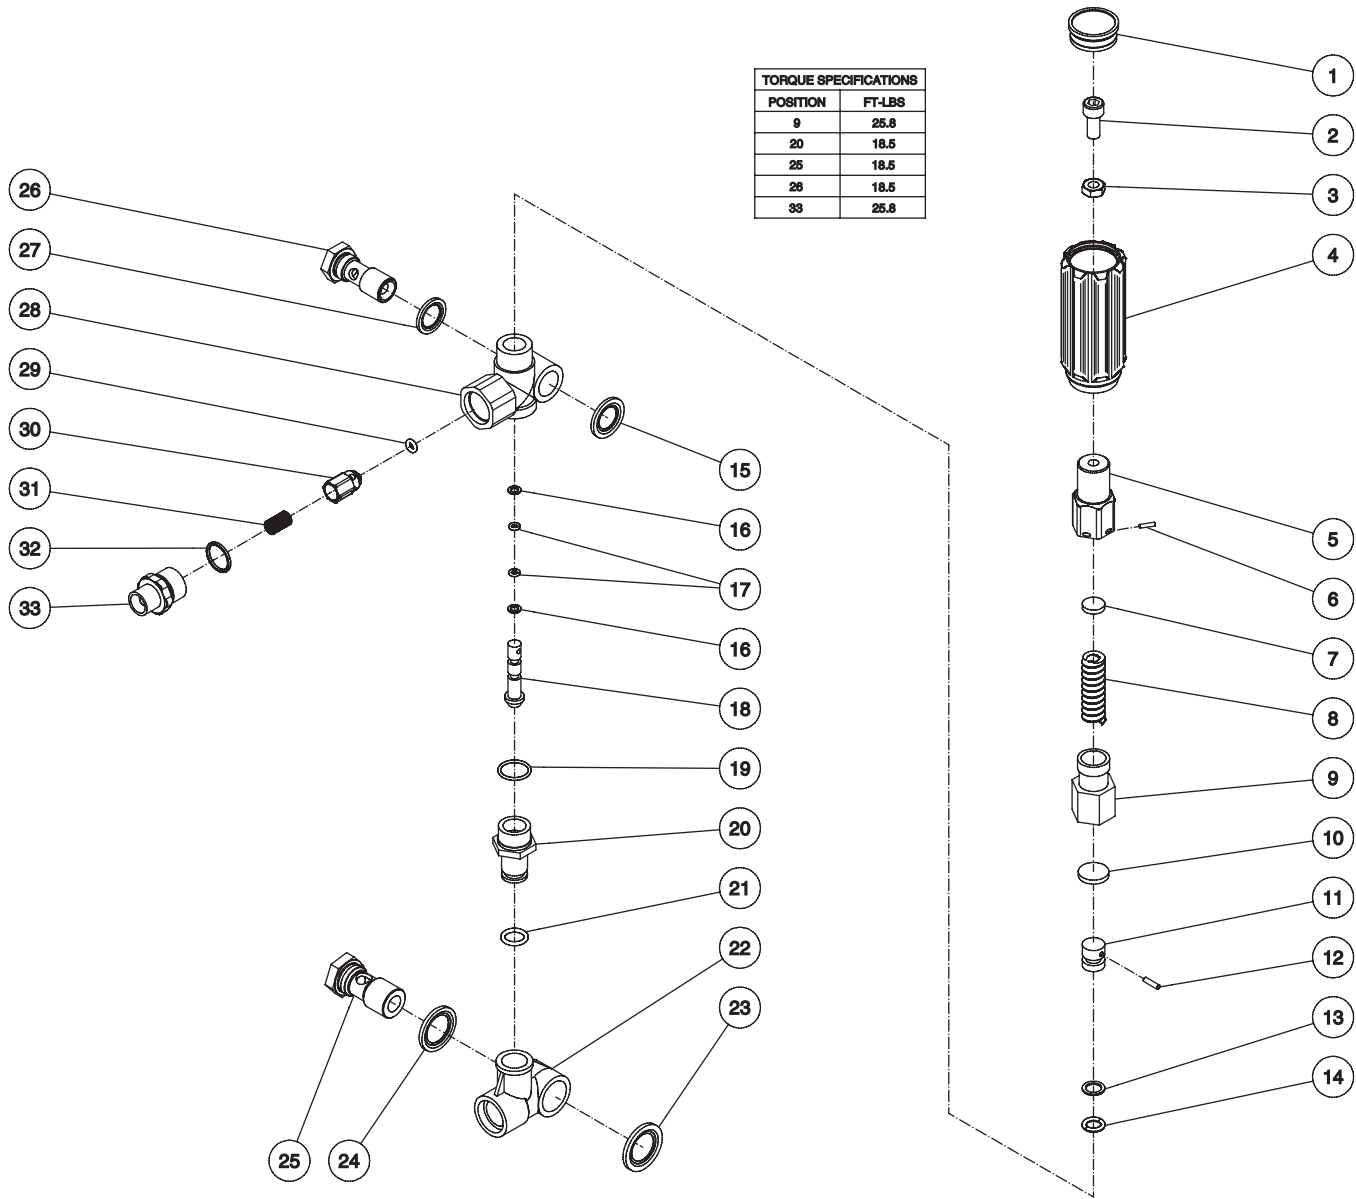

8-0456-102004-JJF

UNLOADER ASSEMBLY (8-0456)

REF. #	DESCRIPTION	PART #	QTY.	REF. #	DESCRIPTION	PART #	QTY.
1	Unloader Cap	7-0142	1	18	Piston	8-0442	1
2	Bolt	27-8433	1	19	O-ring	25-0389	1
3	Nut	30-3025	1	20	Nipple	8-0441	1
4	Unloader Knob	7-0141	1	21	O-ring	25-0388	1
5	Adjustment Barrel	8-0476	1	22	Inlet Bypass Adapter	8-0437	1
6	Pin	8-0477	1	23	Washer	8-0439	1
7	Spring Button	8-0475	1	24	Washer	8-0440	1
8	Spring	49-0132	1	25	Adapter	8-0438	1
9	Spring Guide	8-0474	1	26	Adapter	8-0448	1
10	Spring Button	8-0445	1	27	Washer	8-0449	1
11	Poppet	8-0443	1	28	Unloader Body	8-0451	1
12	Pin	8-0444	1	29	O-ring	25-0391	1
13	Back-up Ring	25-0396	1	30	Check Valve	8-0454	1
14	O-ring	25-0390	1	31	Check Valve Spring	49-0123	1
15	Washer	8-0450	1	32	O-ring	25-0372	1
16	Back-up Ring	25-0395	2	33	Adapter Nipple	24-0159	1
17	O-ring	25-0371	2		Unloader Repair Kit (Inc. 13, 14, 16, 17, 19, 21, 29)	70-0180	

For parts Call 888-279-9274

Manufactured by Mi-T-M
8650 Enterprise Drive, Peosta IA 52068
563-556-7484/ Fax 563-556-1235