



TECHNICAL PARTS LIST FOR
GP-4000-4MRB
(GRAINGER ITEM #1TDJ6)

MANUFACTURED FOR W.W. GRAINGER INC.
FOR REPLACEMENT PARTS CALL 888-279-9274

ENGINE OIL GRADE:
SUBARU:

SAE10W-30 (GRAINGER ITEM #4F743)

ENGINE OIL CAPACITY:
PUMP OIL GRADE:
PUMP OIL CAPACITY:
NOZZLE SIZE:

40.5 oz.
SAE30W Non-Detergent (Grainger Item #4ZF21)
13.4 oz.
3.5

This Parts Listing has been compiled for your benefit. You can be assured your Mi-T-M Cold Water Pressure Washer was constructed and designed with quality and performance in mind using over 25 years experience in the pressure washer business. Each component has been rigorously tested to ensure the highest level of acceptance.

The contents of this Parts Listing are based on the latest product information available at the time of publication. Mi-T-M reserves the right to make changes in price, color, materials, equipment, specifications or models at any time without notice.

WARNING

THIS IS A HIGH PRESSURE, COLD WATER PRESSURE WASHER. CAUTION SHOULD BE OBSERVED WHEN USING OR REPAIRING THIS UNIT! READ AND FOLLOW THE SAFETY WARNINGS LISTED BELOW BEFORE ATTEMPTING ANY REPAIRS ON THIS PRESSURE WASHER!

SAFETY WARNINGS

- 1. NEVER alter or modify the equipment. Be sure any accessory items and system components being used will withstand the pressure developed. Use only genuine Mi-T-M parts for repair of your pressure washer. Failure to do so can cause hazardous operating conditions and will VOID warranty.
- 2. NEVER make adjustments on machinery while the unit is connected to the engine without first removing the ignition cable from the spark plug. Turning over the machinery by hand during adjustment or cleaning might start the engine and machinery with it, causing serious injury to the operator.
- 3. Know how to stop and bleed pressures quickly. Be thoroughly familiar with controls.
- 4. Before servicing the unit, turn unit off, relieve the water pressure and allow the unit to cool down. Do not make repairs while the unit is running. Service in a clean, dry, flat area. Be especially careful to properly dispose of any flammable materials.
- 5. After testing the machine, DO NOT leave the pressurized unit unattended. Shut off the unit and release trapped pressure before leaving.

Table of Contents

SPECIFICATIONS.....3

NOTES4

FRAME ASSEMBLY GP-4000-4MRB (BEFORE SERIAL #10670866).....6

FRAME ASSEMBLY GP-4000-4MRB (AFTER SERIAL #10670866).....8

FRAME ASSEMBLY GP-4000-4MRB (AFTER SERIAL #10751893).....10

PUMP ASSEMBLY (3-0288)12

PUMP ASSEMBLY (3-0386)14

PUMP ASSEMBLY (3-0391)16

UNLOADER ASSEMBLY (8-0632)18

SPECIFICATIONS


MODEL NUMBER	GP-4000-4MRB
Operating Pressure (PSI/Bar):	4000/276
High Pressure Nozzle:	3.5
Water Volume (GPM/lpm):	3.4/12.9
Engine:	Subaru
Model	EX40
Engine Type	4 Stroke, Overhead Valve, Single Cylinder
Oil Type	SAE10W-30
Oil Capacity (oz./liters)	40.5/1.2
Fuel Type	Unleaded Gasoline 86 Octane Minimum
Low Oil Protection	Oil Sensor
Fuel Capacity (gallon/ liters)	1.85/7.0
Starting	Recoil
Maximum No Load RPM	3600 (+/- 100) RPM
Pump:	Direct Driven, Oil Bath, Triplex Piston
Oil Type	SAE30W Non-Detergent (Grainger Item #4ZF21)
Oil Capacity (oz./liters)	13.4 / 0.4
Plungers	Ceramic
Manifold	Forged Brass
Valves	Stainless Steel
Unloader	Preset
Heat Dump Valve	Relieves heated water during unloader bypass stage
Detergent Injector	Low pressure down stream from pump
Unit Net Weight (lbs/Kg)	142/64.4
Unit Shipping Weight (lbs/Kg)	192/87.1
Unit Net Dimension (in/cm)	40Lx22.5Wx24.5H/101.6Lx57.2Wx62.3H
Unit Shipping Dimension (in/cm)	39.25Lx25Wx29.5H/99.69Lx63.5Wx74.9H

NOTES

DATE	SERIAL NUMBER BREAK	REASON
3/25/13	#10670866	Pump change; 3-0288 replaced with 3-0386.
9/19/13	#10751893	Pump change; 3-0386 replaced with 3-0391. Added Unloader 8-0632.

NOTES

FRAME ASSEMBLY GP-4000-4MRB (BEFORE SERIAL #10670866)

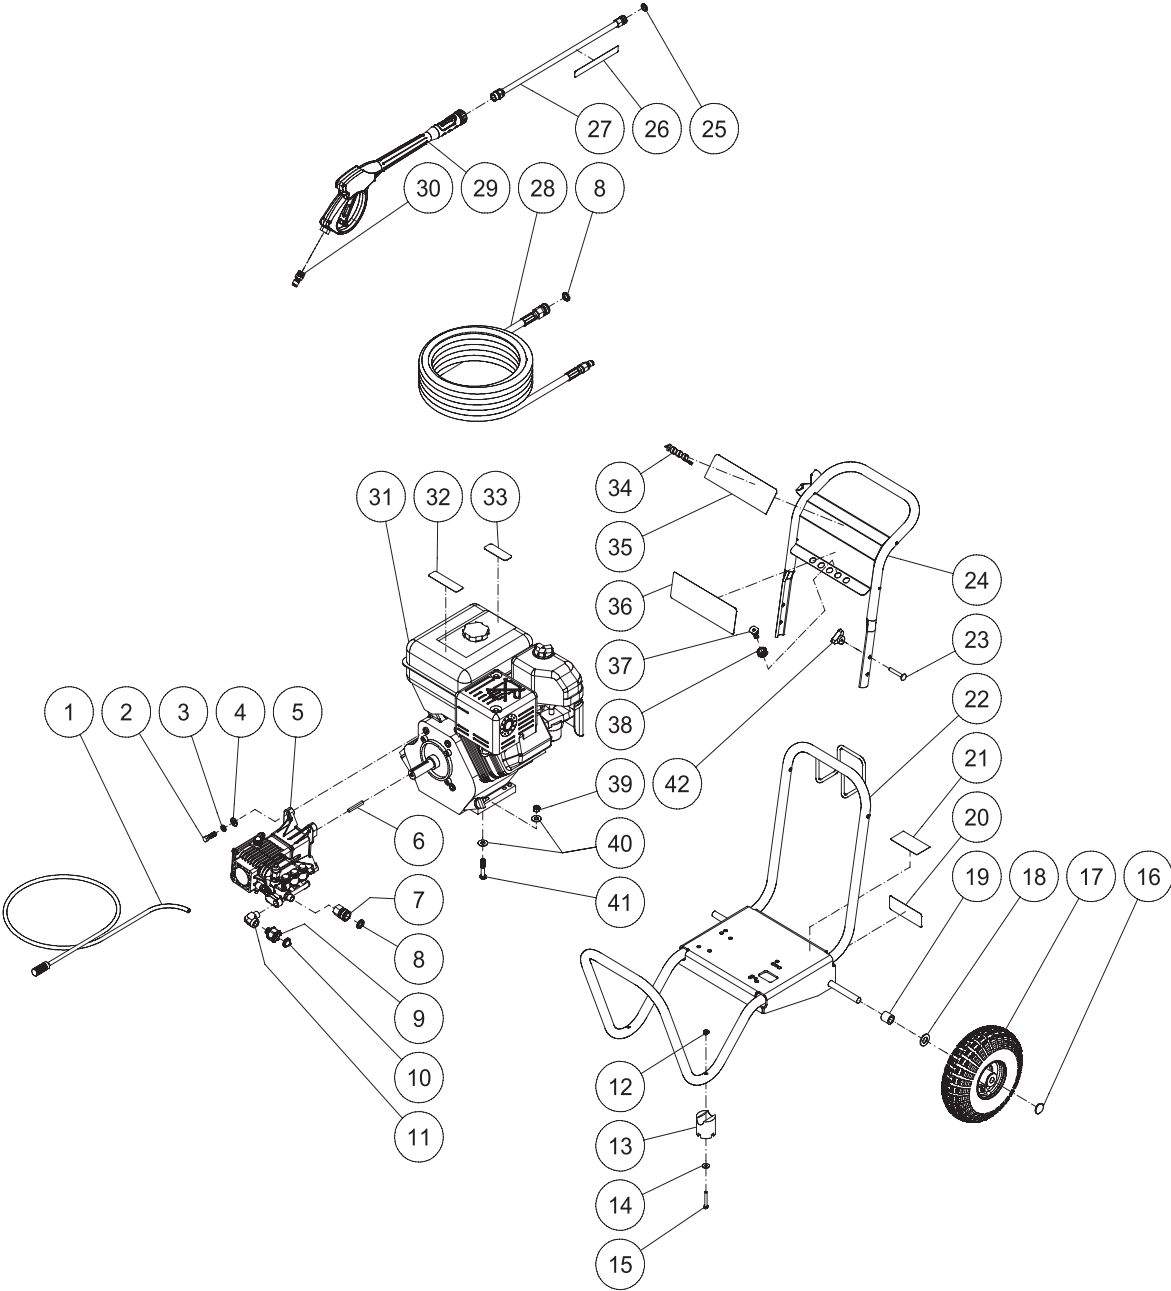


GP-4000-4MRB-041707 RSW

For parts Call 888-279-9274

GP-4000-4MRB-041707-RSW								
FRAME ASSEMBLY FOR GP-4000-4MRB								
REF. #	DESCRIPTION	PART #	QTY.		REF. #	DESCRIPTION	PART #	QTY.
1	Detergent Hose	19-0233	1		24	Handle Assy	7-0159A20	1
2	Bolt	27-0118	4		25	O-ring (Replacement Only)	25-0122	-
3	Lockwasher	29-0008	4		26	Decal- Warning: Risk of Injection (See 34-9005)	N/A Sep.	1
4	Washer	28-0022	4		27	Lance Assembly	16-0366	1
5	Pump	3-0288	1		28	Pressure Hose	15-0270	1
6	Key	43-0078	1		29	Gun/Wand Assembly	16-0441	1
7	Quick Connect	17-0004	1		30	Quick Connect	17-0005	1
8	O-ring (Replacement Only)	25-0123	2		31	Engine- EX40	1-0176	1
9	Garden Hose Swivel	23-0096	1		32	Decal- Warning: Muffler Hot (See 34-9005)	N/A Sep.	1
10	Filter	19-0001	1		33	Decal- Caution: Risk of Fire(See 34-9005)	N/A Sep.	1
11	Elbow	24-0105	1		34	Decal- Die Cut 4000	34-1400	1
12	Locknut	30-0155	2		35	Decal- Chore Master Placard	34-1442	1
13	Isolator	14-0066	2		36	Decal- Warning/Caution/Operation (See 34-9005)	N/A Sep.	1
14	Flatwasher	28-0021	2		37	Nozzle- 15035	18-0258	1
15	Bolt	27-0019	2		-	Nozzle- 25035	18-0259	1
16	Cap	33-0018	2		-	Nozzle- 6540	18-0148	1
17	Wheel	14-0113	2		38	Grommet	33-0001	5
18	Washer	28-0008	2		39	Locknut	30-0159	4
19	Spacer	62-0188	2		40	Flatwasher	28-0023	8
20	Decal- Grainger 800#	34-1444	1		41	Bolt	27-0121	4
21	Decal- Data Plate	N/A	1		42	Knob	7-0107	2
22	Large Frame	5-0149A20	1			Safety Decal Kit (Inc. 26, 32-33, 36)	34-9005	
23	Carriage Bolt	31-0051	2		*Must Order in One Foot Lengths			


FRAME ASSEMBLY GP-4000-4MRB (AFTER SERIAL #10670866)

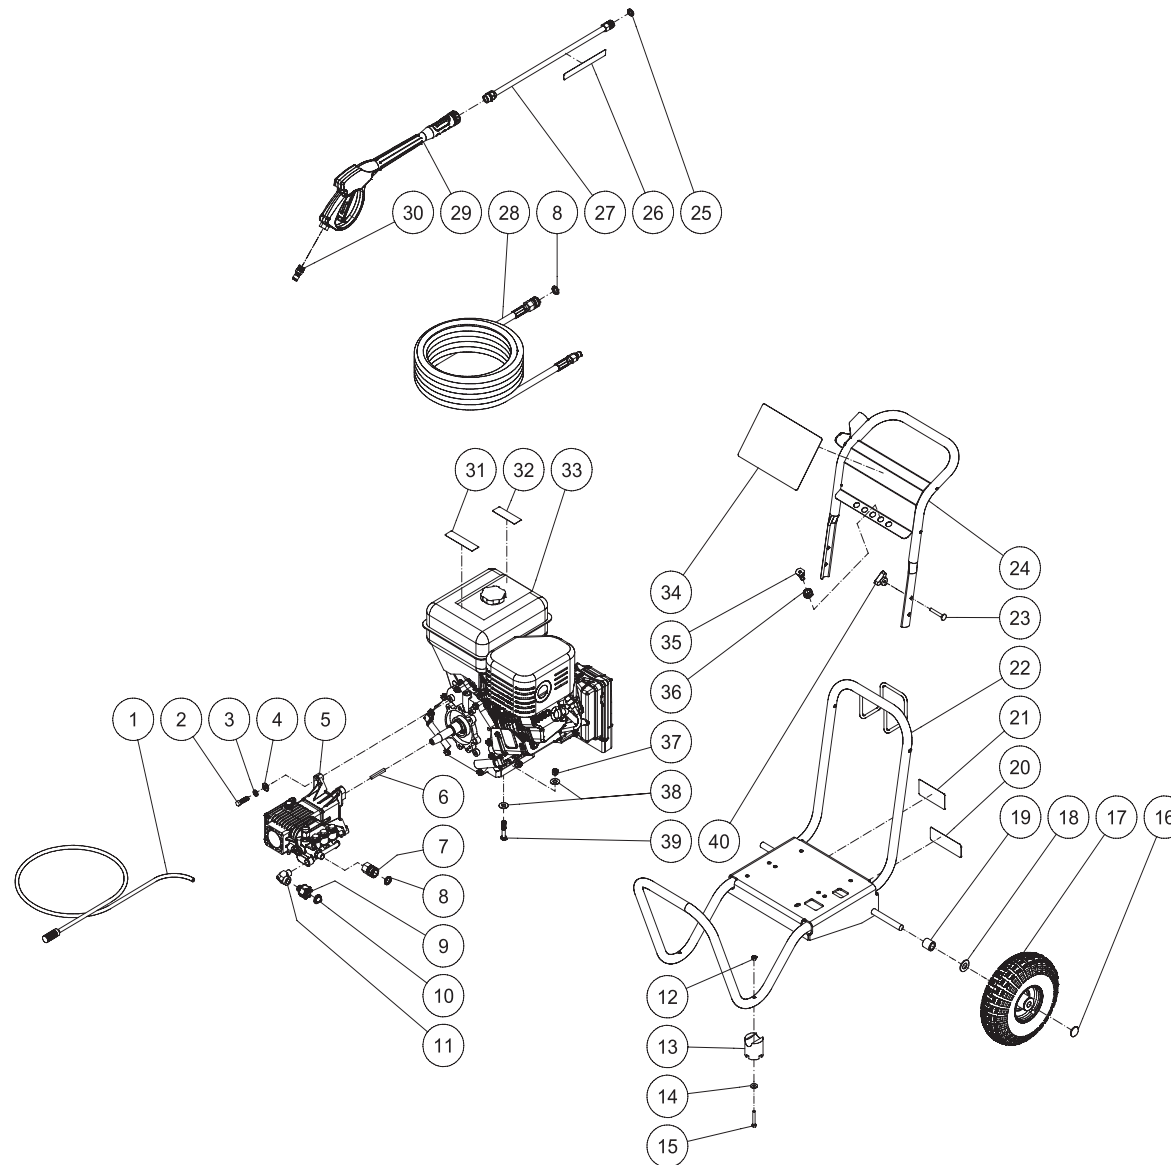

For parts Call 888-279-9274

GP-4000-4MRB 041613 RJA							
FRAME ASSEMBLY							
ITEM	DESCRIPTION	Mi-T-M #	QTY	ITEM	DESCRIPTION	Mi-T-M #	QTY
1	DETERGENT HOSE	19-0233	1	23	BOLT	31-0051	2
2	BOLT	27-0118	4	24	HANDLE ASSEMBLY	7-0159A20	1
3	LOCKWASHER	29-0008	4	25	O-RING	25-0122	1
4	WASHER	28-0022	4	26	DECAL - RISK OF INJECTION (SEE 71-1027)	N/A	1
5	PUMP	3-0386	1	27	LANCE ASSEMBLY	16-0366	1
6	KEY	43-0078	1	28	HOSE ASSEMBLY	15-0270	1
7	QC SOCKET	17-0004	1	29	GUN & WAND - 4000 PSI	16-0441	1
8	O-RING	25-0123	2	30	QUICK CONNECT	17-0074	1
9	SWIVEL GARDEN HOSE	23-0096	1	31	DECAL - RISK OF BURNS (SEE 71-1027)	N/A	1
10	FILTER	19-0001	1	32	DECAL - RISK OF FIRE (SEE 71-1027)	N/A	1
11	ELBOW	24-0105	1	33	ENGINE-ROBIN	1-0176	1
12	LOCKNUT	30-0155	2	34	DECAL-CM 4000 PSI W/WARNING (SEE 71-1027)	N/A	1
13	ISOLATOR	14-0066	2	35	NOZZLE	18-0393	1
14	WASHER	28-0021	2	-	NOZZLE	18-0395	1
15	BOLT	27-0019	2	-	NOZZLE	18-0386	1
16	CAP	33-0018	2	36	GROMMET	33-0001	5
17	WHEEL	14-0113	2	37	LOCKNUT	30-0159	4
18	WASHER	28-0008	2	38	WASHER	28-0023	8
19	SPACER	62-0188	2	39	BOLT	27-0121	4
20	DECAL - GRAINGER 800# LARGE (SEE 71-1027)	N/A	1	40	KNOB	7-0107	2
21	DECAL- SILVER STICKER	N/A	1	-	DECAL SET	71-1027	1
22	FRAME ASSEMBLY	5-0149A20	1				

FRAME ASSEMBLY GP-4000-4MRB (AFTER SERIAL #10751893)

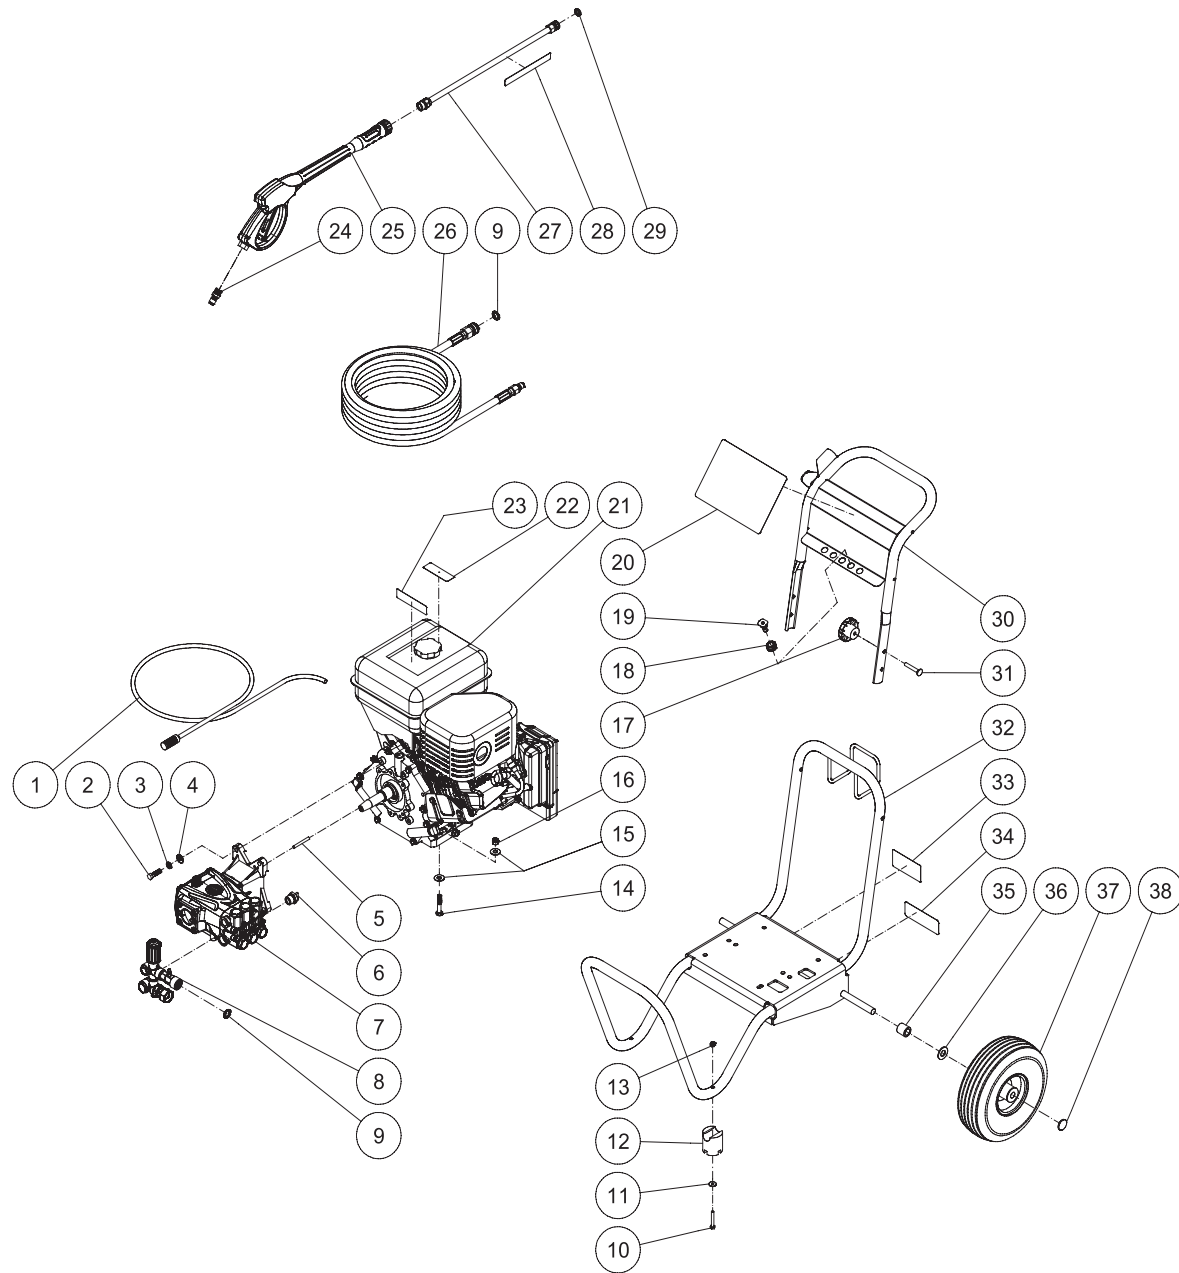


GP-4000-4MRB 062816 JTW

For parts Call 888-279-9274

GP-4000-4MRB 062816 JTW			
FRAME ASSEMBLY			
ITEM	DESCRIPTION	Mi-T-M #	QTY
1	DETERGENT HOSE	19-0233	1
2	BOLT	27-0118	4
3	LOCKWASHER	29-0008	4
4	WASHER	28-0022	4
5	KEY	43-0078	1
6	RELIEF VALVE	22-0005	1
7	PUMP	3-0391	1
8	UNLOADER	8-0632	1
9	O-RING	25-0123	2
10	BOLT	27-0019	2
11	WASHER	28-0021	2
12	ISOLATOR	14-0066	2
13	LOCKNUT	30-0155	2
14	BOLT	27-0121	4
15	WASHER	28-0023	8
16	LOCKNUT	30-0159	4
17	KNOB	7-0261	2
18	GROMMET	33-0001	5
19	NOZZLE 65° DETERGENT	18-0386	1
-	NOZZLE	18-0393	1
-	NOZZLE	18-0395	1
20	DECAL	N/A	1
21	ENGINE - SUBARU	1-0176	1
22	DECAL - RISK OF FIRE (SEE 71-1027)	N/A	1
23	DECAL - RISK OF BURNS (SEE 71-1027)	N/A	1
24	QUICK CONNECT	17-0074	1
25	GUN & WAND - 4000 PSI	16-0441	1
26	HOSE ASSEMBLY	15-0270	1
27	LANCE ASSEMBLY	16-0366	1
28	DECAL - RISK OF INJECTION (SEE 71-1027)	N/A	1
29	O-RING	25-0122	1
30	HANDLE ASSEMBLY	7-0159A20	1
31	BOLT	31-0051	2
32	FRAME ASSEMBLY	5-0149A20	1
33	DECAL- SILVER STICKER	N/A	1
34	DECAL - GRAINGER 800# LARGE (SEE 71-1027)	N/A	1
35	SPACER	62-0188	2
36	WASHER	28-0008	2
37	WHEEL	14-0130	2
38	CAP	33-0018	2
-	DECAL SET	71-1027	1

PUMP ASSEMBLY (3-0288)

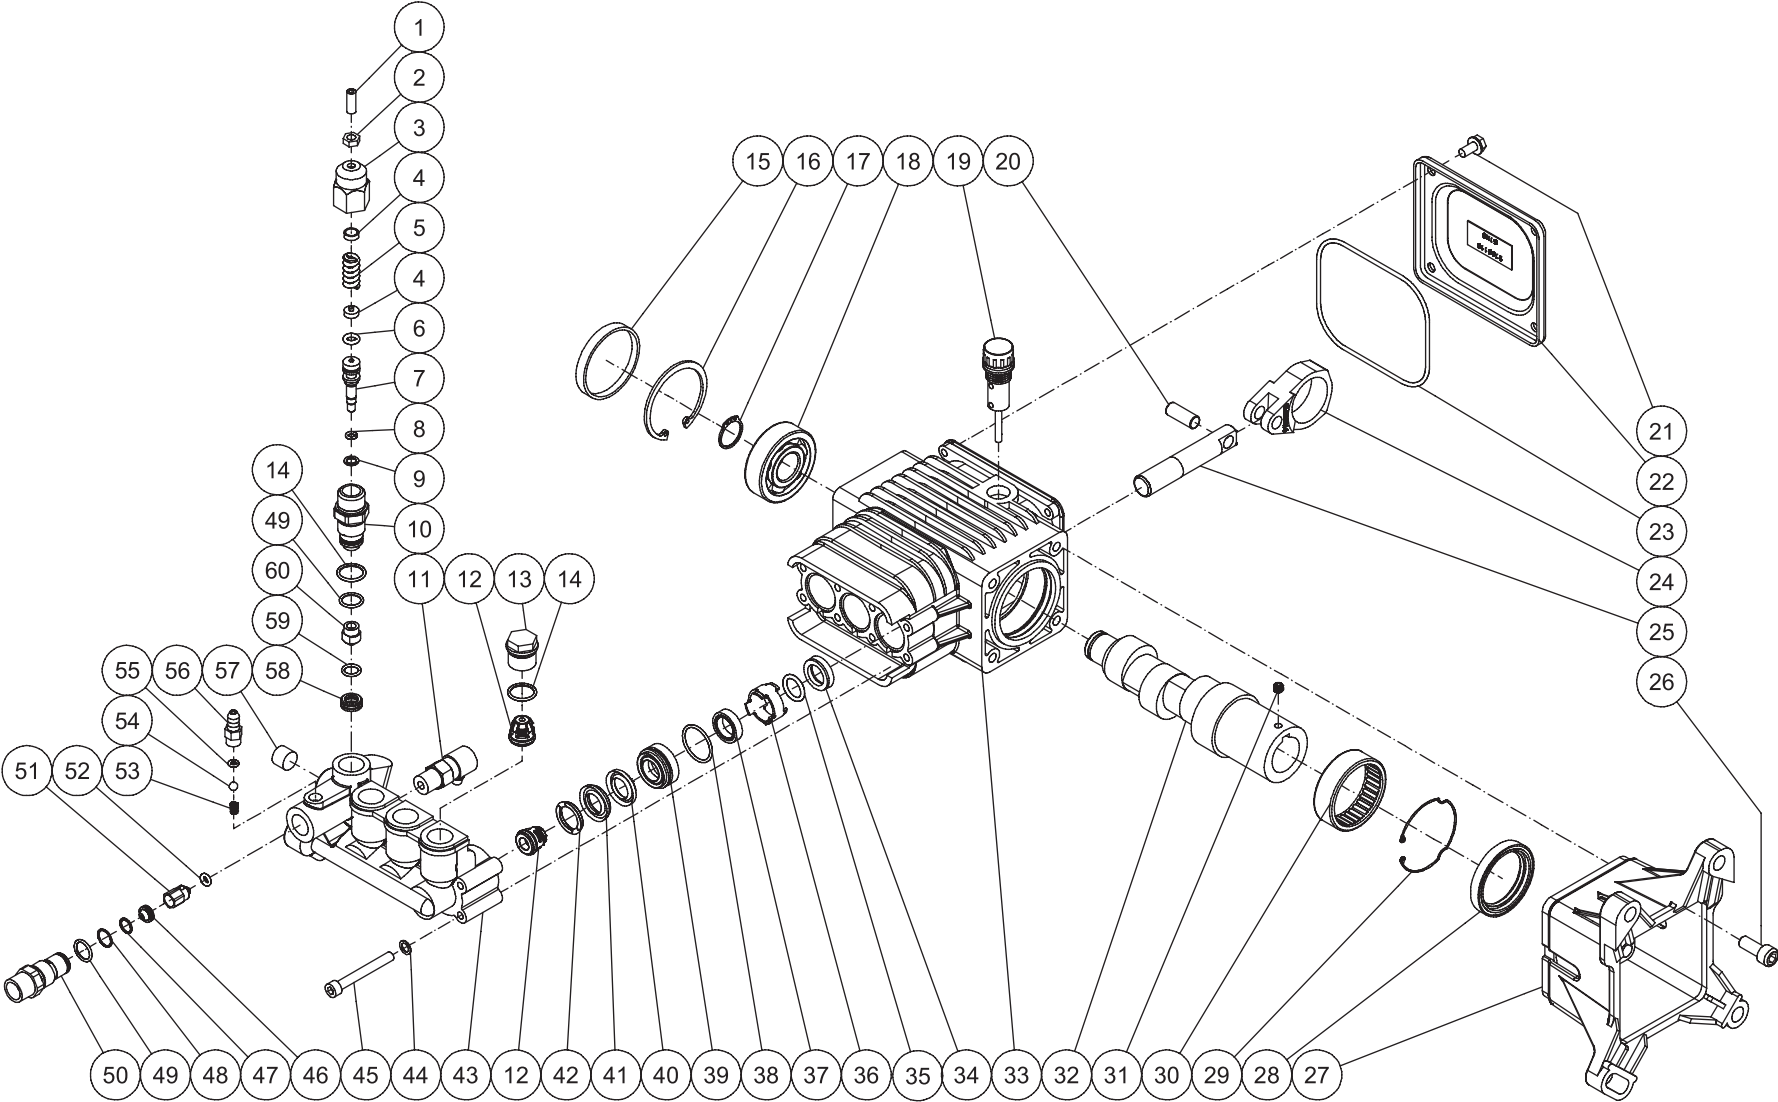


3-0288-101007-JJT

PUMP ASSEMBLY (3-0288)											
REF. #	DESCRIPTION	PART #	QTY.	REF. #	DESCRIPTION	PART #	QTY.	REF. #	DESCRIPTION	PART #	QTY.
1	Set Screw	27-9596	1	23	O-ring	25-0317	1	45	Screw	27-9598	8
2	Nut	30-6024	1	24	Connecting Rod	46-1252	3	46	Orifice	46-1250	1
3	Barrel	8-0551	1	25	Piston	46-1247	3	47	O-ring	25-0500	1
4	Button- Spring	8-0501	2	26	Screw	27-9597	4	48	O-ring	25-0596	1
5	Unloader Spring	49-0157	1	27	Flange	46-1244	1	49	O-ring	25-0407	2
6	O-ring	25-0526	1	28	Oil Seal	26-0192	1	50	Detergent Injector	46-1251	1
7	Unloader Piston	8-0565	1	29	Retaining Ring	46-0667	1	51	Non Return Valve	46-1249	1
8	O-ring	25-0163	1	30	Bearing	48-0059	1	52	O-ring	25-0406	1
9	Back-up Ring	25-0589	1	31	Screw	27-8886	1	53	Compression	8-0520	1
10	Piston Guide	8-0585	1	32	Crankshaft	46-1253	1	54	Ball	8-0521	1
11	Thermal Relief Valve	22-0408	1	33	Pump Housing	46-1243	1	55	O-ring	25-0371	1
12	Valve Assembly	-	6	34	Oil Seal	26-0193	3	56	Barb Hose	46-0869	1
13	Valve Cap	39-0362	3	35	O-ring	25-0305	3	57	Plug	39-0363	1
14	O-ring	25-0159	4	36	Spacer	46-1248	3	58	Unloader Seat	8-0586	1
15	Bearing cap	46-0725	1	37	Seal	46-0727	3	59	O-ring	25-0255	1
16	Snap ring	46-0676	1	38	O-ring	25-0399	3	60	Unloader- By Pass Jet	8-0528	1
17	Snap ring	46-0732	1	39	Packing Retainer	46-1108	3		Injector Repair (Inc. 1 each 53-55)	70-0293	
18	Ball Bearing	48-0063	1	40	Ring	-	3		Valves (Inc. 6 each 12)	70-0456	
19	Oil Dipstick	39-0090	1	41	Packing	-	3		Pistons (Inc. 3 each 25)	70-0457	
20	Piston Pin	46-0721	3	42	Support Ring	-	3		Water Seals (Inc. 3 each 35, 37, 38, 40, 41)	70-0458	
21	Screw	27-8874	4	43	Pump Head	46-1246	1		Oil Seals (Inc. 1, 1, 1, 3 each 15, 23, 28, 34)	70-0459	
22	Pump Rear Cover	46-1245	1	44	Lockwasher	29-0153	8		Support Ring (Inc. 3 each 42)	70-0460	
									Unloader (Inc. 1, 2, 1, 1, 1, 1 each 1-3, 4, 5-40, 14, 49, 57-59)	70-0461	

PUMP ASSEMBLY (3-0386)

TORQUE SPECIFICATIONS	
POSITION	FT-LBS
10	26
11	11.8
13	37
21	6
45	8
50	19
56	3
57	11.8
60	1.5

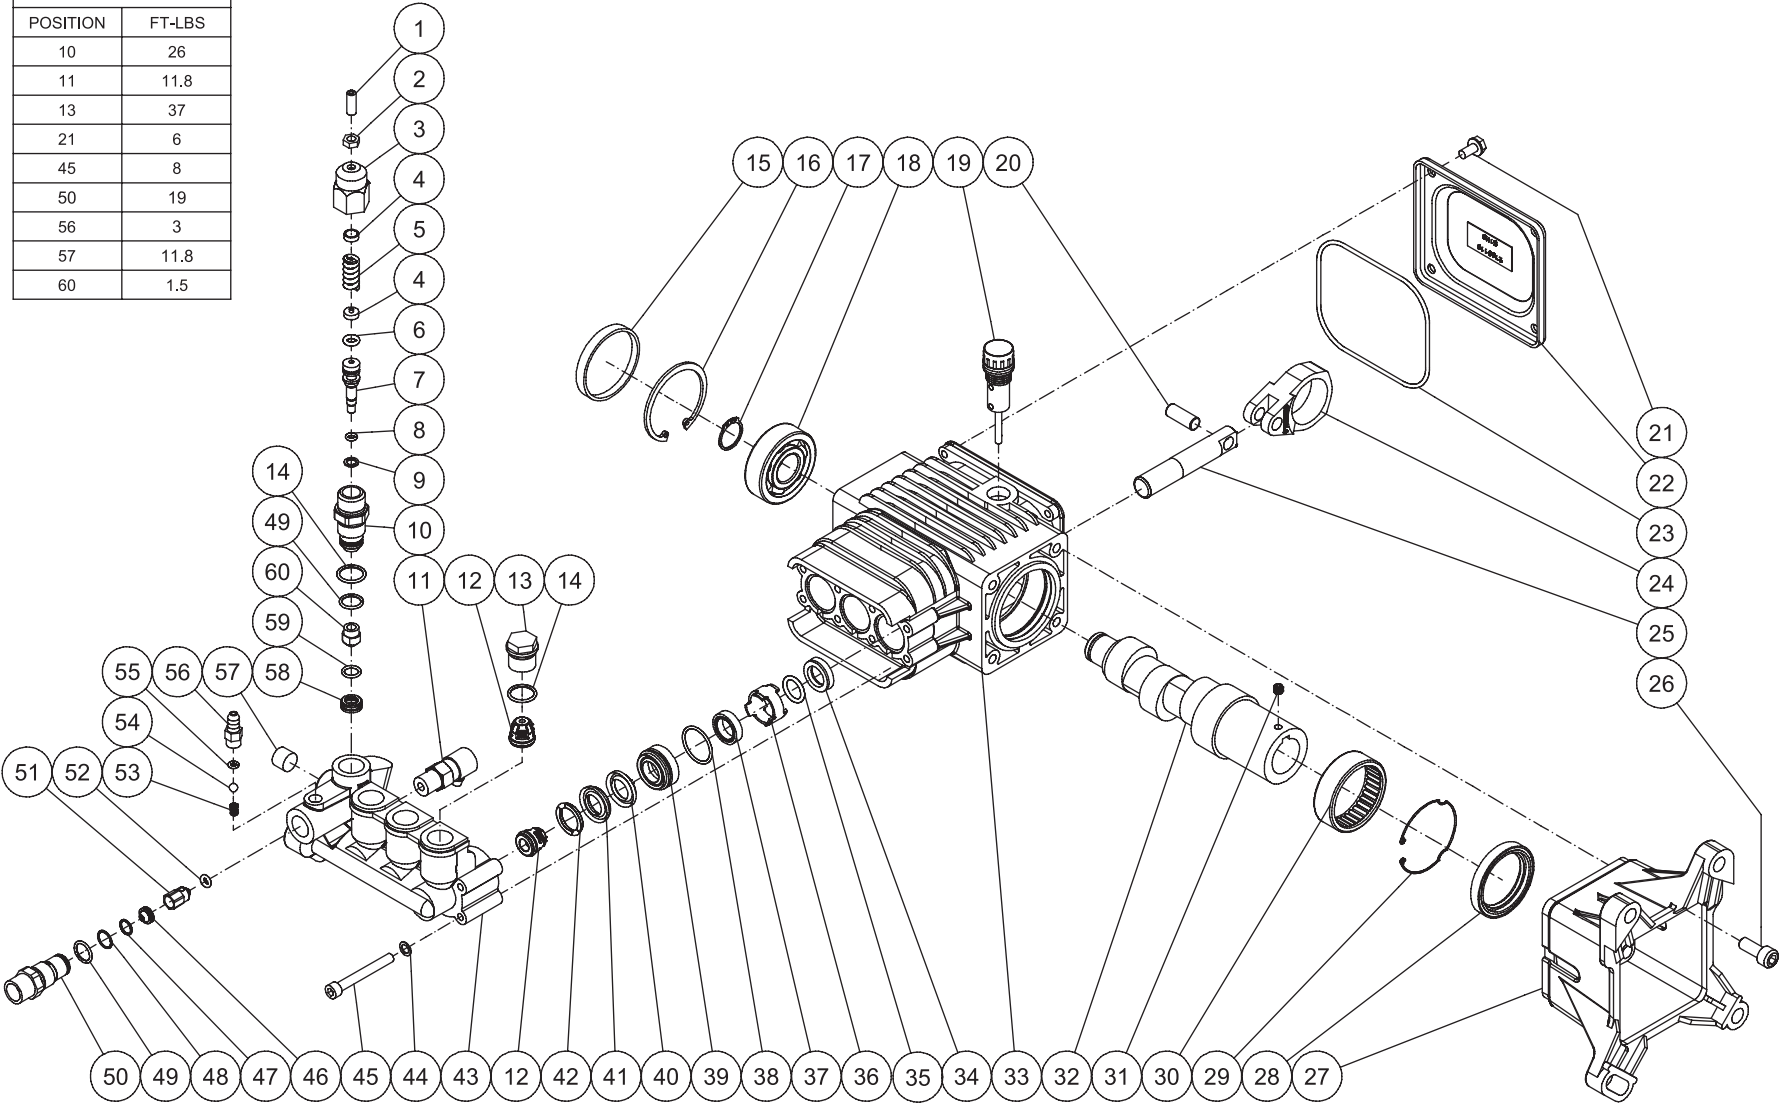


3-0386-070913-JPS

For parts Call 888-279-9274

3-0386 070913 JPS							
PUMP ASSEMBLY							
ITEM	DESCRIPTION	PART #	QTY	ITEM	DESCRIPTION	PART #	QTY
1	SET SCREW (SEE KIT 70-0461)	27-9596	1	31	SET SCREW	27-8886	1
2	NUT (SEE KIT 70-0461)	30-6024	1	32	CRANKSHAFT	46-1253	1
3	ADJUSTMENT BARREL - BRASS (SEE KIT 70-0461)	8-0551	1	33	PUMP HOUSING	46-1243	1
4	SPRING BUTTON (SEE KIT 70-0461)	8-0501	2	34	OIL SEAL (SEE KIT 70-0459)	26-0193	3
5	SPRING (SEE KIT 70-0461)	49-0157	1	35	O-RING (SEE KIT 70-0458)	25-0305	3
6	O-RING (SEE KIT 70-0461)	25-0526	1	36	SPACER	46-1248	3
7	PISTON (SEE KIT 70-0461)	8-0565	1	37	LOW PRESSURE SEAL (SEE KIT 70-0458)	46-0727	3
8	O-RING (SEE KIT 70-0461)	25-0163	1	38	O-RING (SEE KIT 70-0458)	25-0399	3
9	BACK-UP RING (SEE KIT 70-0461)	25-0589	1	39	RETAINER	46-1108	3
10	PISTON GUIDE (SEE KIT 70-0461)	8-0585	1	40	RING (SEE KIT 70-0458)	SEE KIT	3
11	HEAT DUMP VALVE	22-0408	1	41	PACKING (SEE KIT 70-0458)	SEE KIT	3
12	VALVE ASSEMBLY REBUILD (SEE KIT 70-0610)	SEE KIT	6	42	SUPPORT RING (SEE KIT 70-0460)	SEE KIT	1
13	VALVE CAP (SEE KIT 70-0610)	39-0364	3	43	PUMP HEAD	46-1246	1
14	O-RING (SEE KIT 70-0461)	25-0159	4	44	LOCKWASHER	29-0153	8
15	BEARING CAP (SEE KIT 70-0459)	46-0725	1	45	BOLT	27-9598	8
16	SNAP RING - INTERNAL	46-0676	1	46	ORIFICE	46-1250	1
17	SNAP RING	46-0732	1	47	O-RING	25-0500	1
18	BALL BEARING	48-0063	1	48	O-RING	25-0596	1
19	OIL DIPSTICK	39-0090	1	49	O-RING (SEE KIT 70-0461)	25-0407	2
20	PISTON PIN	46-0721	3	50	DETERGENT INJECTOR	46-1251	1
21	BOLT	27-8874	4	51	NON-RETURN VALVE	46-1249	1
22	PUMP REAR COVER	46-1245	1	52	O-RING	25-0406	1
23	O-RING (SEE KIT 70-0459)	25-0317	1	53	SPRING (SEE KIT 70-0293)	8-0520	1
24	CONNECTING ROD	46-1252	3	54	BALL (SEE KIT 70-0293)	8-0521	1
25	PISTON (SEE KIT 70-0457)	46-1247	3	55	O-RING (SEE KIT 70-0293)	25-0371	1
26	BOLT	27-9597	4	56	HOSE BARB	46-0869	1
27	PUMP FLANGE	46-1244	1	57	PLUG (SEE KIT 70-0461)	39-0363	1
28	OIL SEAL (SEE KIT 70-0459)	26-0192	1	58	UNLOADER SEAT (SEE KIT 70-0461)	8-0586	1
29	RETAINING RING	46-0667	1	59	O-RING (SEE KIT 70-0461)	25-0255	1
30	NEEDLE BEARING	48-0059	1	60	BY-PASS JET	8-0528	1

REPLACEMENT KITS				
MI-T-M	KIT DESCRIPTION	ITEMS	# OF ASSEMBLIES	# OF CYLINDERS
70-0293	KIT - INJECTOR REPAIR	53-55	1	1
70-0610	KIT - VALVES AND VALVE CAPS	12,13	6	3
70-0457	KIT - PISTONS	25	3	3
70-0458	KIT - WATER SEALS	35, 37, 38, 40, 41	3	3
70-0459	KIT - OIL SEALS	15, 23, 28, 34	1, 1, 1, 3	3
70-0460	KIT - SUPPORT RING	42	3	3
70-0461	KIT - UNLOADER	1-10, 14, 49, 57-59	1, 2, 1, 1, 1, 1	-

PUMP ASSEMBLY (3-0391)

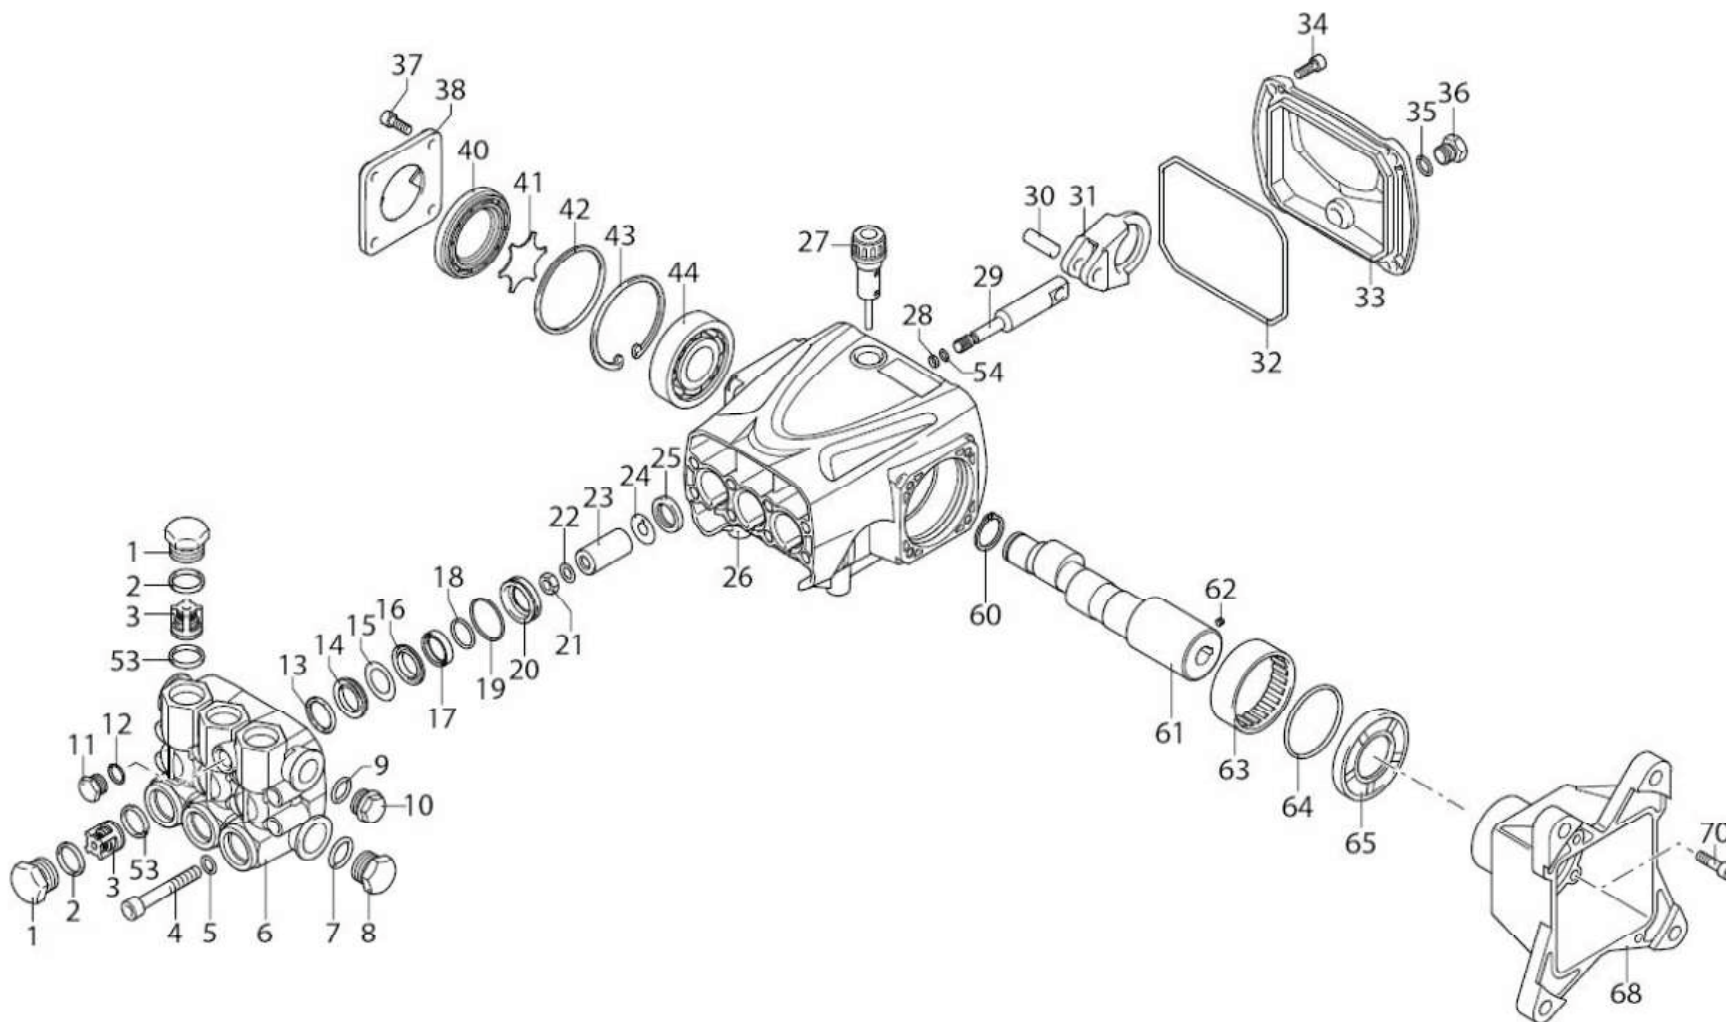

3-0391 042313-ALC


For parts Call 888-279-9274

3-0391 042313 ALC

PUMP ASSEMBLY							
ITEM	DESCRIPTION	MI-T-M #	QTY	ITEM	DESCRIPTION	MI-T-M #	QTY
1	VALVE CAP	39-0095	6	28	O-RING (SEE KIT 70-0592)	25-0371	3
2	O-RING (SEE KIT 70-0592)	SEE KIT	6	29	PISTON GUIDE	-	3
3	COMPLETE VALVE (SEE KIT 70-0179)	SEE KIT	6	30	CON-ROD PIN	-	3
4	SCREW	-	8	31	CON-ROD	-	3
5	WASHER	-	8	32	O-RING (SEE KIT 70-0592)	SEE KIT	1
6	HEAD	-	1	33	REAR COVER	46-1482	1
7	O-RING (SEE KIT 70-0592)	25-0372	1	34	SCREW	27-8888	4
8	PLUG	39-0202	1	35	O-RING (SEE KIT 70-0592)	25-0387	1
9	O-RING (SEE KIT 70-0592)	25-0510	1	36	PLUG	39-0096	1
10	PLUG	39-0203	1	37	SCREW	27-8888	4
11	PLUG	39-0096	1	38	CRANKCASE COVER	46-1453	1
12	O-RING	25-0387	1	40	OIL INDICATOR	46-1483	1
13	RING (SEE KIT 70-0460)	SEE KIT	3	41	OIL DISC	46-1451	1
14	GASKET (SEE KIT 70-0590)	SEE KIT	3	42	O-RING (SEE KIT 70-0592)	SEE KIT	1
15	RING (SEE KIT 70-0590)	SEE KIT	3	43	SNAP RING	46-1484	1
16	PISTON GUIDE (SEE KIT 70-0460)	SEE KIT	3	44	BALL BEARING	48-0094	1
17	GASKET (SEE KIT 70-0590)	SEE KIT	3	53	O-RING (SEE KIT 70-0179)	25-0386	6
18	RING (SEE KIT 70-0590)	SEE KIT	3	54	BACKUP RING	25-0395	3
19	O-RING (SEE KIT 70-0590 AND KIT 70-0592)	25-0149	3	60	CIRCLIP	46-1485	1
20	PISTON GUIDE (SEE KIT 70-0460)	SEE KIT	3	61	CRANKSHAFT - HOLLOW	-	1
21	NUT	30-6016	3	62	GRUB SCREW	27-8886	1
22	WASHER	26-0187	3	63	BALL BEARING	48-0095	1
23	PISTON	46-0723	3	64	O-RING	25-0657	1
24	SPACER	28-1027	3	65	SNAP RING (SEE KIT 70-0591)	46-1486	1
25	OIL SEAL (SEE KIT 70-0591)	26-0193	3	68	FLANGE	46-1487	1
26	PUMP BODY	-	1	70	SCREW	27-8812	4
27	OIL DIPSTICK	39-0090	1				

REPLACEMENT KITS				
MI-T-M KIT#	DESCRIPTION	ITEMS	# OF ASSEMBLIES	# OF CYLINDERS
70-0179	KIT - VALVES	3, 53	6, 6	3
70-0590	KIT - WATER SEALS	14, 15, 17, 18, 19	3, 3, 3, 3, 3	3
70-0591	KIT - OIL SEALS	25, 65	3, 1	3
70-0592	KIT - O-RINGS	2, 7, 9, 19, 28 32, 35, 42	6, 1, 1, 3, 3, 1, 1, 1	3
70-0460	KIT - SUPPORT RINGS	13	3	3
70-0619	KIT - PISTON GUIDE	16, 20	3	3

UNLOADER ASSEMBLY (8-0632)

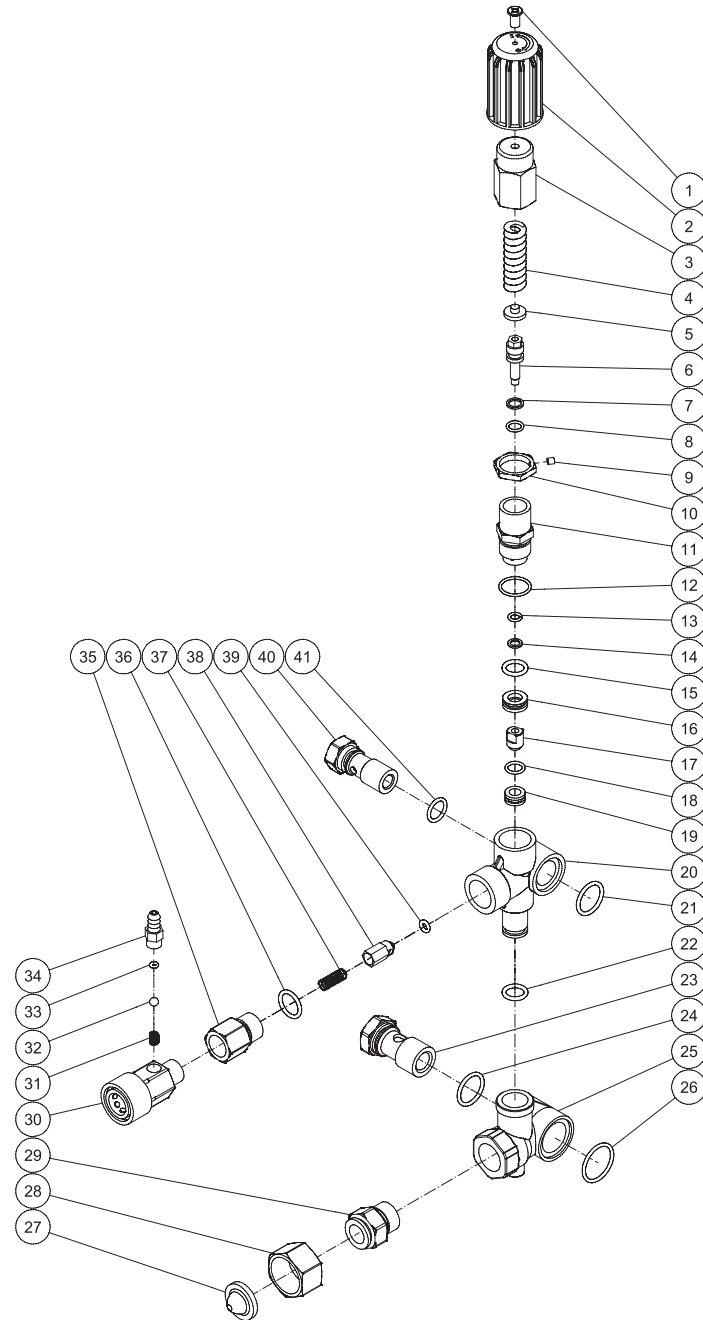

8-0632 102714 JDK

UNLOADER ASSEMBLY

ITEM	DESCRIPTION	PART #	QTY		ITEM	DESCRIPTION	PART #	QTY
1	SCREW (SEE KIT 70-0647)	27-2772	1		22	O-RING	25-0684	1
2	KNOB (SEE KIT 70-0647)	7-0250	1		23	INLET BANJO BOLT	8-0595	1
3	KNOB (SEE KIT 70-0647)	SEE KIT	1		24	O-RING	25-0602	1
4	SPRING (SEE KIT 70-0647)	SEE KIT	1		25	BY PASS HOUSING	N/A	1
5	SPRING SEAT (SEE KIT 70-0647)	SEE KIT	1		26	O-RING	25-0654	1
6	VALVE ROD (SEE KIT 70-0647)	SEE KIT	1		27	FILTER (SEE KIT 23-0095)	19-0001	1
7	SUPPORT RING (SEE KIT 70-0647)	SEE KIT	1		28	SWIVEL NUT (SEE KIT 23-0095)	SEE KIT	1
8	O-RING (SEE KIT 70-0647)	25-0651	1		29	INLET CONNECTOR (SEE KIT 23-0095)	SEE KIT	1
9	SET SCREW (SEE KIT 70-0647)	8-0479	1		30	QC ADAPTER (SEE KIT 70-0499)	SEE KIT	1
10	JAM NUT (SEE KIT 70-0647)	SEE KIT	1		31	SPRING (SEE KIT 70-0293 AND 70-0499)	SEE KIT	1
11	UNLOADER VALVE BODY (SEE KIT 70-0647)	SEE KIT	1		32	BALL (SEE KIT 70-0293 AND 70-0499)	SEE KIT	1
12	O-RING (SEE KIT 70-0647)	25-0652	1		33	O-RING (SEE KIT 70-0293 AND 70-0499)	SEE KIT	1
13	O-RING (SEE KIT 70-0647)	25-0163	1		34	HOSE BARB (SEE KIT 70-0499)	46-0869	1
14	SUPPORT RING (SEE KIT 70-0647)	SEE KIT	1		35	OUTLET CONNECTOR	46-1389	1
15	O-RING (SEE KIT 70-0647)	25-0655	1		36	O-RING	25-0386	1
16	BY PASS JET UNLOADER (SEE KIT 70-0647)	SEE KIT	1		37	SPRING (SEE KIT 70-0500)	SEE KIT	1
17	BULLET (SEE KIT 70-0647)	SEE KIT	1		38	CHECKING VALVE (SEE KIT 70-0500)	SEE KIT	1
18	O-RING (SEE KIT 70-0647)	25-0656	1		39	O-RING (SEE KIT 70-0500)	25-0653	1
19	VALVE SEAT (SEE KIT 70-0647)	SEE KIT	1		40	OUTLET BANJO BOLT	8-0594	1
20	VALVE HOUSING	N/A	1		41	O-RING	25-0169	1
21	O-RING	25-0664	1					

REPLACEMENT KITS

KIT #	DESCRIPTION	ITEMS	# OF ASSEMBLIES
23-0095	KIT - GARDEN HOSE INLET ASSY	27-29	1
70-0293	KIT - INJECTOR REPAIR	31-33	1
70-0499	KIT - OUTLET QC W/CHEM INJ	30-34	1
70-0500	KIT - NON-RETURN VALVE	37-39	1
70-0647	KIT - UNLOADER REBUILD	1-19	1

For parts Call 888-279-9274

Manufactured by Mi-T-M
50 MI-T-M Drive, Peosta IA 52068
563-556-7484/ Fax 563-556-1235